


GEOSYSTEM® LabSuite 5

Software for Atterberg Limits, Grain Size Distribution Tests,
Soil Classification and
Moisture-Density Tests

User's Guide

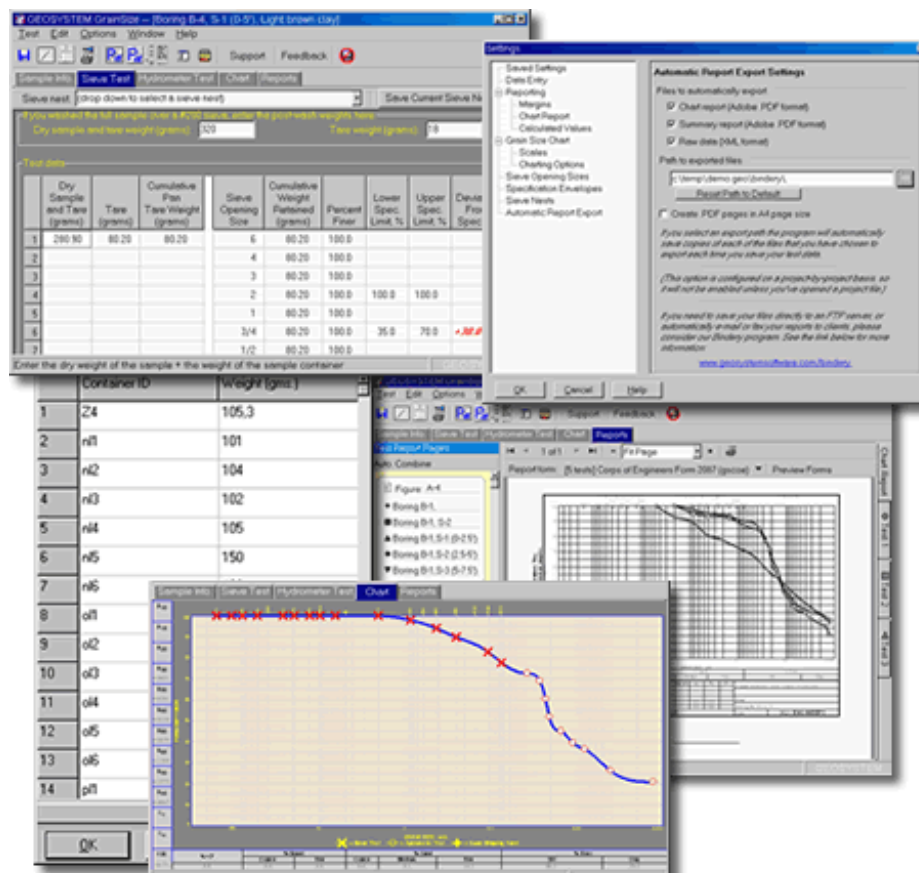

Copyright 2005-2025 Geosystem Software, Inc.

PO Box 238

Windsor, CO 80550

<https://www.geosystemsoftware.com>

Information in this document is subject to change without notice and does not represent a commitment on the part of Geosystem Software, Inc. The software described in this document is furnished under a license agreement, and the software may be used or copied only in accordance with the terms of that agreement. The licensee may make copies of the software for backup purposes only. No part of this manual may be reproduced in any form for purposes other than the licensee's personal use without the written consent of Geosystem Software, Inc.

Copyright Geosystem Software, Inc. 2005-2025. All rights reserved.

Published in the United States of America.

Geosystem® is a registered trademark of VES, Inc.

Windows® is a registered trademark of Microsoft Corporation

Last revised 28-April-2025.

Contents

1	Introduction	1
1.1	Program Features	1
1.2	Contacting Technical Support	2
2	Configuration	3
2.1	Data Entry Options	3
2.2	Reporting Options	5
2.2.1	Printout Margins	5
2.2.2	General Chart Report Options	6
2.2.3	Automatically Exporting Reports	8
2.3	Grain Size Distribution Configuration	10
2.3.1	Grain Size Chart Scales	10
2.3.2	Grain Size Charting Options	12
2.3.3	Grain Size Chart Reports	14
2.3.4	Grain Size Test Calculation Options	16
2.3.5	Sieve Opening Size Measurements	18
2.3.6	Grain Size Specification Envelopes	19
2.3.7	Sieve Nests	22
2.4	Atterberg Limits Configuration	24
2.4.1	Plasticity and Blows vs. Moisture Chart Settings	24
2.4.2	Atterberg Limits Chart Reports	25
2.4.3	Atterberg Limits Calculation Options	26
2.5	Soil Classifications Configuration	28
2.5.1	USDA Chart Report Settings	28
2.6	Moisture-Density Test Configuration	30
2.6.1	Moisture-Density Report Settings	30
2.6.2	Moisture-Density Calculation Options	33
2.6.3	Moisture-Density Test Specifications	34
2.7	Saving Sets of Configuration Settings	39
2.8	The Container List	40
3	Entering Grain Size Test Data	43
3.1	Sample and Test Information	43
3.1.1	Sample Info. Selection Lists	46
3.2	Sieve Test Data Entry	49
3.2.1	General Sieve Test Settings	49

3.2.2	Full Sample Wash	51
3.2.3	D6913 Sample Masses	52
3.2.4	Tests Without a Sample Split	52
3.2.5	Tests With One or More Sample Splits	53
3.2.6	D422 Sample Masses	55
3.2.7	Entering the Sieve Sizes and Weight Retained Masses	55
3.2.8	Entering Sieve Sizes	57
3.2.9	Entering Sieve Weights	58
3.2.10	Pan Mass	59
3.2.11	Saving the Current Test as a Sieve Nest	59
3.3	Hydrometer Test Data Entry	61
3.3.1	Test Background Information	61
3.3.2	Hydrometer Equipment IDs	63
3.3.3	D7928 Hydrometer Test Data Entry	63
3.3.4	D422/T 88 Hydrometer Test Data Entry	66
4	Viewing and Modifying the Particle Size Curve	69
4.1	Selecting the .45-Power Curve Maximum Density Line	70
4.2	The Chart Calculator	70
5	Entering Atterberg Limits Test Data	71
5.1	Atterberg Limits Sample Information	71
5.2	Atterberg Limits Test Entry	72
5.2.1	Liquid Limit Test Data Entry	72
5.2.2	Plastic Limit Test Data Entry	74
5.2.3	Natural Moisture Test Data Entry	74
6	Soil Classifications	75
6.1	USCS Classification	75
6.1.1	Classifying Soil with + 3 Inch Material	77
6.2	AASHTO Classification	78
6.3	Burmister Classification	79
6.4	USDA Classification	81
6.5	AS 1726 Classification	82
7	Entering Moisture-Density Test Data	83
7.1	Moisture-Density Sample Information	83
7.2	Moisture-Density Test Entry	83
7.2.1	Test Specifics	84
7.2.2	Sieve Percentages	85

7.2.3	Oversize Correction	85
7.2.4	Proctor Test Data	87
7.2.5	California Test Method 216 Test Data	89
8	Viewing and Modifying the Moisture-Density Curve	91
8.1	Toolbar Controls	92
8.2	Reshaping the Curve	93
8.3	Changing How the Curve is Displayed	95
8.4	Creating Curves for One-Point Tests	97
9	Quick Tests	99
10	Reporting Your Data	101
10.1	Chart Reports	102
10.1.1	Selecting a Scale for Moisture-Density Reports	104
10.1.2	Printing Your Reports	105
10.1.3	Selecting a Chart Report Format	106
10.2	Data Summary Reports	107
10.3	Exporting Reports To Files	108
10.4	Exporting XML Files	110
10.5	Listing the Results From Multiple Tests	111
10.5.1	Grain Size Test Results Calculated by the Program	111
10.5.2	Atterberg Limits Test Results Calculated by the Program	116
10.5.3	Soil Classification Results Calculated by the Program	116
10.5.4	Moisture-Density Results Calculated by the Program	117
10.6	Technical Documentation	117
	Index	119

1. Introduction

LabSuite reduces and reports data from moisture-density (i.e., "Proctor" or "compaction" tests), Atterberg limits and sieve and hydrometer grain-size distribution tests and classifies the soil based upon USCS, AASHTO, Burmister, USDA and Australian Standard (AS) 1726 standards.

- ⇒ The software's moisture-density test calculations are compliant with ASTM D558, D698, and D1557, AASHTO T 99 and T 180, and California Test method 216 (CT-216). Oversize (rock) correction of test results can be performed according to ASTM D4718, AASHTO T 224 and CT-216.
- ⇒ Sieve and hydrometer test calculations are compliant with the retired ASTM D422 standard, and current ASTM C136 and C117, D1140, D6913 and D7928 standards, along with their AASHTO equivalents (AASHTO T 27 and T 11), and Australian standards 1141.11, 1141.12 and 1289.3.6.1.
- ⇒ Atterberg limits test calculations are compliant with ASTM D4318, AASHTO T 89, and Australian Standards AS 1289.3.1.1, 1289.3.2.1 and 1289.3.3.1.
- ⇒ Supported soil classification methods are: ASTM D2487 (USCS), AASHTO M 145 (ASTM D3282), USDA, Burmister and Australian Standard AS 1726.

1.1 Program Features

This section provides a list of some of **LabSuite**'s features that might go unnoticed without closely reading the program's manual.

- Test data can be printed in a **variety of different formats**, including one that lists all of your **raw test readings** (handy for archiving your test data in paper or .PDF form).
- Grain size data may be entered as either raw testing data or as final calculated test results (i.e., sieve size and percent passing). The latter option allows you to chart pre-calculated grain size tests without having access to the original testing data.
- Database of balance, thermometer, oven, hydrometer, and sedimentation cylinders, along with sedimentation cylinder areas and hydrometer dimensions.
- Several different **sieve test methods** (i.e., weighing each sieve and its retained material, or weighing a cumulative pan) are supported.
- Sieves may be entered as numbered (e.g., #10), inch-sized (e.g., 1") and/or millimeter-sized (e.g., 75mm.).
- **Automatic determination** of hydrometer temperature correction values from a single correction reading eliminates ASTM D422 Section 7.2 multiple correction values requirement.
- Both 151H and 152H hydrometers are supported.

- **Interactive curve shaping facility** can be used to remove poor data points from the grain size distribution curve.
- Fineness modulus, percentage diameters (e.g., D_{10} , D_{30} and D_{60}), coefficient of uniformity (C_u) and curvature (C_c), and fractional components (e.g., the percentage of cobbles, gravel, sand, silt and clay in the material tested) are calculated.
- Optionally, Folk & Ward's graphical statistics parameters (mean, median, sorting, skewness, and kurtosis) **can be included** on grain size **summary reports**.
- Both the standard multi-point (up to 6 test points) liquid limit test and the ASTM D4318 Method B (one-point) test **are supported**.
- Up to 4 plastic limit moistures may be entered.
- **A second oven-dried liquid limit test** may be entered if an organics check is necessary: ASTM D2487, otherwise known as the USCS classification method, requires a second liquid limit test after oven-drying if the sample is suspected to contain significant amounts of organics.
- Calculated liquid and plastic limits results are also automatically used to classify the soil using ASTM, AASHTO, USDA, Burmister and Australian Standard (AS 1726) methods.
- Atterberg limits calculations include support for one-point liquid limit tests and calculation of plasticity and liquidity indices.
- **Optional automatic averaging of two moisture content tests per compaction point**.
- **Compaction test specification editor** supports adding new, modified or updated compaction test specifications to the program's list of supported test types.
- **Automatic adjustment of compaction test results to account for oversize material (i.e., "rock correction") via ASTM D4718, AASHTO T 224 or CT-216**.
- Limited support for **creating a compaction curve from a single moisture-density test point**.
- If the GEOSYSTEM Boring Log Drafting program is licensed, calculated results such as the percent passing the #200 sieve, Atterberg limits and soil classification results are **available for inclusion on boring log reports**.

1.2 Contacting Technical Support

If you have any questions on installing or operating our software, please feel free to contact GEOSYSTEM technical support. We do not charge for support, though we can only help with software that we are currently selling (we cannot answer questions about older versions our programs). You can contact us through our support page at <https://www.geosystemsoftware.com/support.htm>.

- ⇒ If you think that the program's calculated results "don't look quite right", please give us something more to work with: do the calculations by hand and fax your calculations to +1 970/223-8788 prior to submitting a support question.

2. Configuration

LabSuite features a number of configurable options for data entry, test results calculation and report generation. Before typing in your first test set you should make sure that the package is correctly configured for your specific testing and reporting standards. To do this, select Options > Program Setup.

⇒ Note that these settings affect every test entered into the currently-open project file.

2.1 Data Entry Options

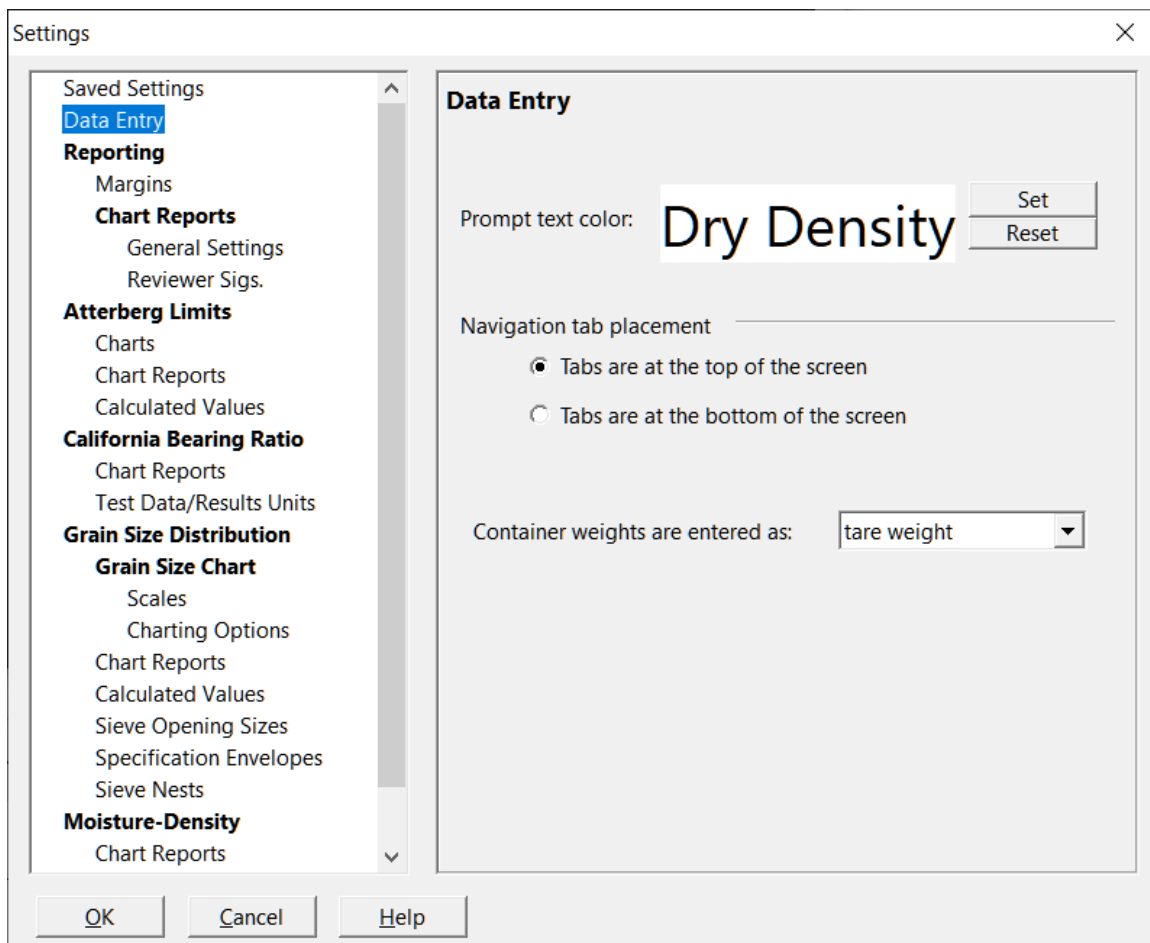


Figure 2.1: Data Entry Settings

 
Selecting Options > Program Setup then clicking on **Data Entry** in the navigation list at the dialog's left side provides you with the following options:

Prompt text color

Sets the color of all data entry prompts. Click **Set** to select a color or **Reset** to restore the program's default color.

Navigation tab placement

Navigation tabs allow you to change from one window to another (for example, between the test data entry windows and the report preview window). The tabs look like this:



Navigation tabs may be placed at either the top or the bottom of the screen by selecting one of the **Navigation tab placement** options.

Container weights are entered as

LabSuite can be set up to keep a list of container IDs and associated weights – when entering moisture content data, instead of entering the container weight you can enter the container ID and the program will look up the associated weight. To do this, select **Tare ID** in this box then enter your list of container IDs and weights into the program's container database ([Options](#) > [Container List](#)).

2.2 Reporting Options

The following subsections cover settings that affect the program's printed reports.

2.2.1 Printout Margins

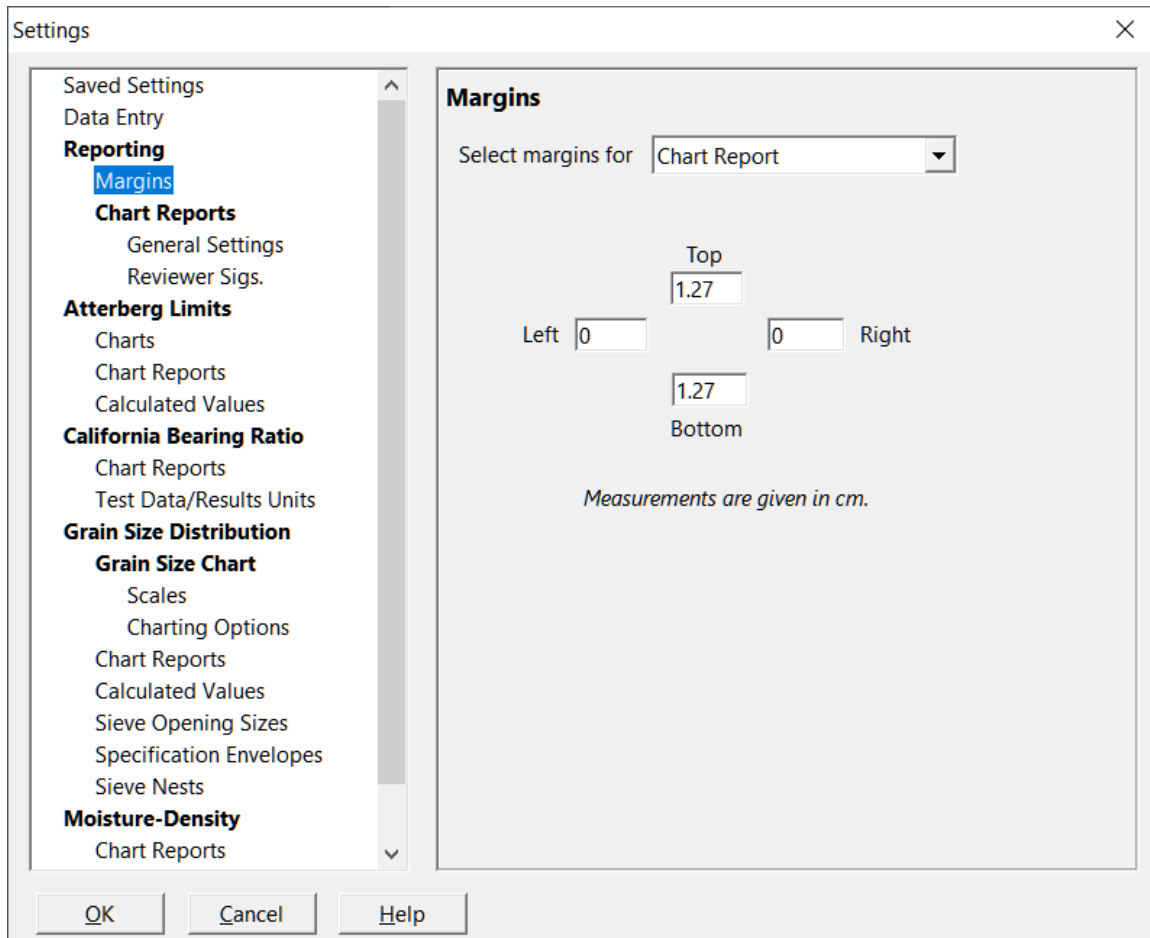


Figure 2.2: Setting the Report Margins

The **Margins** selection on the Setup dialog (Options > Program Setup then click on **Margins** in the left-hand navigation list) allows you to select the whitespace used at the top, bottom, left and right sides of **chart and summary** reports. Separate settings are provided for printed and .PDF reports.

- ⇒ The measurement units (inches or cms.) used for specifying margins are determined by the Regional settings in the Windows Control Panel.

2.2.2 General Chart Report Options

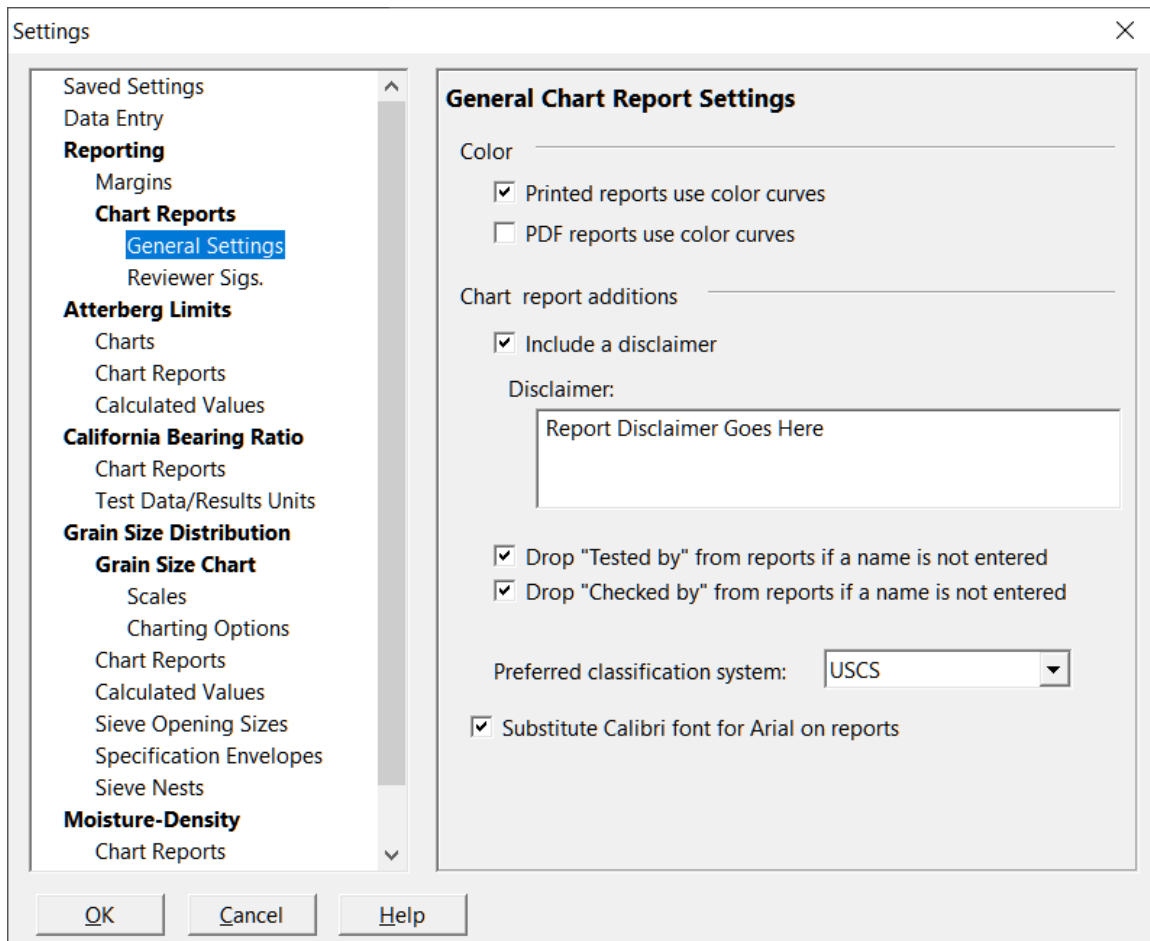


Figure 2.3: General Chart Report Settings

The basic appearance of *all* **chart reports** generated by **LabSuite** may be customized by selecting **Options** > **Program Setup** and then clicking on **General Settings** underneath **Chart Reports** in the navigation list at the dialog's left side.

- ⇒ Additional settings that cover grain size distribution chart reports may be found [here](#).
- ⇒ Additional settings that cover Atterberg limits chart reports may be found [here](#).
- ⇒ Additional settings that cover the chart reports created for USDA soil classifications may be found [here](#).
- ⇒ Additional settings that control the appearance of moisture-density reports may be found [here](#).

Printed reports use color curves

If selected, curves plotted on chart reports are shown in a program-selected color.

PDF reports use color curves

Determines whether chart reports exported as .PDF files show curves in program-selected colors.

Include a disclaimer

If selected, a disclaimer is printed down the left margin of chart reports. The disclaimer is listed in the Disclaimer field directly below the checkbox, and may be modified after checking the **Include a disclaimer** box.

⇒ The figure shown on page 44 includes a sample of how the disclaimer is printed on a chart report.

Drop "Tested by" from reports if a name is not entered

The **Sample Info.** window includes a data entry field titled **Tested by**. This field, along with the **Drop "Tested by" from reports if a name is not entered** checkbox on the program's setup dialog affects the appearance of chart reports:

- If you don't fill in the **Tested by** data entry field and **Drop "Tested by" from reports if a name is not entered** is *not checked*, "Tested by" will appear below chart report's bottom margin, along with an area for a signature.
- If you don't fill in the **Tested by** data entry field and **Drop "Tested by" from reports if a name is not entered** is *checked*, "Tested by" will NOT appear below chart report's bottom margin.
- If the **Tested by** data entry field is filled in: "Tested by" will appear below chart report's bottom margin, followed by the name entered into the **Tested by** data entry field.

Drop "Checked by" from reports if a name is not entered

Is similar to **Drop tested by...** Leaving this box unchecked and leaving the **Checked by** data entry field blank provides an area below chart reports' bottom border for the report's reviewer to sign the page.

When Tested by/Checked by is entered

If you enter a technician and/or report reviewer name ("Tested by" and "Checked by", respectively), you can also have the program reserve signature space above where the names are printed on chart reports by selecting either **Signature area for "Tested by" and "Checked by"** or **Signature area only for "Checked by"**. (The former option would be used in the rarer case where the technician is to sign reports in addition to the report reviewer.)

Preferred classification system

Several report formats include room for only a single soil classification; for these forms, the **Preferred classification system** box selects which classification will be included on the report.

Substitute Calibri font for Arial on reports

Chart and summary reports can use either Calibri or Arial fonts for their static (i.e., not user-entered or calculated) text. Checking this box causes the reports to use Calibri; un-checking it switches to Arial.

2.2.3 Automatically Exporting Reports

LabSuite can automatically export versions of its test reports into a selected hard disk subdirectory. This feature can be used to maintain an archival copy of a project's reports (which is useful because it's always better to store your data in as many formats as is possible if you want to be able to review your results many years down the road), or, if your webserver's directories are available from your local network, you can make your test reports web-accessible by configuring **LabSuite** to automatically store copies of each test report in a webserver directory.

If you select Options > Program Setup then click on **Automatic Report Export** in the left-hand navigation panel, you'll be presented with the following dialog and options:

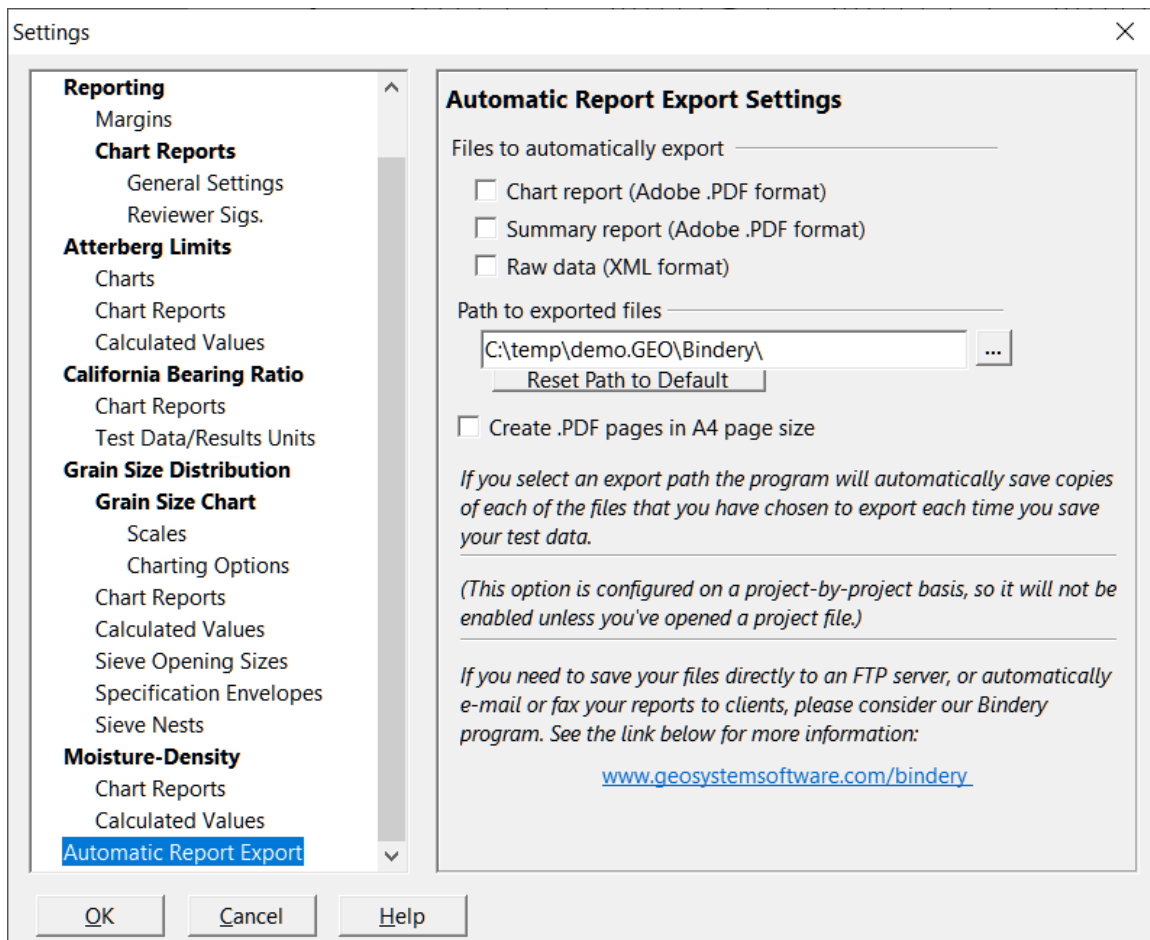


Figure 2.4: Automatic Report Export Dialog

Chart report (Adobe .PDF format)

If this option is checked, **LabSuite** will automatically export the test's **chart report** in a format readable by Adobe Acrobat Reader.

Summary report (Adobe .PDF format)

If this option is selected, **LabSuite** automatically exports the test's summary report into an Adobe Acrobat .PDF file.

Raw data (XML format)

If this option is selected, **LabSuite** exports an **XML file** listing the test's data and calculated results.

Path to exported files

This is the file path to where you want to store your exported files. If the path does not exist, the program will offer to create it for you when you click on the dialog's **OK** button.

Reset Path to Default

This sets the **Path to exported files** to be a directory called "Bindery" stored *inside* your project's data file folder, which is useful if you want to export your reports as an archival copy of your data.

Create .PDF pages in A4 page size

If this box is *not* checked, **LabSuite** will export your reports as letter-sized (8.5" x 11.0") pages; if the box *is* checked, the .PDF reports will be created as A4-sized (210mm. x 297mm.) pages.

- ⇒ **LabSuite** starts the test report exporting process when you select Save and Exit or when you click on the program's close button. This may delay the program for a few seconds while exiting.
- ⇒ **LabSuite** does not have a soil classifications summary report. It does have a chart report featuring the USDA textural triangle, but because this report is not a necessity for most organizations, it's not enabled by default (even if the **Chart report (Adobe .PDF format)** option is selected). Click on **USDA Chart Reports** underneath **Soil Classifications** in the left-hand navigation panel to enable **USDA chart report exporting**.

2.3 Grain Size Distribution Configuration

The following sections cover configuration options that affect the entry and reporting of grain size distribution test data.

2.3.1 Grain Size Chart Scales

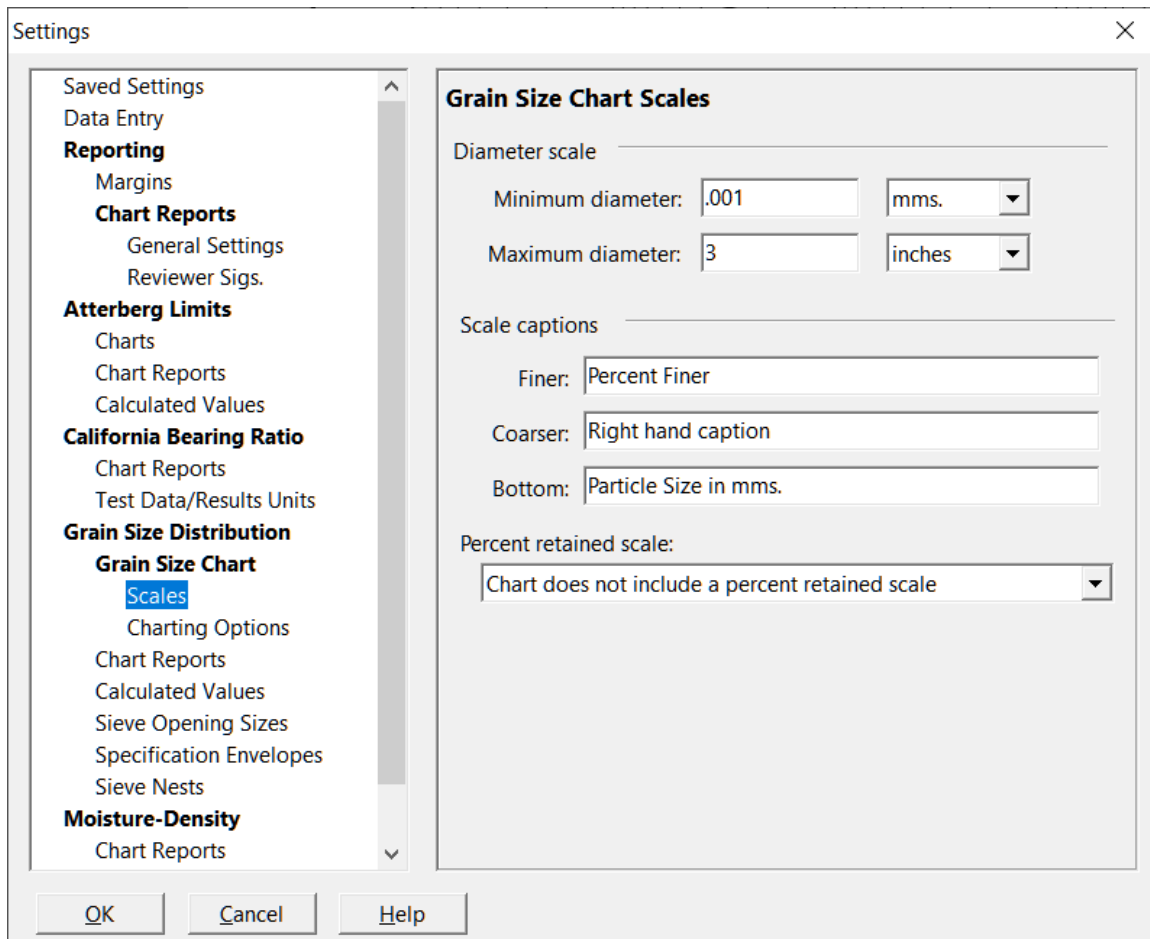


Figure 2.5: Chart Scale Settings

Selecting **Options** > **Program Setup** and clicking on **Scales** underneath **Grain Size Chart** in the navigation list at the dialog's left side allows you to modify the scales shown on the sides of grain size distribution charts:

Minimum diameter

Maximum diameter

These fields select the extent of the particle diameter scale on the grain size distribution chart. Values may be specified in either inches or millimeters; use the units selection box just to the right of the minimum and maximum diameter fields to specify the units that you're using.

You don't need to use the same units for the maximum diameter and minimum diameter values; for example, most soil sample chart scales extend from 6" to 0.001mms., so the minimum diameter would be **0.001** with the units selection being set to **mms.**; the maximum diameter would be specified as **6** with the maximum diameter units selection set to **inches**.

Scale captions

Use the **Left**, **Right** and **Bottom** scale captions fields to change the captions printed next the scales printed on a grain size distribution chart. Note that the **Right** scale caption is not printed unless the **Percent retained scale** option is set to **Left is percent finer, right is percent retained**.

Percent retained scale

This selection offers the following options for the grain size distribution chart:

- **Chart does not include a percent retained scale:** The left-hand chart scale is of percent finer and no scale is shown on the chart right side
- **Percent retained on chart left side:** The left-hand chart scale is of percent retained, while no scale is shown on the right side of the chart
- **Left is finer, right is percent retained:** The chart includes a percent finer scale on the left side and a percent retained scale on the right side

⇒ Note that this option has no effect on log(size) vs. probability and Phi (Wentworth) **chart styles**.

2.3.2 Grain Size Charting Options

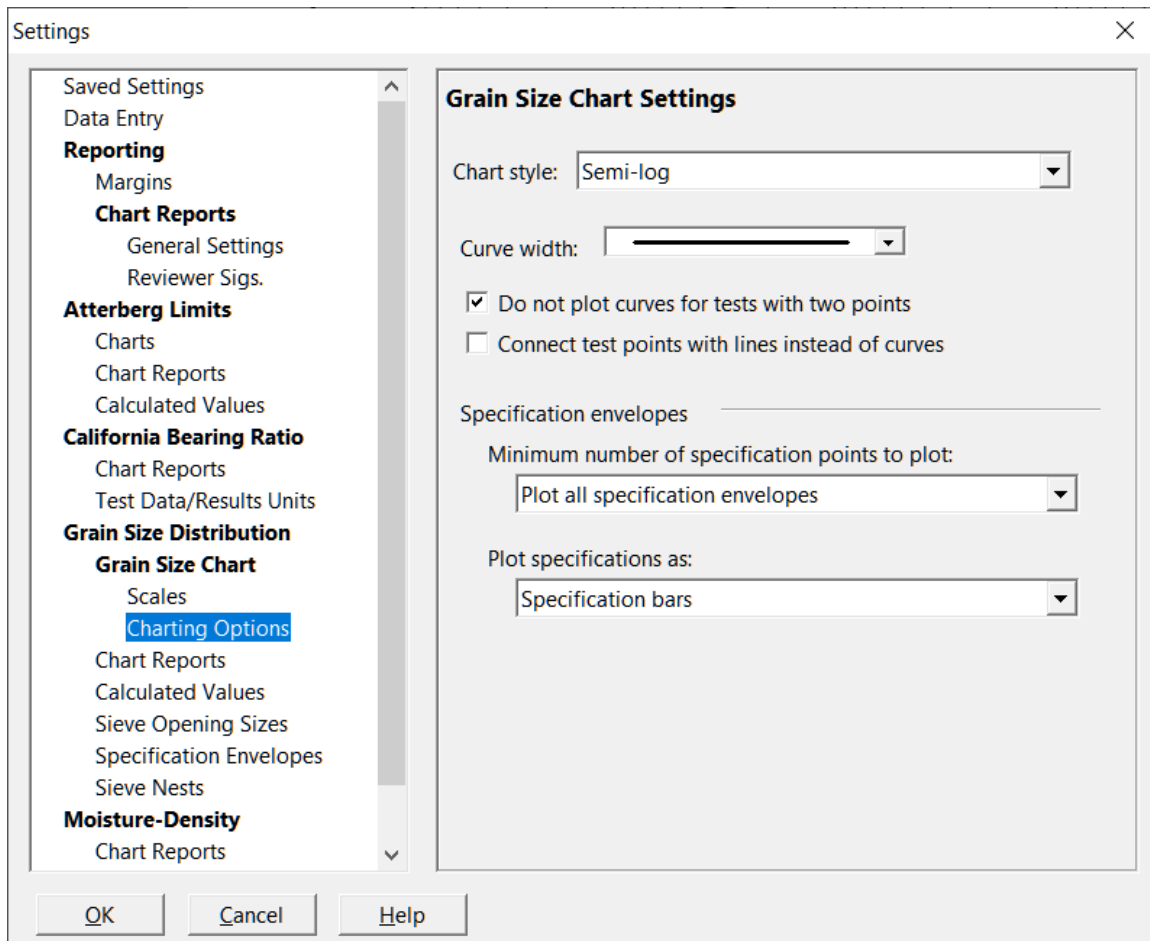


Figure 2.6: Charting Options

If you select Options > Program Setup then click on **Charting Options** underneath **Grain Size Chart** in the navigation list at the dialog's left side you can change several options that affect how grain size distribution charts are drawn:

Chart style

LabSuite supports five types of grain size distribution charts:

- **Semi-log:** Plots percent retained or passing vs. $\log_{10}$ (grain diameter). This is the customary chart used for reporting soil grain size distribution test results.
- **Log(size) vs. probability:** Plots $\log_{10}$ (grain diameter) vs. probability (i.e., the standard normal distribution). Log(size) vs. probability charts are normally used for plotting filter media test results.
- **Linear:** Plots percent retained or passing vs. grain diameter. This chart style is sometimes used when plotting filter media test results.
- **Diameter^{0.45}:** Plots percent retained or passing vs. grain diameter raised to the 0.45 power. Typically used for plotting pavement aggregate size distributions.
- **Phi (Wentworth):** Plots percent passing or retained vs. $-\log_2$ (grain size diameter). Wentworth-classified materials are typically plotted using this chart style.

Curve width

Determines the width of the grain size distribution curve.

Do not plot curves for tests with two points

If selected, tests performed with only two sieves (or tests performed with a single sieve and a #200 wash) are plotted using only graph markers (e.g., circles, triangles, squares, etc.) without a line connecting the markers. Avoids having a straight line connect the two test points.

Connect test points with lines instead of curves

If selected, connects points on the grain size distribution chart with straight lines instead of spline curves.

Minimum number of specification points to plot

When given a material specification with a small number of control points such as:


#40 sieve: 80%–100% finer

#200 sieve: 0%–5% finer

it isn't usually desirable to plot the resulting **specification envelope** on the grain size distribution chart because the small number of control points do not make for a usable "envelope". Use the **Minimum number...** box to select the minimum number of control points that **LabSuite** will use to plot specification envelopes. Specification sets with less control points will still be used to show whether the test is in or out of spec.; they just won't be shown graphically on the grain size distribution chart.

Plot specifications as

Material specifications can be plotted as either *specification bars*, or as an *envelope*:

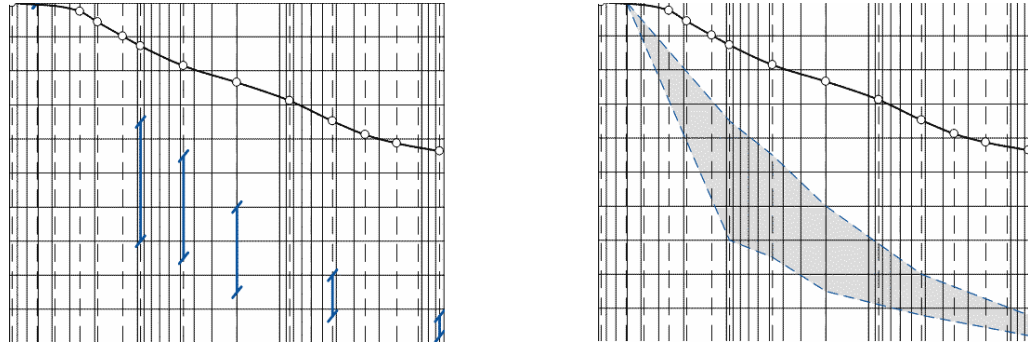

Specification Plotted with Bars (Left) and Envelope (Right)

2.3.3 Grain Size Chart Reports

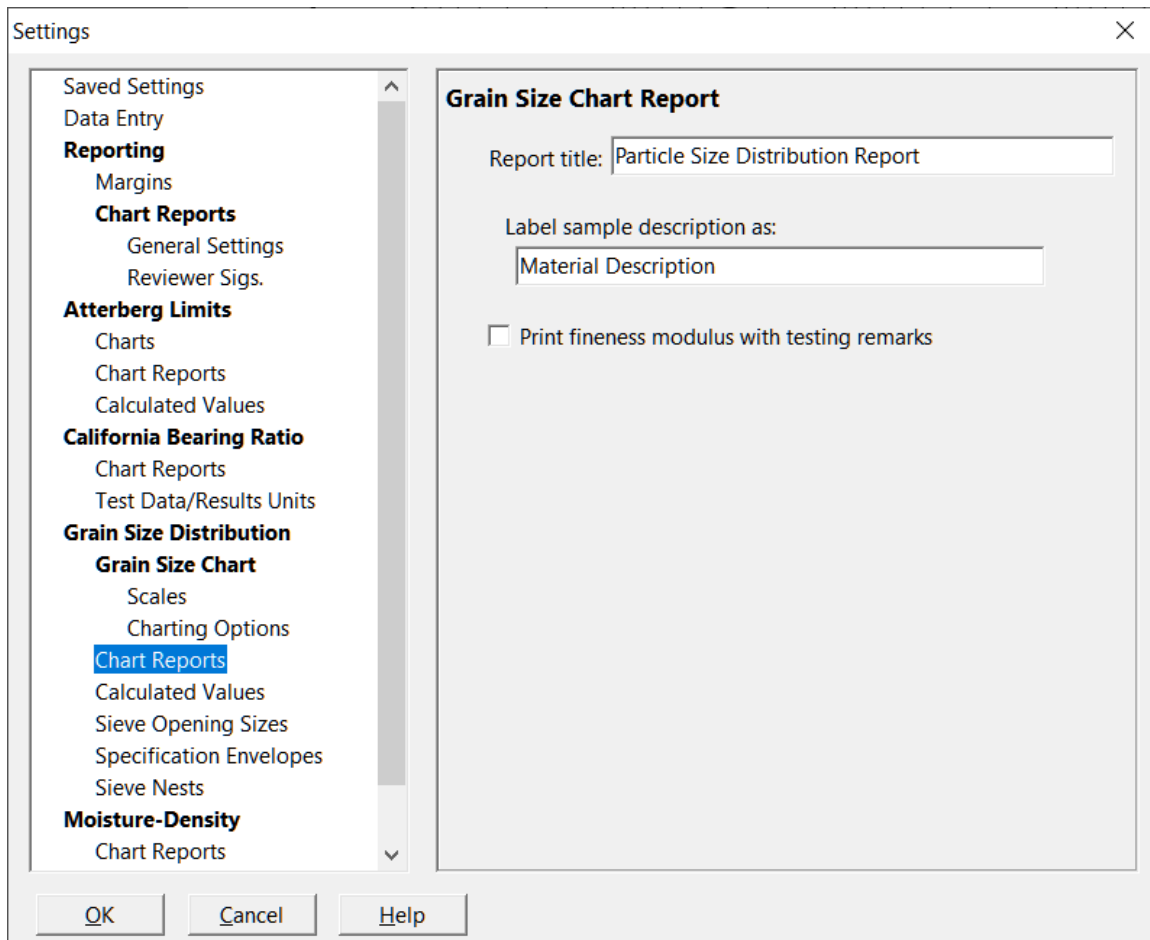


Figure 2.7: Chart Report Settings

Particle size distribution **chart reports** may be customized by selecting Options > Program Setup and then clicking on **Chart Reports** underneath **Grain Size** in the navigation list at the dialog's left side:

Report title

The chart report title is a single line of text shown at the top of the report. Typically the title reads **Particle Size Distribution Report** or **Grain Size Distribution Report – ASTM D422**.

Label sample description as

Chart reports usually include an area for reporting a description of the sample (e.g., **Brown sandy clay**) with a title such as **Soil Description**. If the material being tested is aggregate, the sample description may be labeled **Type of Aggregate** (or alternatively, a more generic title such as **Material Description**) by entering the new label into the **Label sample description as** field.

Print fineness modulus with testing remarks

This option appends the calculated fineness modulus (see ASTM C136 or AASHTO T 27) to the end of the testing remarks on test reports. Note that the user is responsible for selecting a sieve nest that corresponds to AASHTO's specification – **LabSuite** adds the total percentage of material retained on any of the following sieves: 6", 3" 1.5", 3/4", 3/8", #4, #8, #16, #30, #50 and #100 and divides the sum by 100. If sieves are missing from the list, the resulting fineness modulus will not be compliant with C 136.

2.3.4 Grain Size Test Calculation Options

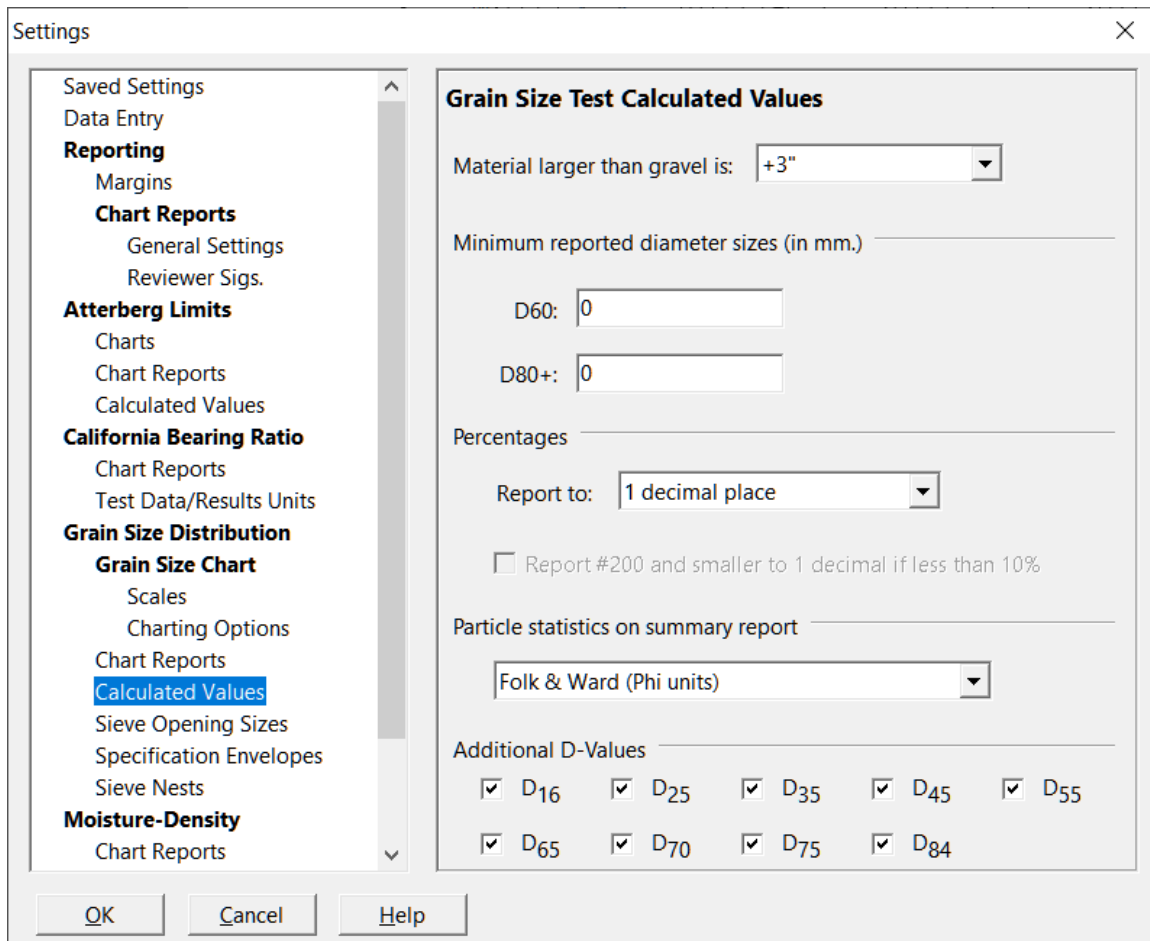


Figure 2.8: Particle Size Calculation Settings

The **Calculated Values** selection on the Settings dialog (Options > Program Setup then click on **Calculated Values** underneath **Grain Size Distribution** in the navigation list at the dialog's left side) includes several options that affect how grain size distribution calculated results are reported:

Material larger than gravel is

When reporting the percent of material larger than gravel, the program can label the percentage as either +3", +75mm, or *Cobbles*. (The difference is purely semantical and does not result in any change in calculated results.)

Minimum reported diameter sizes (in mm.): D60

Specifies the smallest calculated diameter that will be reported for D₆₀. If the diameter calculated as D₆₀ is smaller than the specified minimum reported diameter size, the software will not report a D₆₀ value.

Minimum reported diameter sizes (in mm.): D80 +

Specifies the smallest calculated diameter that will be reported for D₈₀, D₈₅, D₉₀ and D₉₅. If the calculated diameter is smaller than the specified minimum reported diameter size, the value will not be reported.

Percentages: Report to

Determines the number of decimals to which percent finer/percent coarser (i.e., percent passing/percent retained) values will be reported.

Report #200 and smaller to 1 decimal if less than 10 %

ASTM C136 and AASHTO T 27 specifies that material percentages are to be reported to the nearest whole number, with the exception that if the percentage passing the #200 sieve is less than 10 % it should be reported to the nearest 0.1 %. If the **Report #200 to 1 decimal place if less than 10%** option is selected, the program reports the #200 percentage, *and smaller sieves and all hydrometer results*, to 1 decimal place if the percentage is less than 10. This option is unavailable if *all* percentages are reported to 1 place (see above).

Particle statistics on summary reports

When **Folk & Ward (Phi units>** is selected *LabSuite* will include the mean, median, sorting, skewness, and kurtosis graphical statistics parameters on grain size *data summary reports*.

Additional D-Values

These are a set of boxes that, when checked, causes additional D-values (the particle diameter at which a given percentage of the tested material is smaller than; e.g., D₁₆ is the particle diameter at which only 16 % of the tested material is smaller) to be reported on the test's *summary report*. *Note that this setting does not affect particle size chart reports.*

2.3.5 Sieve Opening Size Measurements

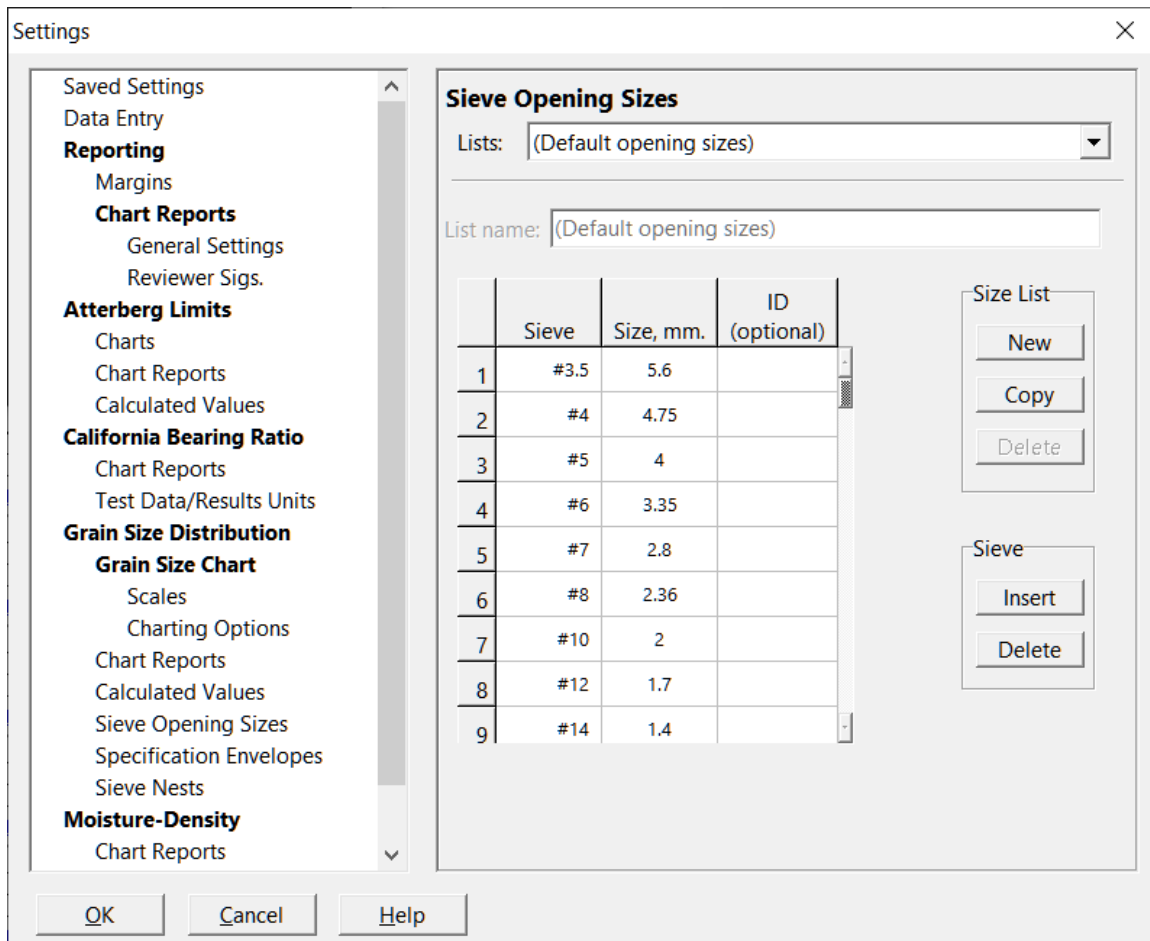


Figure 2.9: Specifying Sieve Opening Sizes

If you certify your sieves' opening sizes with a statistical measurement process you can use each sieve's statistically measured opening size instead of the program's default opening sizes. For example, **LabSuite** normally uses an opening size of 2 mm. for a #10 sieve: if your sieve's openings averages 1.994 mm. with an optical measurement device, you'll want to report the diameter of particles passing that sieve as 1.994 mm. instead of 2 mm.

To use the as-measured opening sizes for the sieves used for a particular sieve test, you'll need to enter that test's list of sieves into **LabSuite's** Sieve Opening Sizes database:

1. Select **Options** > **Program Setup** then click on **Sieve Opening Sizes** in the left-hand navigation panel.
2. If you've already entered a similar opening sizes list, you can drop down the **Lists** box, select your opening sizes list from the box and click on the **Copy** button.
Alternatively, if you do not already have a similar opening sizes list:
Click on the **New** button in the **Size List** box on the right side of the dialog.

3. Next, at the **Name** prompt, enter a unique name for your opening sizes list (i.e., not used for one of the opening sizes lists already stored in the program's database).
 4. After you've entered your list name, pressing Enter brings you to the opening sizes grid: For each sieve you've measured, enter the sieve's designated size (e.g., **#4** or **1.5in.** or **2mm.**) into the **Sieve** column then enter the measured sieve size in the **Size, mm.** column. The right-most column, labeled **ID**, can be used to enter a sieve tracking number or label. **LabSuite** doesn't use IDs: they're included as a convenience so that you can correlate a sieve to its measurement papers.
- ⇒ You can list your sieves in any order (i.e., by increasing or decreasing opening size).
 - ⇒ Because an opening sizes list contains the measurements for a specific stack of sieves, you'll end up entering some sieves' measurements in more than one opening sizes list as they're used in different sieve stacks.
 - ⇒ For reference, **LabSuite** includes a list of its default opening sizes that you can view by selecting **(Default opening sizes)** from the list selection box. This list may not be edited.

2.3.6 Grain Size Specification Envelopes

Specification envelopes provide upper and lower percentage boundaries for various particle sizes. For example, your client may specify that a given delivered material consist 100 % of particles smaller than 3/8", and contain a total of 10 % to 20 % particles smaller than the #200 sieve.

During data entry and on printed reports, **LabSuite** uses specification envelopes to flag tests that do not pass your or your client's requirements. For example, some **chart reports** such as GSPASS include a table listing the percent finer for each sieve size, along with the specification (if any) for that opening size and whether the test passes the specification.

Specification envelopes can be shown visually on particle distribution charts, as you can see in the following sample:

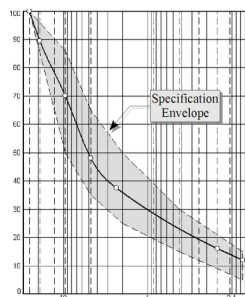


Figure 2.10: Grain Size Distribution Chart with Specification Envelope

- ⇒ You can stop the program from drawing the gray specification envelope on the chart report using the **Minimum number of specification points to plot** selection in the **Charting Options** page of the program's Settings dialog.

- ⇒ Specification envelopes are always optional; you don't have to provide a material specification in order to enter a grain size test.

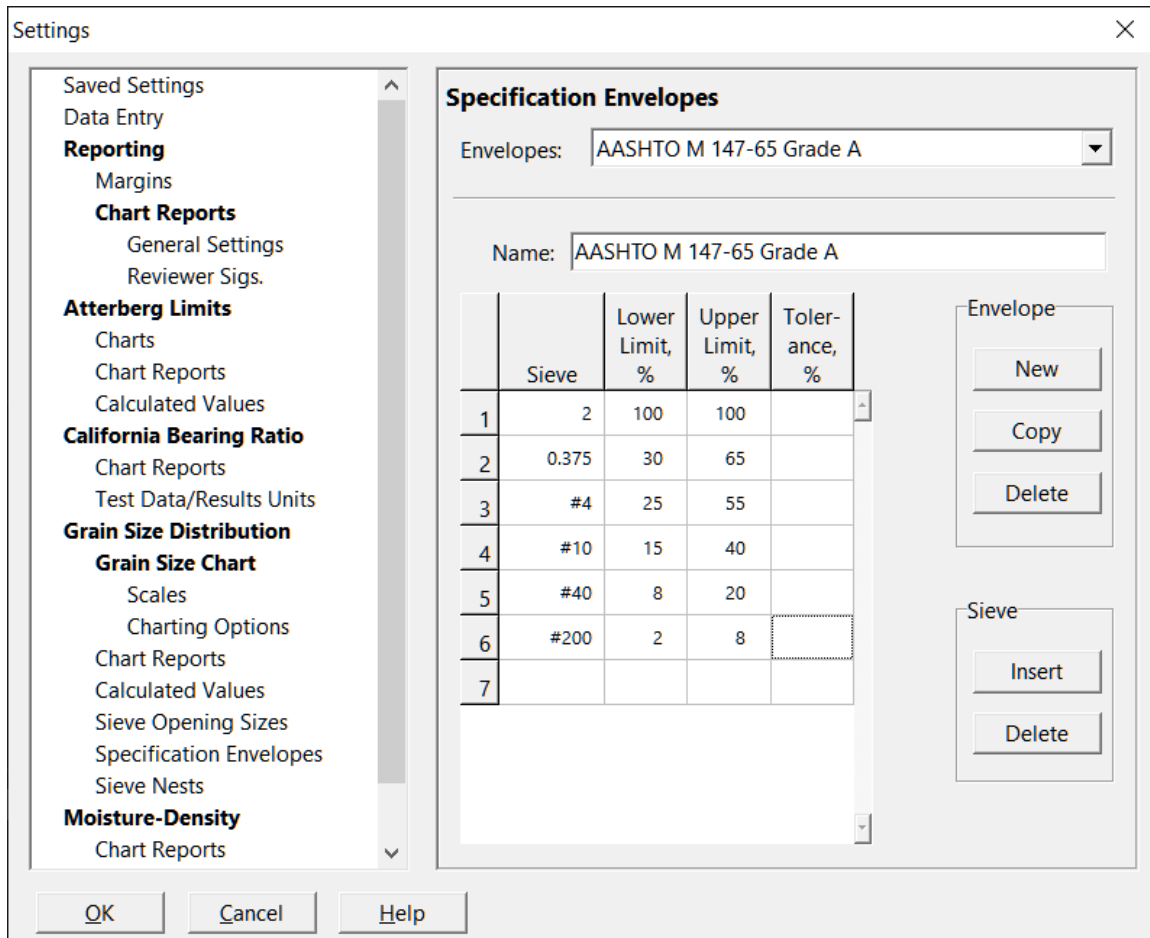


Figure 2.11: Specification Envelopes Dialog

LabSuite is shipped with a database of standard specification envelopes taken from ASTM, AASHTO, Superpave and ISSA (International Slurry Surfacing Association) standards. You can also add your own envelopes to the database:

1. Select **Options** > **Program Setup**, then click on **Specification Envelopes** in the left-hand navigation panel.
 2. Click on the **New** button in the **Envelope** box on the right side of the dialog.
 3. At the **Name** prompt, enter a unique name for your envelope (i.e., not used for one of the specification envelopes already stored in the program's database).
 4. After you've entered your envelope name, pressing Enter brings you to the specifications grid. For each sieve in your specification, enter the sieve's opening size and the specification's lower and upper boundaries.
- ⇒ Opening sizes should be entered as follows: use a "#" sign for numbered sieves (e.g., #40); measured sieve openings should normally be entered in dimension units

appropriate for the project file on which you're working (i.e., if you've configured the project to use SI units, enter your sieve opening sizes in millimeters; for a US unit project, enter your sieve opening sizes in inches). If you need to enter a millimeter size into an envelope used for a US unit project, add **MM.** to the end of the measurement (e.g., **2MM.**).

- ⇒ Lower and upper limits should be entered as percentages (e.g., **30** is 30 percent).
- ⇒ You can also enter a tolerance for each opening size so that any tested sieve falling *outside* the specification's lower and upper limit boundaries by less than the specified tolerance will be considered by the program to be passing the specification. Alternatively, you can leave the **Tolerance** column empty for any of the sieves in your envelope and the program will consider the tolerance to be 0 %.
- ⇒ Material specifications are normally given in terms of a lower and upper limit (e.g., *the material should have between 10 % and 40 % finer than the #40 sieve*); however, an alternative specification is given in terms of: *X % of the material should be larger than the Y sieve size* (e.g., *50 % of the material is to be larger than the #200 sieve*). To enter a specification such as this, enter the required percentage as the specification's lower limit and enter **100** as the specification's upper limit.
- ⇒ If you're given a specification such as: *X % of the material should be smaller than the Y sieve size*, enter X-.01 as your upper limit (e.g., if your specification says *50 % of the material should be smaller than the #200 sieve*, enter **49.99** as your upper limit), and enter **0** as your lower limit. **There is one exception to this rule:** if the largest sieves in your specification require 100 % smaller (e.g., *100 % of the material must be smaller than the 3" sieve*), enter **100** as both the lower and upper limits for the sieve.

If two or more computers will be used to access your test data you'll want to make sure that the specification envelopes you use are available on every computer that accesses the test data. You can do this by making sure that the package's *shareable config. files directory* is set up to point to the same network directory on each computer. To do this, start your GEOSYSTEM package, then, from the program's opening screen, select **Options** > **Setup General Options**, click on **Files** in the following dialog's left-hand navigation dialog, then fill in the right-hand **Report, data entry form and shareable config files path** box with a network directory. Do this procedure on every computer, *starting with the computer you've been using to enter specification sets*. (The software will copy those sets from their current location to the new network share point only if the share folder hasn't been accessed by another computer first.)

2.3.7 Sieve Nests

LabSuite can be configured to save a list of the sieves used in a particular sieve nest. When you start a new test, the program can automatically fill in the test's sieve sizes from the list of sieves in your saved sieve nest. The program's Sieve Nest editor allows you to enter and delete these lists.

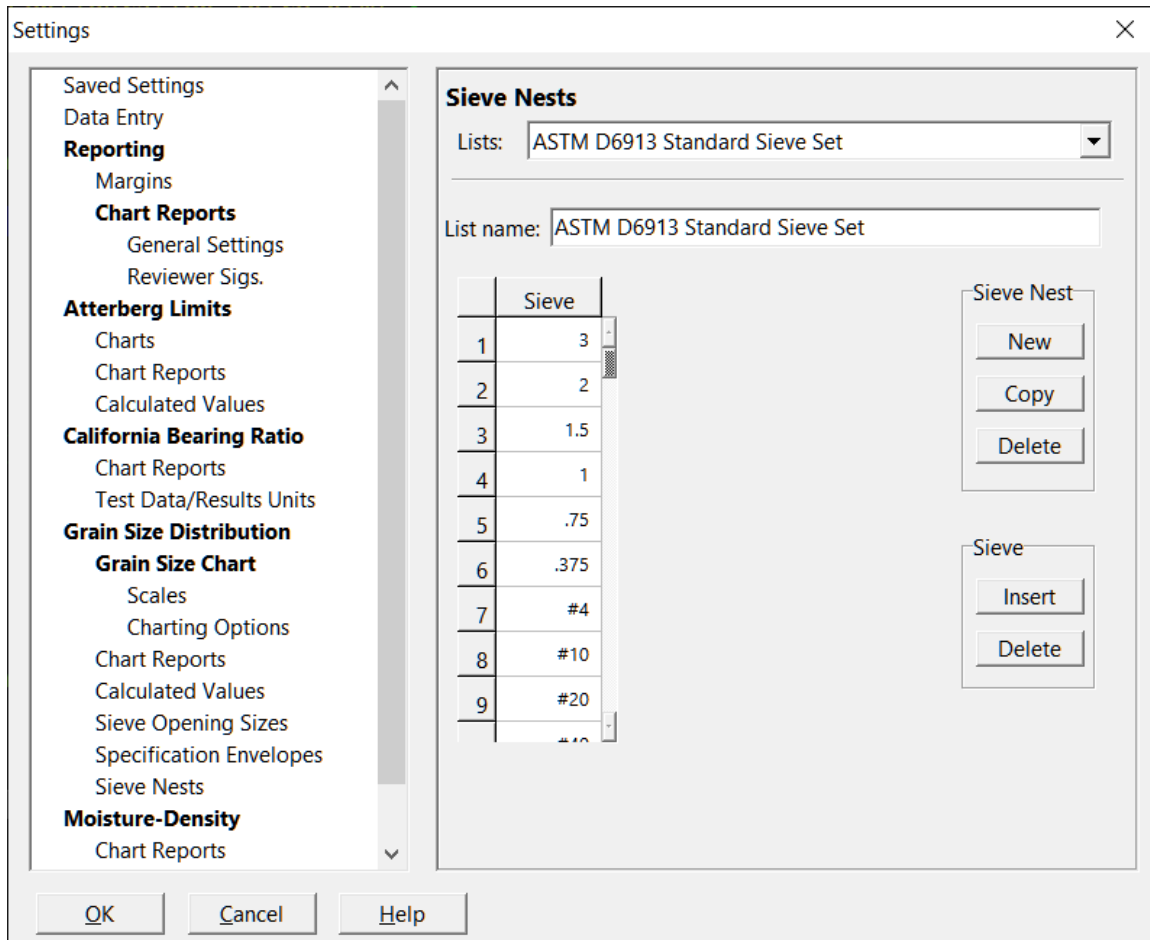


Figure 2.12: Sieve Nest Dialog

To create a list of sieves:

1. Select **Options** > **Program Setup** then click on **Sieve Nests** in the left-hand navigation panel.
2. Click on the **New** button in the **Sieve Nest** box on the right side of the dialog.
3. At the **Name** prompt, enter a unique name for your list (i.e., not used for one of the sieve nests already stored in the program's database). Names may be anything that describes the set of sieves that you'll be entering; as an example, here are a couple of the predefined sieve nests shipped with the program:
ASTM D6913 Standard Sieve Set
ASTM D422 Recommended Sieve Set #1

4. After you've entered your sieve nest name, pressing Enter brings you to the sieve sizes grid. Enter the size of each sieve in your sieve nest, in order of decreasing opening size (e.g., 3", 2" 1.5", etc.).

⇒ Enter sieve sizes as follows: use a "#" sign for numbered sieves (e.g., **#40**); measured sieve openings should normally be entered in dimension units appropriate for the project file on which you're working (i.e., if you've configured the project to use SI units, enter your sieve opening sizes in millimeters; for a US unit project, enter your sieve opening sizes in inches). If you need to enter a millimeter size into an envelope used for a US unit project, add **MM.** to the end of the measurement (e.g., **2MM.**).

§ 3.2.11 provides instructions on using your sieve nest as a starting point for entering a new sieve test.

2.4 Atterberg Limits Configuration

The following sections cover configuration options that affect the entry and reporting of Atterberg limits test data.

2.4.1 Plasticity and Blows vs. Moisture Chart Settings

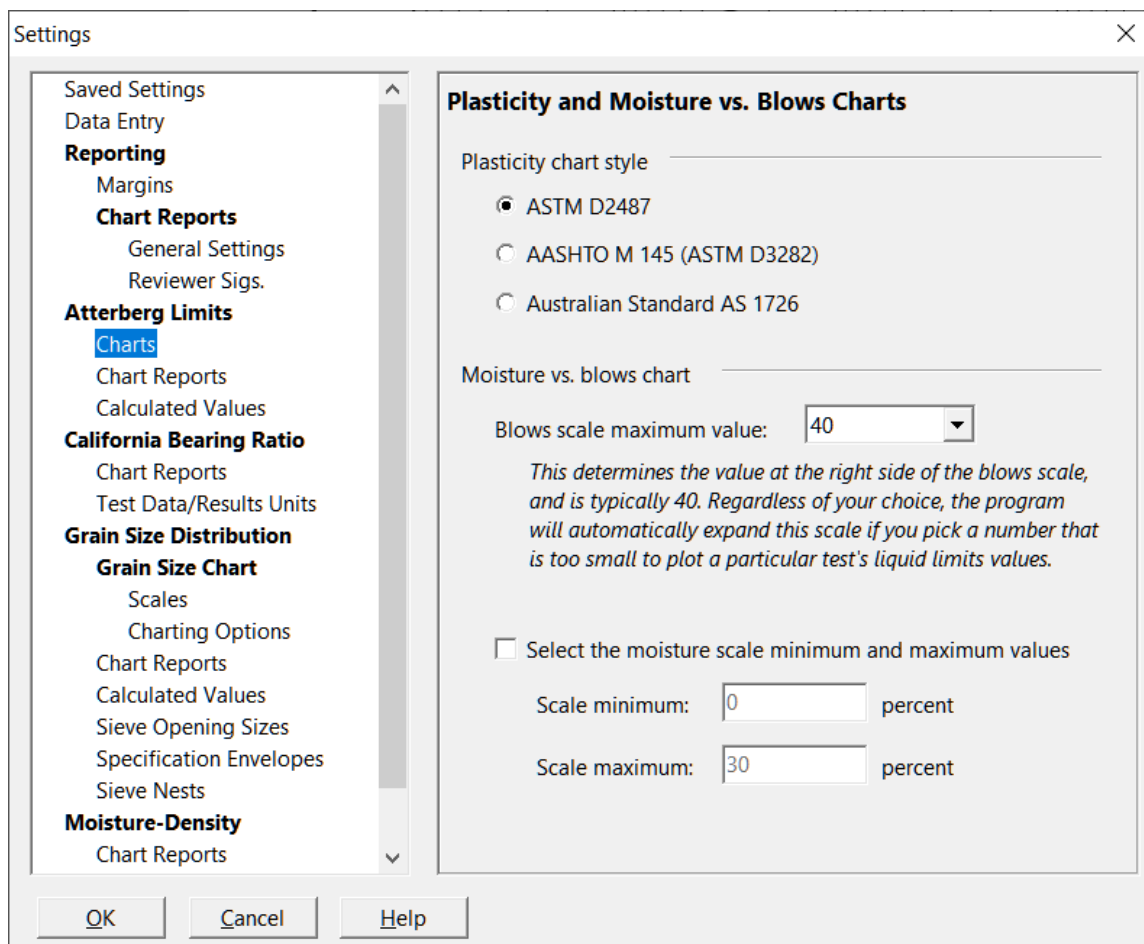


Figure 2.13: Limits Chart Settings

Selecting Options > Program Setup and clicking on **Charts** underneath **Atterberg Limits** in the navigation list at the dialog's left side allows you to modify the appearance of the Atterberg blows vs. moisture and plasticity charts:

Plasticity chart style

The ASTM D2487 (USCS), AASHTO M 145 and AS 1726 soil classification standards incorporate a chart of liquid limit vs. plasticity index; the format of this chart is unique to each standard. **Plasticity chart style** selects which type of plasticity chart will be shown on Atterberg limits **chart reports**. After selecting the plasticity chart type, make sure to select the **option to show the plasticity chart on reports** instead of the blows vs. moisture chart.

Blows scale maximum value

This determines the value at the right side of the blows scale, and is typically 40. Regardless of your choice, the program will automatically expand this scale if you pick a number that is too small to plot a particular test's liquid limits values.

Select the moisture scale minimum and maximum values

Checking this box allows you to manually select the minimum and maximum moisture content scale values on the blows vs. moisture chart. If this box is *unchecked*, the program will select the scale for you.

2.4.2 Atterberg Limits Chart Reports

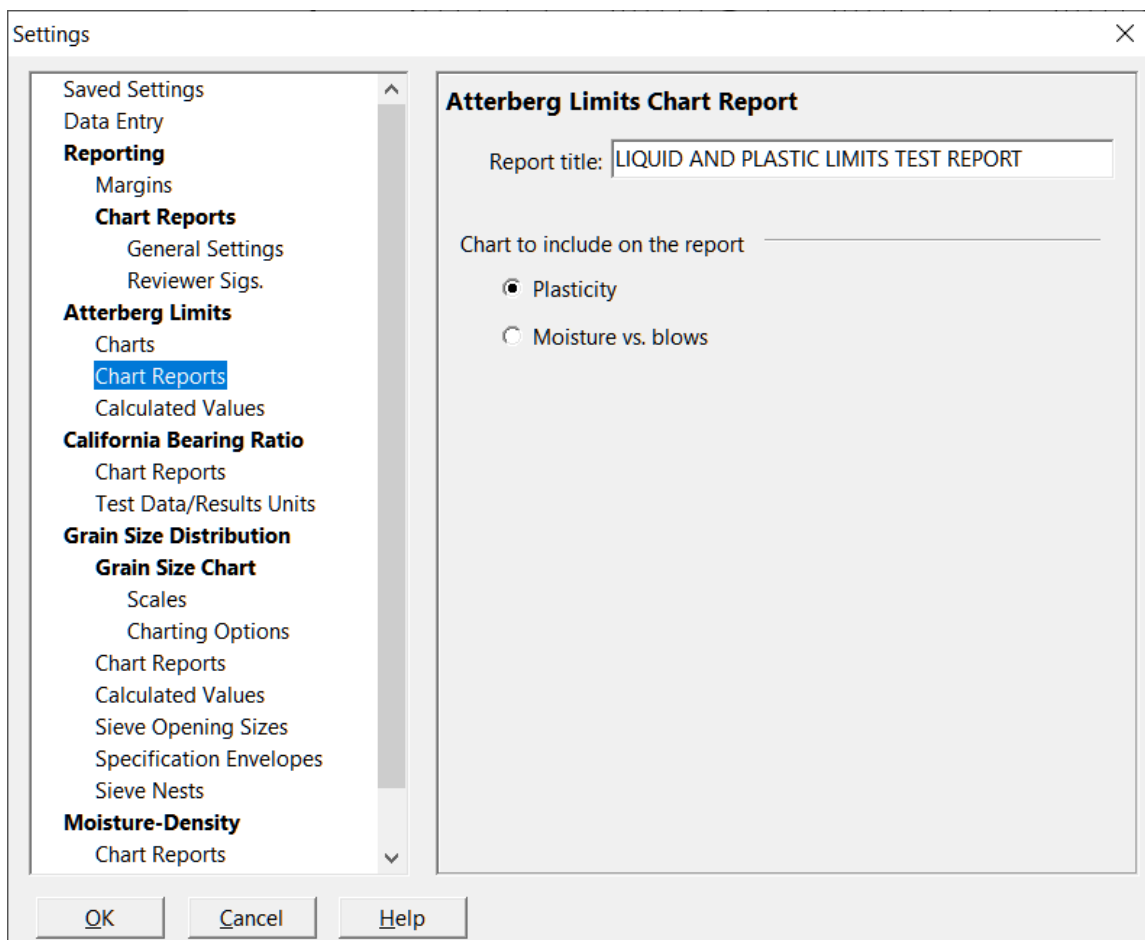


Figure 2.14: Limits Chart Report Settings

Selecting Options > Program Setup and clicking on **Chart Reports** underneath **Atterberg Limits** in the navigation list at the dialog's left side allows you to modify the appearance of the Atterberg limits chart reports:

Report title

The chart report title is a single line of text shown at the top of the Atterberg limits chart report. Typically the title reads **Atterberg Limits Test Report** or **Atterberg Limits Test Results – ASTM D4318**.

Chart to include on the report

Atterberg limits **chart reports** include a space for a chart plotting either blows vs. moisture or plasticity (liquid limit vs. plasticity index).

2.4.3 Atterberg Limits Calculation Options

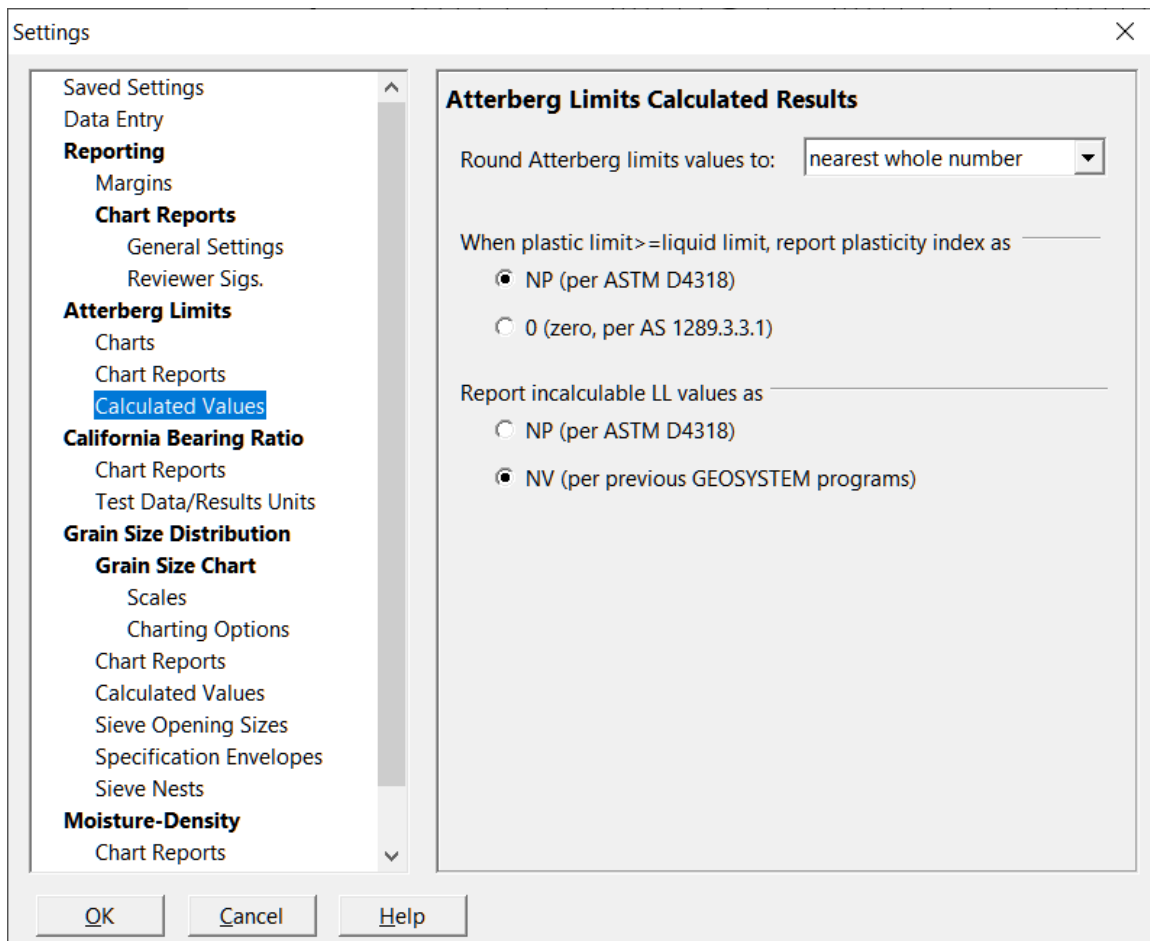


Figure 2.15: Limits Calculated Values Settings

The **Calculated Values** selection on the Settings dialog (Options > Program Setup then click on **Calculated Values** underneath **Atterberg Limits** in the navigation list at the dialog's left side) includes several options that affect how Atterberg limits results are reported:

Round Atterberg limits to

Determines the number of digits to the right of the decimal that will be printed when reporting the liquid and plastic limit, plasticity index and liquidity index. (Note that ASTM D4318, AASHTO T 89, and Australian Standards AS 1289.3.x.1 all specify that Atterberg limits values are to be rounded to the nearest whole number.)

When plastic limit > = liquid limit, report plasticity index as

ASTM D4318 and AS 1289.3.3.1 disagree on how the plasticity index is to be reported if the sample's plastic limit is larger than its liquid limit: ASTM indicates that the soil should be reported as NP (see Section 18.1.1), while the Australian Standard indicates that the plastic limit is to be reported as 0 (see Section 5, note c). The **When plastic limit > = liquid limit, report plasticity index as** selection allows you to choose between the two reporting options.

2.5 Soil Classifications Configuration

LabSuite features a minimal amount of configuration options for soil classification results, as covered in the next section.

2.5.1 USDA Chart Report Settings

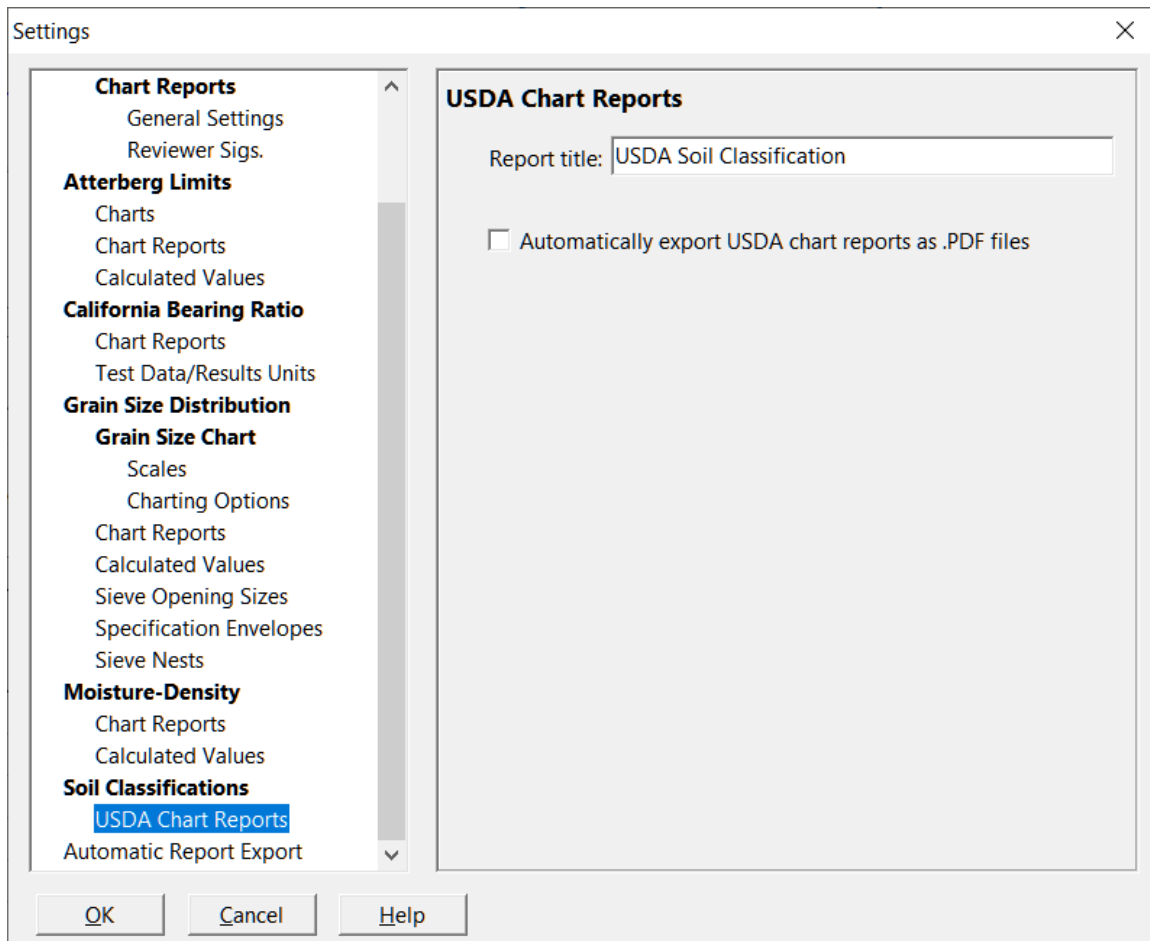


Figure 2.16: USDA Chart Report Settings

LabSuite can produce **chart reports** featuring the USDA textural triangle. The software offers a single feature for customizing the report: The chart report title, which is a single line of text shown at the top of the report, can be changed by selecting Options > Program Setup and then clicking on **USDA Chart Reports** underneath **Soil Classifications** in the navigation list at the dialog's left side.

⇒ Typically the title reads **USDA Soil Classification** or **Soil Classification Report**.)

LabSuite can be set up to automatically export a .PDF version of the USDA chart report whenever the sample's classification changes (i.e., because you've changed the sample's grain size distribution or Atterberg limits data). To do this:

1. Begin by turning on the program's automatic **chart report exporting option**: Select Options > Program Setup then click on **Automatic Report Export** in the left-side navigation list, and make sure that the **Chart report (Adobe .PDF format)** option is selected.
2. Next, turn on the option to export USDA chart reports (the automatic USDA chart report export is a separate option because most users do not need these reports): Click on **USDA Chart Reports** underneath **Soil Classifications** in the navigation panel, then make sure that the **Automatically export USDA chart reports as .PDF files** box is checked.

2.6 Moisture-Density Test Configuration

The following section covers configuration options that affects the reporting of moisture-density test data.

2.6.1 Moisture-Density Report Settings

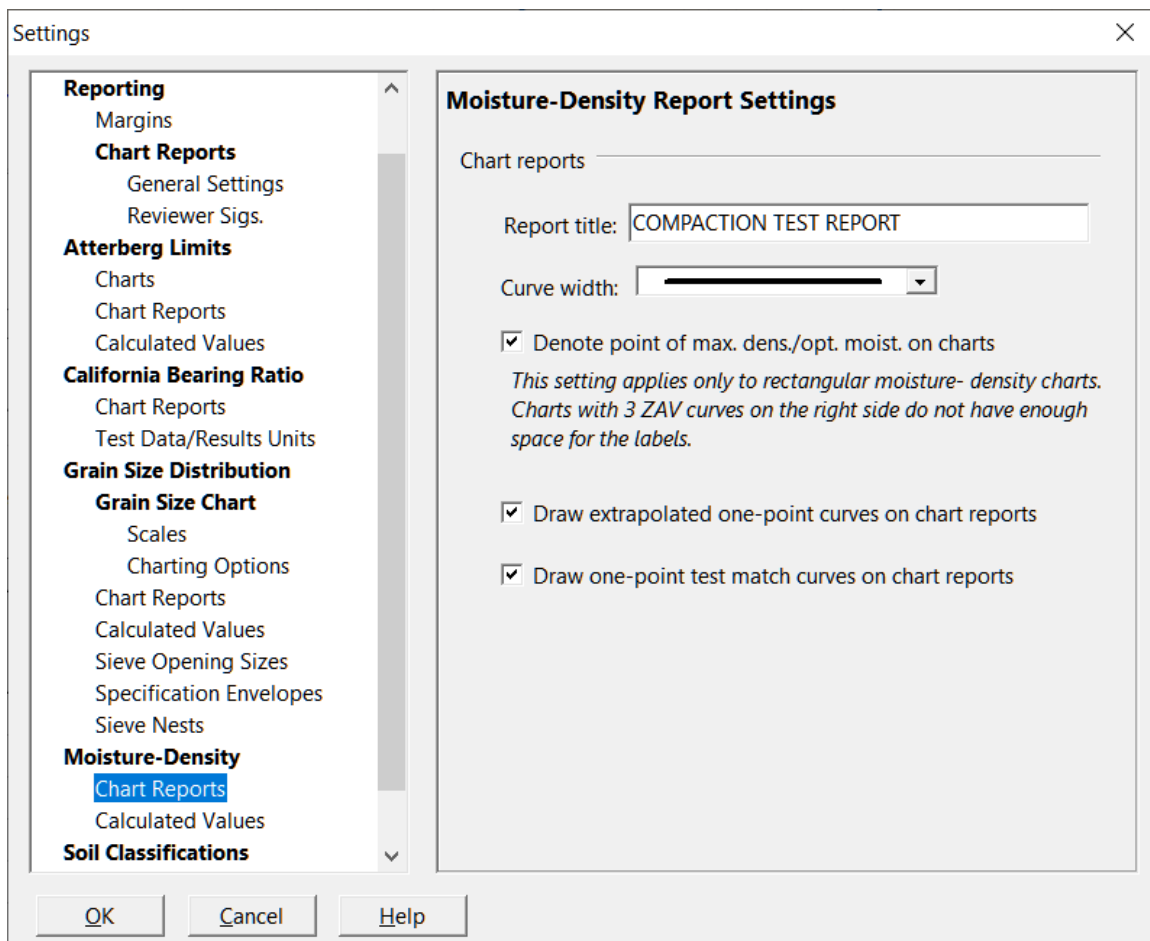


Figure 2.17: Moisture-Density Report Settings

Selecting **Options** > **Program Setup** and clicking on **Chart Reports** underneath **Moisture-Density** in the navigation list at the dialog's left side allows you to modify the appearance of reports produced for moisture-density tests:

Report title

The chart report title is a single line of text shown at the top of the moisture-density chart report. Typically the title reads, e.g., **Compaction Test Report** or **Moisture-Density Test Results**.

Curve width

Determines the width of the moisture-density curve when drawn on a moisture-density chart report.

Denote point of max. dens./opt. moist. on charts

Selecting this option adds a small call-out box to the moisture-density chart pointing to the point of maximum density/optimum moisture. The selection is required by many test standards (e.g., ASTM D698).

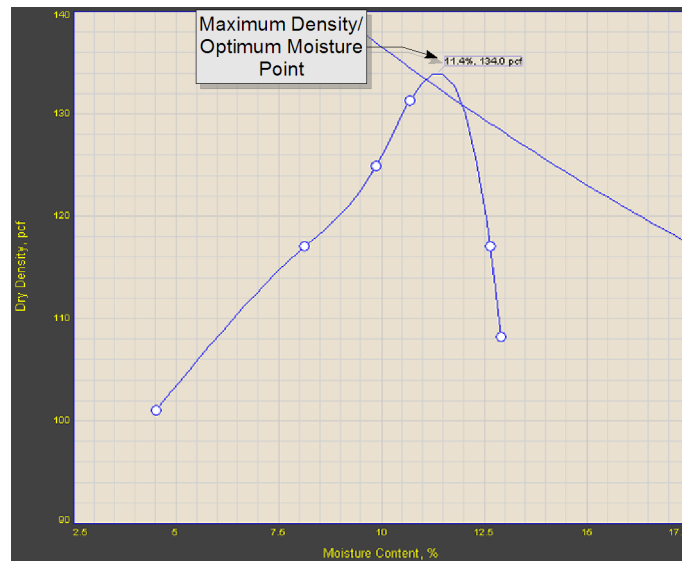


Figure 2.18: Moisture-Density Chart with Call-Out Box

Draw extrapolated one-point curves on chart reports**Draw one-point test match curves on chart reports**

LabSuite supports a simplified version of the AASHTO T 272 one-point test matching procedure that **extrapolates a one-point test's compaction curve from a pair of existing tests' compaction curves**. For one-point tests that have an extrapolated compaction curve, *LabSuite* can be configured to plot the extrapolated compaction curve (by checking the **Draw extrapolated one-point curves on chart reports** box) and/or the pair of existing tests' compaction curves (by checking the **Draw one-point test match curves on chart reports** box).

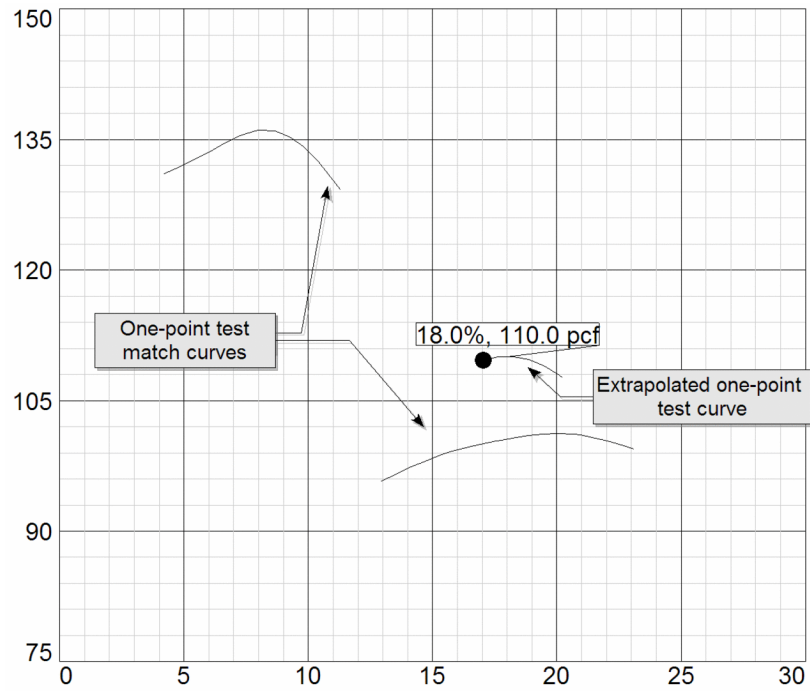


Figure 2.19: Synthesized One-Point Test Curve and Match Curves

2.6.2 Moisture-Density Calculation Options

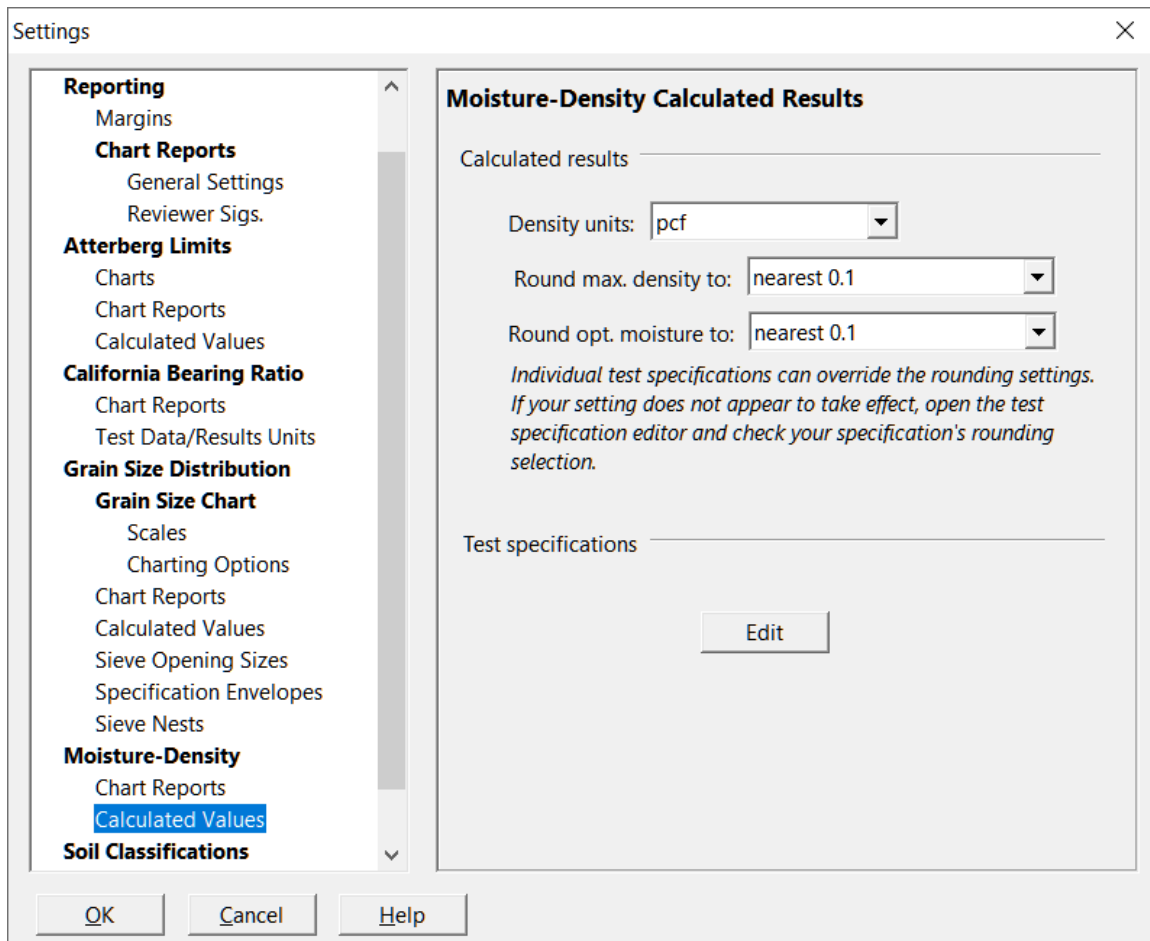


Figure 2.20: Moisture-Density Calculated Values Settings

The **Calculated Values** selection on the Settings dialog (Options > Program Setup then click on **Calculated Values** underneath **Moisture-Density** in the navigation list at the dialog's left side) includes several options that affect how moisture-density test results are reported:

Density units

This selection changes the units to be used to report calculated densities, *regardless of the units used to enter the compaction test data.*

Round max. density to

This selection box controls the program's rounding of calculated maximum density values. Note that the list of available rounding options changes depending upon which density units have been selected.

Round opt. moisture to

This selection box controls the program's rounding of calculated optimum moisture content percentages.

- ⇒ Using the Test Specification editor (see § 2.6.3) you can override the rounding selection on a per-test specification basis: This can be useful for setting the test results rounding selection for particular moisture-density test specifications that mandate a specific rounding procedure for test results. If your **Round max. density to** and **Round opt. moisture to** selections are not reflected in your reported test results, use the Test Specification editor to check to see if your test specification overrides the default rounding settings.

Test specifications

Clicking on the **Edit** button brings up the Moisture-Density test specification editor, covered [here](#).

2.6.3 Moisture-Density Test Specifications

The screenshot shows the 'Compaction Test Specifications' dialog box. On the left, a list of test specifications is displayed, with 'ASTM D 1557-07 Method A Modified' selected. The right pane shows the configuration for this specific test. The 'Specification name' is 'ASTM D 1557-07 Method A', and the 'Standard/modified/other' is 'Modified'. The 'Oversize material is larger than the:' is set to '#4 sieve', and the 'Test method' is 'Proctor test'. Under 'Test results rounding', there are checkboxes for 'This specification requires a unique rounding selection' and 'Max. density' and 'Opt. moist.' are set to 'nearest 0.1'. Under 'Oversize (rock) correction', 'Density correction' and 'Moisture correction' are both set to 'ASTM D4718-15'. The 'Correct:' dropdown is set to 'Test points and the max. density and opt. moi'. There are checkboxes for 'Report the uncorrected results in addition to the corrected results' and 'Plot the uncorrected curve in addition to the corrected curve'. The 'Test details' section includes 'Mold diameter (in.): 4', 'Mold height (in.): 4.58366', 'Hammer wt: 10 lb.', 'Blows per layer: 25', 'Hammer drop: 18 in.', and 'Number layers: five'.

Figure 2.21: Test Specification Editor

LabSuite incorporates a list of different moisture-density test specifications, which consists of:

- The physical requirements of the test, such as the dimensions of the mold, the number of soil layers and blows per layer and the hammer weight and drop.
- Oversize correction requirements such as the size of sieve used to separate out oversize material and the oversize moisture and density correction method.
- Unique reporting requirements, such as whether to report the non-oversize corrected test results as well as the corrected test results.

Each moisture-density test entered into the system must be associated with a test specification from this list.

If two or more computers will be used to access your test data you'll want to make sure that the test specifications you use are available on every computer that accesses the test data. You can do this by making sure that the package's *shareable config. files directory* is set up to point to the same network directory on each computer. To do this, start your GEOSYSTEM package, then, from the program's opening screen, select Options > Setup General Options, click on **Files** in the following dialog's left-hand navigation dialog, then fill in the right-hand **Report, data entry form and shareable config files path** box with a network directory. Do this procedure on every computer, *starting with the computer you've been using to enter specification sets*. (The software will copy those sets from their current location to the new network share point only if the share folder hasn't been accessed by another computer first.)

To edit the program's test specification database, select Options > Program Setup then click on **Calculated Values** underneath **Moisture-Density** in the navigation list at the dialog's left side, then click on the **Edit** button.

To edit a test specification:

Test specifications currently stored in the database are listed on the left-hand side of the panel: To view or edit a specification in the list, simply click on the specification's name.

To create a new test specification:

You can add a new test specification by clicking on the **New** button, or you can start with an existing test specification and save it under a new name by clicking on the test specification in the left-hand list, then click on the **Copy** button.

To remove a test specification from the database:

Click on the test specification's name in the specification list then click on the **Delete** button.

A moisture-density test specification includes the following information:

Specification name

Each specification must be associated with a unique name that describes the test method. A typical specification name would be **ASTM D698-91, Method A**.

Standard/modified/other

Two test specifications may share the same name if different values are entered into the **Standard/modified/other** field for the two specifications: for example, there may be two **ASTM D698-91, Method A** test specifications - one **Standard**, the other **Modified**.

Oversize material is larger than

For test procedures that require an oversize material correction, this selection specifies the sieve opening size that denotes the oversize material boundary.

Test method

Select **Proctor test** for a normal moisture-density test not involving the California Test Method 216 (CT-216) procedure.

For CT-216 tests, *LabSuite* supports two test methods: a modified CT-216 test procedure where moisture contents are taken at each test point (this method is labeled as **CT-216 with added moisture content tests** in the test method selection box), and a by-the-book CT 216 procedure without moisture contents (labeled **California Test 216** in the selection box).

This specification requires a unique rounding selection

The software has maximum dry density and optimum moisture content rounding settings (**Round max. density to** and **Round opt. moisture to**, covered [here](#)) that affect *almost* every test specification; however, you can choose to override these settings for individual test specifications. This can be useful for setting the test results rounding selection for particular moisture-density test specifications that mandate a specific rounding procedure for test results (e.g., ASTM D698 requires reporting the maximum dry density to 0.1 pcf, while ASTM D1557 requires rounding to 0.5 pcf).

If you would like to require a particular rounding procedure for a given test specification, check the **This specification requires a unique rounding selection** box, then select the proper rounding option in the **Max. density** and **Opt. moist.** boxes.

Max. density

These options control the rounding of the maximum density and optimum moisture content results calculated by the program for a test using the current test specification. *The selection boxes are only available if the **This specification requires a unique rounding selection** box is checked*; otherwise, the program rounds the results for tests using the test specification according to the rounding settings chosen [here](#).

Density correction

Selects the method by which density results from tests using the specification are to be corrected for the presence of oversize material (i.e., rock). Select **No oversize density correction** if you do not want to correct the calculated densities.

Moisture correction

Selects the method by which moisture content results from tests using the specification are to be corrected for the presence of oversize material. Select **No oversize moisture correction** if you do not want to correct the calculated moisture contents.

- ⇒ You can stop the program from correcting the moisture and density results for any given test, even if the test's specification requires corrections: Simply do not enter a **percentage for the oversize material**, or a **bulk specific gravity**.

Correct

LabSuite can apply the density and moisture oversize corrections to each test point or just to the calculated maximum dry density and optimum moisture content.

- ⇒ The only real difference between the two options is that if the option to apply the corrections to each test point is chosen, you can opt to have the program plot both the corrected and uncorrected curves as part of the hardcopy reports; if the option to apply the corrections only to the final results is chosen, the corrected maximum density/optimum moisture content will be reported, but charts will only include the uncorrected curve.

Report the uncorrected results in addition to the corrected results

When an oversize correction is applied, the program can be configured to report uncorrected maximum dry density/optimum moisture values in addition to the corrected test results. This selection affects both the **data summary report** and the **chart report**. For example, the following figures demonstrate the effect of selecting and unselecting this option on the PRGEOSYS chart report:

ROCK CORRECTED TEST RESULTS
Maximum dry density = 136.7 pcf
Optimum moisture = 12.9 %

Figure 2.22: Chart Report Test Results Box Showing Corrected Results

ROCK CORRECTED TEST RESULTS	UNCORRECTED
Maximum dry density = 136.7 pcf	131.3 pcf
Optimum moisture = 12.9 %	10.7 %

Figure 2.23: Chart Report Test Results Box Showing Corrected and Uncorrected Results

Report the uncorrected curve in addition to the corrected curve

When this option is selected, **LabSuite** will plot two curves on moisture-density charts: One curve will be plotted using the original, uncorrected, test results, while the second curve will be plotted using the test's density and moisture results after correcting for the presence of oversize material.

- ⇒ This option will not be available if you select **Only the max. density and opt. moisture** in the **Correct** box because there is no corrected curve: The uncorrected is plotted to calculate an uncorrected maximum density and optimum moisture content, then the oversize correction is applied to the results.

Mold diameter

Mold height

For non-CT-216 tests, **LabSuite** utilizes the mold diameter and height required by the selected test specification to calculate a mold volume that is used during data entry as a default for each compaction point's **Mold volume** **test data entry field**.

Hammer wt.

Hammer drop

Blows per layer

Number layers

These fields are optional. If data are entered for all four prompts, it will be included as part of the test specification listed on chart reports.

⇒ Because **LabSuite** does not automatically include measurement units as part of the specification listing, make sure to add **lb.** or **kg.** to the hammer weight and **in.** or **cms.** to the hammer drop.

2.7 Saving Sets of Configuration Settings

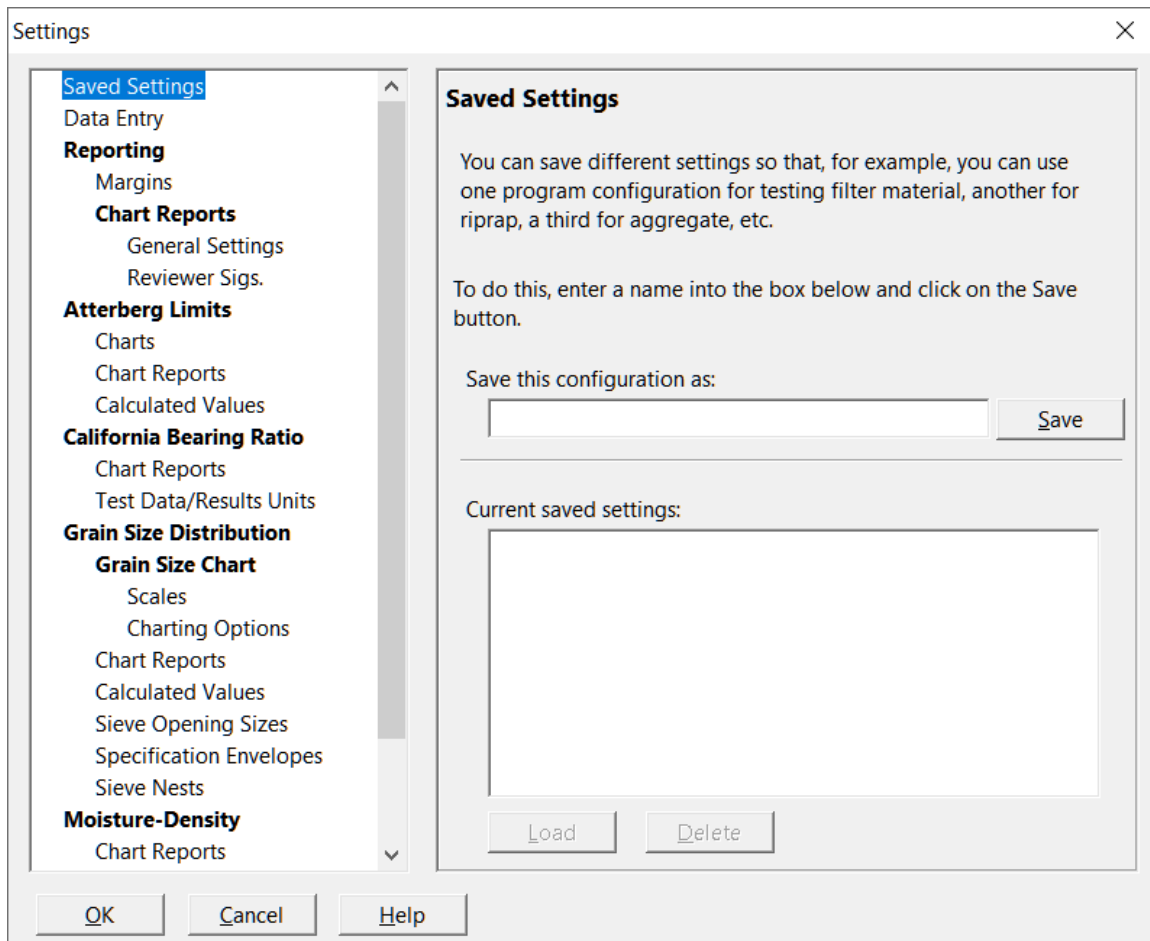


Figure 2.24: Saving Configuration Settings

If you perform several different grain size test procedures, or test radically different types of materials (such as riprap and filter media), you'll find yourself constantly switching between different grain size test settings. For example:

- Riprap may require the chart scales to stretch from 3" to 42".
- while
- Filter material is plotted on a log(size) vs. probability chart
- and
- Soil tests are conventionally plotted on a log(size) vs. percent retained chart.

LabSuite can save your grain size settings selections; before entering data for a new test you can recall a saved group of settings to ensure that the program is properly configured for the type of material tested. For example, you can load the *Riprap* settings before entering a riprap test, or load the *Filter* settings before entering a filter test, etc.

- ⇒ Every test entered into a given GEOSYSTEM project file shares the same configuration settings. Because of this, if the tests that you've performed for a given project

need several different configurations, you'll need to create a new project file for each different configuration.

To save your current program settings:

1. Select Options > Program Setup then click on **Saved Settings** in the navigation list at the dialog's left side.
2. In the **Save this configuration as:** field, enter a name: When you start a new test that uses the same settings, you load them from the **Current saved settings:** list by clicking on your chosen name.

To use your saved settings for a new test:

1. Open the Settings dialog (Options > Program Setup).
 2. Click on **Saved Settings** in the navigation list at the dialog's left side.
 3. Click on your settings name in the **Current saved settings:** box then click on the **Load** button.
- ⇒ To delete a saved batch of settings click on the settings name in the **Current saved settings:** box then click on the **Delete** button.

2.8 The Container List

LabSuite may be set up to keep a list of sample container IDs and weights. You can use this feature avoid weighing:

- The container used to weigh grain size sieve test samples.
- The **pan** used for **cumulative weight retained** sieve tests.
- The container used for **hygroscopic moisture content tests**.
- The container used for **Atterberg limits moisture content tests**.
- The container used for the moisture content tests performed as part of a **moisture-density (Proctor) test**.

Instead of weighing your containers every time they're used, you can enter their weight and ID (any label that can uniquely identify the container) into the program's container weight database. When you use an ID'd container for a test, record the container's ID as part of your testing information and enter the ID into *LabSuite* instead of the container weight.

To set up the container list, select Options > Container List.

	Container ID	Weight (gms.)
1	n1	101.4
2	n2	113.9
3	n3	102.8
4	n4	114.1
5	n5	89.0
6		

[Delete](#)

Figure 2.25: The Container List Dialog

To add a new container to the list:

Click on the first blank row in the list and enter the container ID and container weight.

⇒ Container IDs may be any combination of alphabetic and numeric characters; e.g., ACD or 123. IDs that differ only by case (e.g., 3A and 3a) are considered identical.

⇒ Container IDs may be added to the list in any order.

To remove a container from the list:

Click in either the Container ID or Weight columns of the row you want to delete then click on the **Delete** button.

⇒ The container list is always optional: if you run a test with a container that is not on your container list, you can skip entering a container ID and instead enter the container's weight.

After you're through entering your container weights, close the dialog then select Options > Program Setup, click on **Data Entry** in the Setup dialog's left-hand navigation panel, then select **Tare ID** in the **Container weights are entered as** box.

3. Entering Grain Size Test Data

Data entry for a grain size distribution test is split into three steps:

- Sample and test background information, which covers basic information about the grain size distribution test and the sample tested.
- Sieve test data entry.
- Hydrometer test data entry.

Begin by selecting Test > Enter GrainSize Data. The following sections discuss each subsequent data entry step in further detail.

3.1 Sample and Test Information

Material description [Click here to select from a list of material descriptions](#)

Sample date: Date received:

PL: LL:

PI: USCS classification:

AASHTO classification:

Checked By: Title:

Particle gradation system:

Specification 1:

Specification 2:

Specification 3:

Figure 3.1: Sample Info. Window

The grain size test initial data entry window covers basic information about the test and the sample tested. This window is displayed by clicking on the **Sample Info.** navigation tab, or by selecting Window > Sample Info.

Some items on the window may be automatically filled in by other data reduction modules. (For example, the sample's USCS classification is automatically calculated after the percent passing the #4 and #200 sieves and the soil's plastic and liquid limit are determined.) Leave these fields blank; after you've completed data entry for the lab tests, the missing information will be filled in for you.

- ⇒ Because **LabSuite** supports a number of different report formats, the information requested on this screen varies according to which report format is selected; e.g., some formats may include a place for listing the sample's USCS classification, while others may omit this information.

You can select from the program's different report forms with the **Report form** toolbar at the top of the **report preview** window (**Window** > **Report Preview**).

While most of the information requested on the Sample Info. window is self-explanatory; a few require further definition:

Tested by

Checked by

If you fill in either of these fields, the information that you enter will be shown below the border of the test's **chart report**, as the following figure demonstrates:

The screenshot shows a report window with a sidebar on the left containing a list of tests. The main area displays project information: Project No. P91003-24, Client: County of Berthoud, and Project: Berthoud County Landfill Expansion. It also shows sample details: Source of Sample: Boring, Depth: 0-2.5' and 5-7.5', and Sample Number: S-1 and S-3. Remarks include $\phi_{FM} = 1.38$, $\phi_{FM} = 1.65$, and $\Delta_{FM} = 1.69$. At the bottom, there are fields for 'Tested By' (with a dropdown showing 'CERK') and 'Checked By' (with a dropdown showing 'ALV'). Two callout boxes with arrows point to these fields, labeled 'Tested by' and 'Checked by'.

Figure 3.2: Report With Tested By and Checked By

- ⇒ When printing more than one test per page, **LabSuite** will use the "Checked by" name entered for the first test placed on the page.

Material description

LabSuite normally uses the material description that you entered into the **Material Description** field on the Data Manager window (that's the window with the numbered sample cards where you entered the sample's number, depth, etc.). However, if you're entering boring log data, the material description at the depth where you took your lab. test sample may only be something like:

grades to slightly silty

with the full stratigraphy description entered at some depth above the lab. test sample. If this is the case, you can either override the default description or click on the link that reads **Click here to select from a list of material descriptions**: this drops down a box listing all of the material descriptions entered into the current source folder. Double-click on one of the descriptions to select it.

Particle gradation system

There are a number of systems used for subdividing material into gravel, sand, silt and clay, and each system has its own set of particle sizes determining those subdivisions. For example, the USCS system defines sand as material between #4 and #200 in size, while Burmister defines sand as being between #10 and #200. Additionally, Burmister does not distinguish between silt and clay sizes, and instead merely categorizes anything smaller than the #200 size as "fines", while Wentworth, for example, further divides into coarse/medium/fine/very fine silt, then clay.

You can select your preferred subdivision system for your test in the **Particle gradation system** box.

Your selection affects the percentages reported for gravel, sand, silt and clay, as well as the appearance of most of the program's **chart reports**. Following is a section of a GSGEOSYS report form printed for a test using different classification system selections:

%+3"	% Gravel		% Sand			% Fines	
	Coarse	Fine	Coarse	Medium	Fine	Silt	Clay
0.0	4.5	85.7	5.4	1.9	2.2	0.3	

Figure 3.3: **USCS**

%+3"	% Gravel	% Sand	% Silt	% Clay
0.0	90.2	9.5	0.3	

Figure 3.4: **USCS without coarse/medium/fine divisions**

%+3"	% Pebbles	% Gravel	% Sand					% Silt				% Clay
			V. Crs.	Crs.	Med.	Fine	V. Fine	Crs.	Med.	Fine	V. Fine	
0.0	91.6	4.0	0.9	0.8	0.9	0.8		1.0				

Figure 3.5: **Wentworth**

%+3"	% Gravel			% Sand			% Fines
	Coarse	Medium	Fine	Coarse	Medium	Fine	
0.0	0.0	50.3	45.3	1.5	1.1	1.5	0.3

Figure 3.6: **Burmister**

There's three USCS selection options: "**USCS with Silt/Clay Division at 2 μ** ", "**USCS with Silt/Clay Division at 5 μ** ", and "**USCS with Fines instead of Silt/Clay**". The first two options stem from the fact that, until recently, ASTM didn't actually define silt and clay sizes, so the choice was open. (D653, the ASTM "Standard Terminology" document, has since been modified – per our suggestion – to define silt as being larger than 2 μ .) The final selection, "**USCS with Fines instead of Silt/Clay**", can be used on projects where the distinction between silt and clay is to be determined solely upon mechanical properties (i.e., Atterberg limits).

- ⇒ We'll be posting more particle classification systems on our website as they're requested by *LabSuite*'s users. Click on the **More...** button to view an updated list.

Specification

Specification envelopes provide upper and lower boundaries for some or all of the sieves in your test. For example, your client may require that a given delivered material test with 100 % of its particles smaller than the 3/8" sieve, and with between 10 % and 20 % of its particles smaller than #200 sieve. The program maintains a database of specification envelopes taken from ASTM, AASHTO, Superpave and ISSA (International Slurry Surfacing Association) standards; you can also add your own envelopes to the database through the **specification envelopes** editor in the program's Setup dialog.

You can associate up to three specification envelopes with the test that you'll be entering by selecting the envelope names in the **Specification** boxes.

- ⇒ To remove an existing envelope selection, select **(no specification envelope)** instead.

3.1.1 Sample Info. Selection Lists

If you find that you're typing the same information into one of the data entry fields on the Sample Info. window for test after test, you can use the program's *Selection List* feature to turn the field into a popup list of selections that can be inserted into the field with a simple mouse click. There are a couple of cases where this feature can be especially useful:

- ⇒ You can set up a list of standard entries for fields such as "Tested By", "Checked By", etc. so that you can select – with a single mouse click – from a list of personnel instead of typing in the same names over and over for every test you enter.
- ⇒ Selection Lists can also be used to easily insert boilerplate text into, for example, the testing remarks field. This can be very handy if the same basic text is always typed into a particular data entry field.

To create a selection list for a field:

Right-click on the field and select Make a Selection List. This shows an empty selection list box that you'll need to fill with selection entries (such as personnel names, or your test remarks boilerplate text):

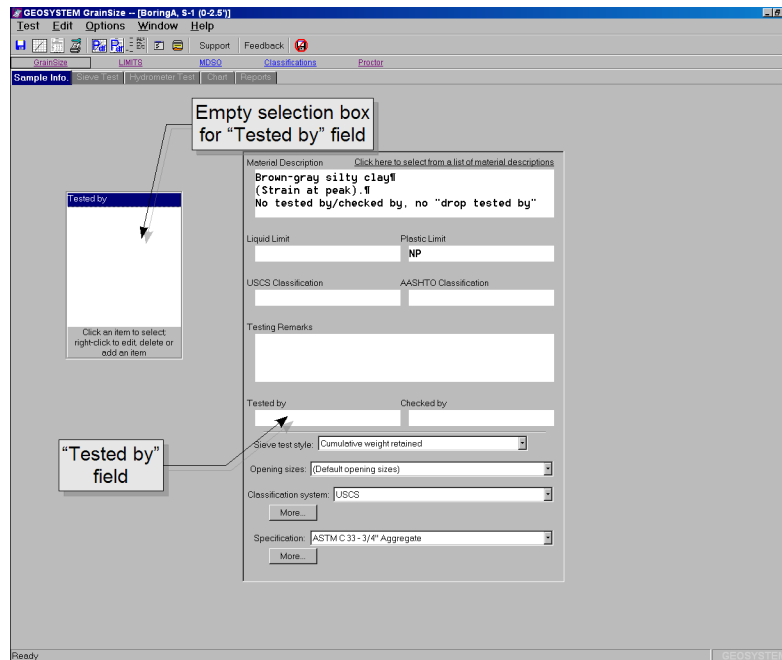


Figure 3.7: Empty Selection List for "Tested by"

Next, right-click within the empty selection list and select Edit, Delete and Add Entries. When you've done this **LabSuite** will show the Selection List Editor dialog:

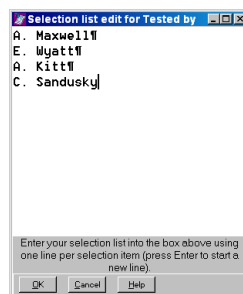


Figure 3.8: Selection List Editor

(The editor box above has already been filled in with a number of testing personnel names.)

Each selection that you want to appear is typed on a separate line: Type a selection, then follow by pressing the Enter key (this will show up as a ¶ sign at the end of the entry). (You can delete entries by simply deleting the line of text that defines the entry, including the ¶ sign at the end of the line.) When you're finished, click **OK** to save the list.

To use a selection list

Once you've created a selection list for a given data entry field, that list will automatically appear when you click in the data entry field, at which point you can either click on one of the items in the list (which will automatically fill in your data entry field with that item), or manually type data into your field.

The figure below shows a sample "Tested by" selection list:

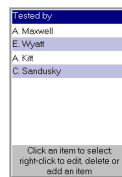


Figure 3.9: Sample Selection List

To delete a data entry field's selection list:

Right-click on the data entry field then select Delete the Selection List. *This action can be undone*: You can make your selection list reappear by right-clicking within the data entry field and selecting Make a selection list again (the program will have preserved your original selection list entries).

3.2 Sieve Test Data Entry

Pull up the sieve test data entry window by selecting Window > Sieve Test, or by clicking on the **Sieve Test** navigation tab.

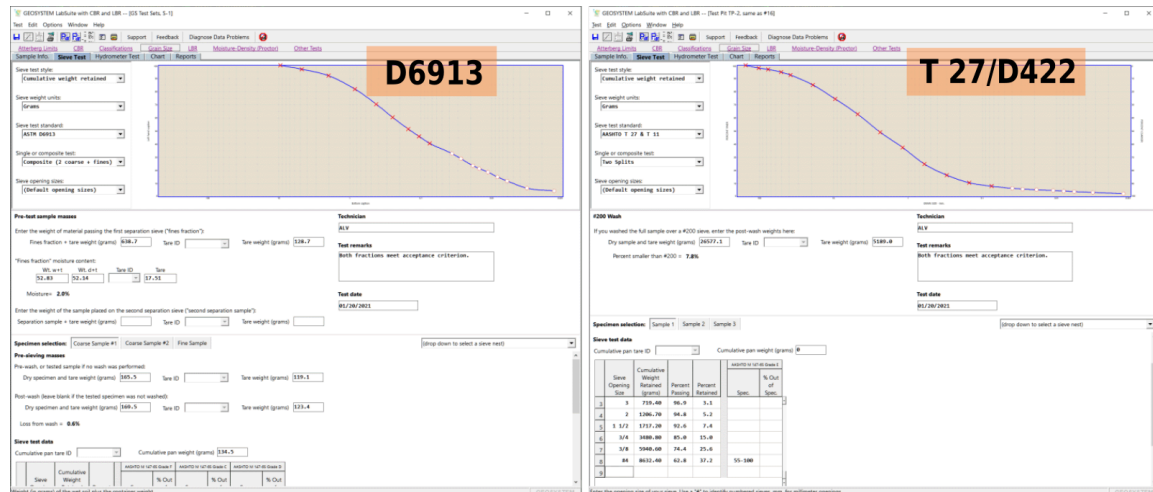


Figure 3.10: Sieve Test Entry for ASTM D6913 and AASHTO T 27/ASTM D422 Tests

Once you're on the sieve test screen, begin your test data entry by selecting some basic parameters.

3.2.1 General Sieve Test Settings

Sieve test style

This selection box is used to specify how you weighed the material retained on each sieve:

- **Cumulative weight retained** indicates that after shaking the sieves you emptied each sieve into a common pan; the pan should have been weighed after each sieve's retained material was added. ("Cumulative" means that you're accumulating the material retained on each sieve into a single pan.)
 - **Per-sieve weight retained** indicates that you've weighed each sieve when empty; after shaking the sieves, each sieve was weighed a second time along with the material retained on the sieve.
 - Selecting **Precalculated** lets you enter your own percentages. This option is useful if you need to graph sieve sizes and percentages provided by a client.
- ⇒ **Note:** if you change this selection after entering sieve test data, any grain size test data that you've already entered for the sample will be erased.

The following table lists the data requested for each sieve that you test:

GEOSYSTEM LabSuite with CBR and LBR -- [GS Test Sets, 5-1]

Test Edit Options Window Help

Atterberg Limits CBR Classification Grain Size LBR Moisture-Density (Pretector) Other Tests

Sample Info Sieve Test Hydrometer Test Chart Reports

Sieve test style: **Cumulative weight retained**

Sieve weight units: **Grams**

Sieve test standard: **ASTM D6913 & D1140**

Single or composite test: **Composite (2 coarse + fines)**

Sieve opening sizes: **(Default opening sizes)**

Pre-test sample masses

If you washed the full sample over a #200 sieve, enter the post-wash weights here:

Dry sample and tare weight (grams) Tare ID Tare weight (grams)

Percent smaller than #200 =

Enter the weight of material passing the first separation sieve ("fines fraction"):

Fines fraction + tare weight (grams) 638.7 Tare ID Tare weight (grams) 128.7

"Fines fraction" moisture content:

Wt. w+t Wt. d+t Tare ID Tare

52.83 52.14 17.51

Moisture = 2.0%

Enter the weight of the sample placed on the second separation sieve ("second separation sample"):

Separation sample + tare weight (grams) Tare ID Tare weight (grams)

Specimen selection: Coarse Sample #1 Coarse Sample #2 Fine Sample

Sieve Opening Size	Cumulative Weight Retained (grams)	Percent Passing	AASHTO M 147-65 Grade F		AASHTO M 147-65 Grade C		AASHTO M 147-65 Grade D	
			Spec. #1	% Out of Spec.	Spec. #2	% Out of Spec.	Spec. #3	% Out of Spec.
1 3/8	134.50	100.0			50-86	+14.0	60-100	
2 #4	150.89	97.0	70.0-100.0		35-65	+32.0	50-85	
3 #10	177.80	92.1			25-50	+42.1	40-70	
4								

Select a new data entry or preview window

Figure 3.11: General Sieve Test Settings

Sieve Test Style	What You Need to Enter
Cumulative weight retained	Cumulative pan weight (entered once per test) Sieve size Cumulative weight retained
Per-sieve weight retained	Sieve size Combined weight of the sieve and the material retained on the sieve Sieve weight
Precalculated	Sieve size Percent finer

Sieve weight units

You can enter your retained weights in either pounds or grams, or you can use mixed units: with the **Pounds to split, then Grams** selection, the first sieve stack retained weights are entered in pounds, subsequent sieve stack weights (i.e., the post-split sieve test) are entered in grams.

Sieve test standard

Pick the standard you're following for your sieve test; if you're also doing a #200 wash, you'd pick the entry that lists your sieve test standard *plus* your wash test standard. Or just pick your wash test standard if you're not running your sample through a sieve stack after washing.

- ⇒ D422 and D6913 have radically different data requirements, so make sure you select the correct standard before beginning data entry.
- ⇒ D1140 is optional with D6913, as D6913 incorporates its own optional #200 wash test procedure.
- ⇒ Most state DOT procedures are simply a close variant of AASHTO T 27, so it's usually safe to simply select that standard when following a DOT procedure. Please do feel free to contact us if your DOT test specification differs from AASHTO's.

Single or composite test

LabSuite supports up to two splits during the sieve test procedure. Use this box to select the split count for your test.

Sieve opening sizes

If you certify your sieves' opening sizes with a statistical measurement process **LabSuite** gives you the ability to precisely specify the opening size of each sieve that you use in your test. (For example, a #10 sieve is normally considered to have a 2 mm. opening size; if your sieve's openings averages 1.994 mm. with an optical measurement device, you can have **LabSuite** report the diameter of particles passing that sieve as being smaller than 1.994 mm. instead of 2 mm.) **LabSuite** does this by keeping a list of the sizes of the various *sets* of sieves that you use for your tests (one set = all of the sieves used for a given test).

If you've set up this list through the program's **opening sizes list editor**, use the **Opening sizes** selection box to choose the sieve sizes list for the test that you'll be entering.

If you haven't set up the sieve sizes list, or if you used sieves that you haven't entered into the sizes list, select **(Default opening sizes)** from the opening sizes selection box.

After general settings selection, test entry differs between D422/T 27 and D6913. The following sections cover both test procedures in detail.

3.2.2 Full Sample Wash

If you washed your *entire* test sample over a #200 sieve before doing the sieve test, by entering the after-wash sample weights into the boxes under the **If you washed the sample over a #200 sieve, enter the post-wash weights here** heading (the red shaded area in Figure 3.12). **LabSuite** uses your #200 wash data as follows:

- The amount washed through the sieve is printed on **data summary reports** as an alternate #200 percentage value.

If you washed the full sample over a #200 sieve, enter the post-wash weights here:

Dry sample and tare weight (grams) Tare ID Tare weight (grams)

Percent smaller than #200 =

Pre-test sample masses

If you washed the full sample over a #200 sieve, enter the post-wash weights here:

Dry sample and tare weight (grams) Tare ID Tare weight (grams)

Percent smaller than #200 =

Enter the weight of material passing the first separation sieve ("fines fraction"):

Fines fraction = tare weight (grams) Tare ID Tare weight (grams)

Fines fraction moisture content:

Wt. wet Wt. dry Tare ID Tare

Moisture = 2.0%

Enter the weight of the sample placed on the second separation sieve ("second separation sample"):

Separation sample = tare weight (grams) Tare ID Tare weight (grams)

Specimen selection: Coarse Sample #1 Coarse Sample #2 Fine Sample

Sieve Opening Size	Cumulative Weight Retained (grams)	Percent Passing	Spec. #1	% Out of Spec. #1	Spec. #2	% Out of Spec. #2	Spec. #3	% Out of Spec. #3
1	134.50	100.0	70.0-100.0	-15.0	50-85	+15.0	60-100	
2	150.80	97.8	70.0-100.0	-15.0	35-65	+12.0	50-85	+12.0
3	177.80	92.1	55.0-100	-25.0	25-50	+42.1	40-70	+22.1
4								

Figure 3.12: #200 Wash Data Entry Section

- The weight of the material washed out is used in calculating percent-retained values for post split-sample sieves (see the program's technical documentation for details).
 - If you don't enter data for a #200 sieve as part of your sieve test data, **LabSuite** will use the percent washed out and the minus #200 value when it charts your test data.
- ⇒ If you did not wash the *complete* sample over a #200 sieve prior to performing a standard sieve test, press Enter without typing anything into the **Dry sample and tare weight (grams)** field.

3.2.3 D6913 Sample Masses

D6913 involves a variable number of different sample mass measurements, depending upon whether and how many times the original sample is split during the test.

- ⇒ If you've chosen the option to **enter container weights as tare IDs**, all of sample masses requested by the program can be entered with a **Tare ID** instead of a tare weight.

3.2.4 Tests Without a Sample Split

A test that was not split (i.e., "single sieve-set sieving") requires the following masses:

- The mass of the sieve sample. This is entered into the **Pre-sieving masses** box, shown in Figure 3.13.
- The masses retained on each sieve.
- Optionally, the mass in the pan at the bottom of the sieve stack. (**LabSuite** can add this mass plus the mass retained on each sieve, then subtract the total from the original sample mass to determine the amount of material lost during sieving.)

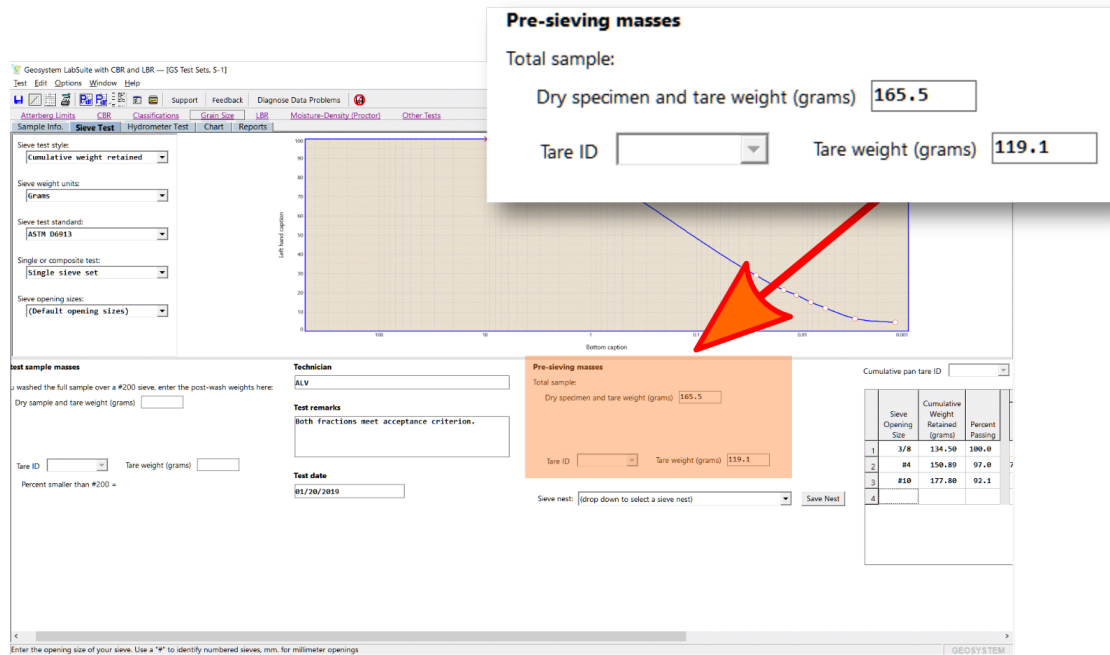


Figure 3.13: D6913 No Split Sample Mass

3.2.5 Tests With One or More Sample Splits

A test that involves one or more sample splits (i.e., "composite sieving") has a different set of requirements:

- The mass of the material passing the first separation sieve. This is the "fines fraction" mass called out in Figure 3.14.

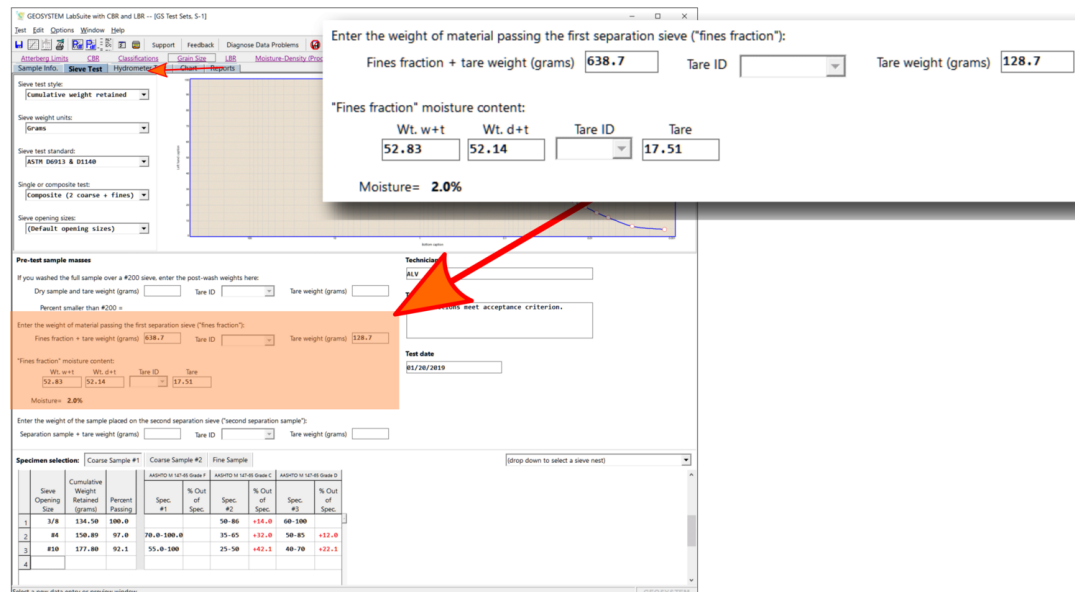


Figure 3.14: D6913 Fines Mass

- If the sample is not dried, a moisture content test on the material passing the first separation sieve is required. (This is the "Fines fraction" moisture content called out in Figure 3.14.
- If your test included a second separation step (giving you two coarse samples and one fine sample), the program will of course need the mass of the sample passing the second separation sieve. This mass is entered in the highlighted box shown in Figure 3.15

The screenshot shows the GEO SYSTEM LabSuite software interface. A dialog box is open with the title "Enter the weight of the sample placed on the second separation sieve ('second separation sample'):". The dialog contains three input fields: "Separation sample + tare weight (grams)", "Tare ID", and "Tare weight (grams)". A red arrow points to the "Separation sample + tare weight (grams)" field. The background shows the main software window with various tabs and a graph.

Figure 3.15: Composite Test — Second Separation Sample Mass

- For each sieve stack, the following masses are required:
 - Prior to sieving, the sieve sample can be washed (this is a different procedure than washing the complete, pre-split sample). If the sample is washed, you'll need the pre and post-wash sample weights. If the sample was not washed, only the tested sample weight is required.
 - The masses retained on each sieve.
 - Optionally, the mass in the pan at the bottom of the sieve stack.

Figure 3.16 shows the flow of samples through a composite D6913 test:

Technician, test remarks, and test date

These items are part of D6913's mandatory reporting requirements. Note that, if you enter a **Technician**, *LabSuite* will automatically add the name to a popup **selection list** of technicians.

Once you've entered your sample masses and technician/test remarks/test date, it's time to enter your sieves and weight retained on each sieve.

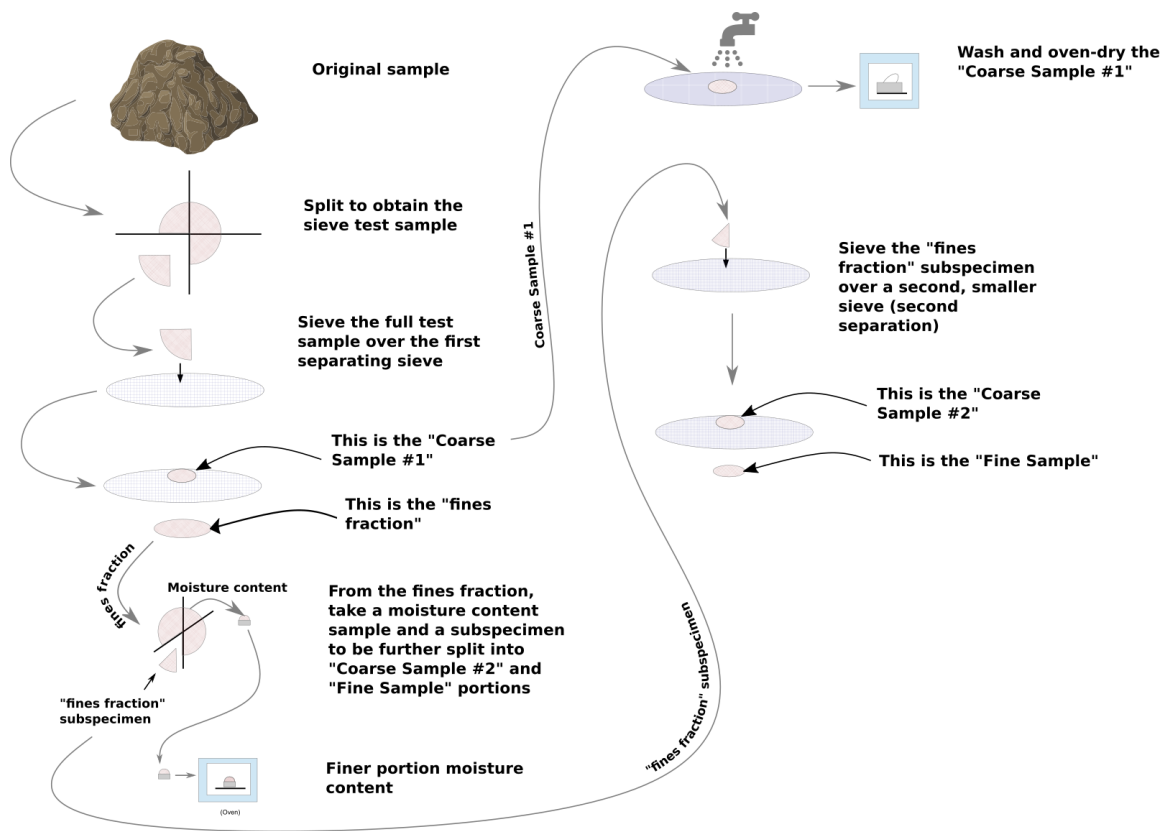


Figure 3.16: Dual Split Samples

3.2.6 D422 Sample Masses

If your sieve test follows the less complicated ASTM D422, AASHTO T 27 or related procedures, your data entry process will be simpler. For each sample that you sieve — both the original sample, and any samples you split then test — you'll need to enter the sample mass (i.e., the mass of the material placed onto the top sieve of the sieve stack).

- ⇒ If you're entering data for a post split sample that was washed and dried after splitting, but before sieving, enter the pre-wash sample mass into the "Pre-sieving masses" box.

For each sieve stack, once you've entered your sample masses, it's time to enter your sieves and weight retained on each sieve.

3.2.7 Entering the Sieve Sizes and Weight Retained Masses

Once you've entered your sample masses, it's time to enter the actual sieve data. For each sieve in your sieve stack, you'll enter the sieve size and the amount of material retained on that sieve. First, though, one final weight needs to be entered if you're using the **Cumulative weight retained** *test style*: the tare weight of the pan into which you'll be adding the material retained on each sieve.

- ⇒ If you "tared out" the scale after placing the cumulative pan on it, enter 0 as the **Cumulative Pan Tare Weight**.

Geosystem LabSuite with CBR and LBR — [Test Pit TP-2, same as #16]

Test Edit Options Window Help

Atterberg Limits CBR Classifications Grain Size LBR Moisture-Density (Proctor) Other Tests

Sample Info: Sieve Test Hydrometer Test Chart Reports

Sieve test style: Cumulative weight retained

Sieve weight units: Grams

Sieve test standard: ASTM D422 & D1140

Single or composite test: Two Splits

Sieve opening sizes: (Default opening sizes)

Pre-sieving masses

#200 Wash

Total sample:

Dry specimen and tare weight (grams) 28394.6 Tare ID Tare weight (grams) 5189

Test date

Specimen selection: Sample 1 Sample 2 Sample 3

Sieve test data

Sieve Opening Size	Cumulative Weight Retained (grams)	Percent Passing	Percent Retained	ASTM D422 & D1140	% Out of Spec.
3	719.40	96.9	3.1		
4	1206.70	94.8	5.2		
5	1717.20	92.6	7.4		
6	3480.80	85.0	15.0		

Enter the opening size of your sieve. Use a "*" to identify numbered sieves, mm, for millimeter openings.

Figure 3.17: D422 Test Sample Mass

Geosystem LabSuite with CBR and LBR — [GS Test Sets, S-1]

Test Edit Options Window Help

Atterberg Limits CBR Classifications Grain Size LBR Moisture-Density (Proctor) Other Tests

Sample Info: Sieve Test Hydrometer Test Chart Reports

Sieve test style: Cumulative weight retained

Sieve weight units: Grams

Sieve test standard: ASTM D6913 & D1140

Single or composite test: Composite (2 coarse + fines)

Sieve opening sizes: (Default opening sizes)

Pre-test sample masses

If you washed the full sample over a #200 sieve, enter the post-wash weights here:

Dry sample and tare weight (grams) Tare ID Tare weight (grams)

Percent smaller than #200 =

Enter the weight of material passing the first separation sieve ("fines fraction"):

Fines fraction + tare weight (grams) 128.7 Tare ID Tare weight (grams) 128.7

"Fines fraction" moisture content:

Wt. wet Wt. dry Tare ID Tare weight

52.83 52.14 17.51

Moisture = 2.0%

Enter the weight of the sample placed on the second separation sieve ("second separation sample"):

Separation sample + tare weight (grams) Tare ID Tare weight (grams)

Specimen selection: Coarse Sample #1 Coarse Sample #2 Fine Sample

Pre-sieving masses

Dry specimen and tare weight (grams) 165.5 Tare ID Tare weight (grams) 119.1

Post-wash (leave blank if the tested specimen was not washed):

Dry specimen and tare weight (grams) 169.5 Tare ID Tare weight (grams) 123.4

Loss from wash = 0.6%

Sieve test data

Cumulative pan tare ID Cumulative pan weight (grams) 134.5

Save Nest

Sieve test data

Sieve Opening Size	Cumulative Weight Retained (grams)	Percent Passing	ASTM D6913 & D1140	% Out of Spec.	ASTM D6913 & D1140	% Out of Spec.	ASTM D6913 & D1140	% Out of Spec.
1	3/8	134.50	100.0		50-86	+14.0	60-100	
2	#4	150.80	97.0	70.0-100.0	35-65	+32.0	50-85	+12.0
3	#10	177.80	92.1	55.0-100.0	25-50	+42.1	40-70	+22.1
4								

Enter the opening size of your sieve. Use a "*" to identify numbered sieves, mm, for millimeter openings.

Figure 3.18: Cumulative Pan Mass

3.2.8 Entering Sieve Sizes

The term *opening size* refers to the dimension of the openings in a wire mesh sieve. When you enter sieve test data, the program will need to know the opening size of each sieve used in the test – this information is entered into the **Sieve Opening Size** column on the sieve test grid.

- ⇒ Measured sieve openings should normally be entered in dimension units appropriate for the project file on which you're working: If you've configured the project to use SI units, enter your sieve opening sizes in millimeters; for a US unit project, enter your sieve opening sizes in inches. (To change your project's dimension units, start your GEOSYSTEM program, open the project, then select Project > Dimension Units).

To enter a metric opening size into a US unit project, add an **mm.** to the end of the measurement (e.g., **0.075mm.**). Similarly, to enter an opening size in inches into a SI unit project, add **in.** to the end of your measurement (e.g., **1 in.**).

- ⇒ You can enter fractional sizes such as "one half" as either a decimal number (e.g., **0.5** or just **.5**) or by using the "/" symbol as the fraction mark (e.g., **1/2**, or **1-1/2** for a 1.5 inch sieve).
- ⇒ The first numbered sieve should be entered with a "#" sign; e.g., **#4**. For subsequent sieves you can drop the "#" because **LabSuite** will assume that all sieves smaller than the first numbered sieve are also numbered sieves.

The dimensions of numbered sieves are taken from reference standards; your sieves' openings may be slightly larger or smaller than the reference sizes. For example, the standard opening size for a #10 sieve is 2mm., but if you were to average the opening sizes of a given sieve's mesh, you might come up with 1.98mm. If you were to use our hypothetical sieve in a sieve test, you might prefer that **LabSuite** program mark the percent retained on that sieve against 1.98mm. on the particle size distribution chart.

As an example, the following image is taken from a section of a particle size distribution chart. The standard sieve sizes listed at the top of the chart are always drawn at the hypothetical exact opening size (4.7mm. for the #4, 2mm. for the #10 and 0.85mm. for the #20). Within the chart are three points from a curve: notice that the left and right points fall directly on the vertical lines that **LabSuite** drew to denote the exact #4 and #20 opening sizes, while the point in the middle falls somewhat to the right of the #10 line: When this test was entered, the measured dimension of the #10 sieve used for the test was noted as being 1.9mm.; the #4 and #20 sieves were left as-is.

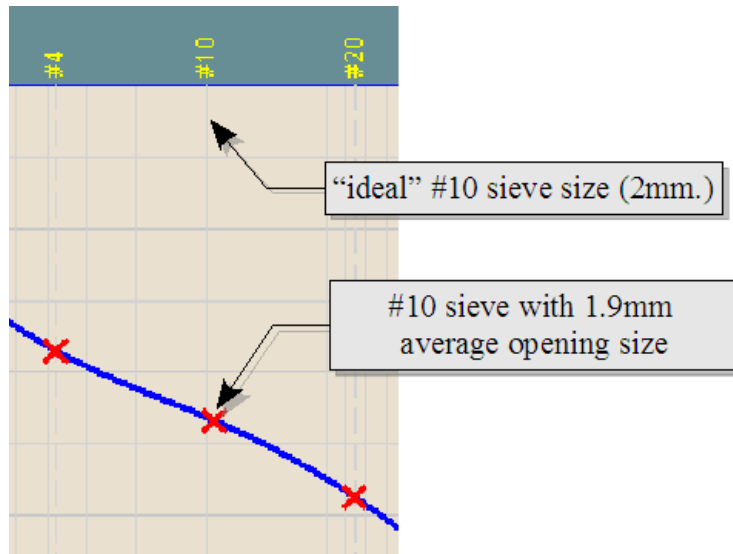


Figure 3.19: Selecting the Size of a Numbered Sieve

If you've had your sieves' opening sizes measured and would like to use the measured sizes:

1. Use the program's **sieve opening sizes tool** to specify the measured opening sizes of a batch of sieves that you'll be using.
2. In the **Sieve opening sizes** box at the **top of the sieve test data screen**, select your opening size list.

3.2.9 Entering Sieve Weights

After entering each sieve's opening size, you'll need to enter the weight of material retained on that sieve:

- If you're using the cumulative weight retained **test style**, you'll need to enter the weight of the cumulative pan with the sieve's retained material.
- If you're using the per-sieve weight retained test method, you'll need to enter two weights: a) the weight of the sieve along with the material retained on the sieve, and b) the weight of the empty sieve.

Optionally, after you've entered your sieve data, you can enter the mass of the material passing the smallest sieve.

3.2.10 Pan Mass

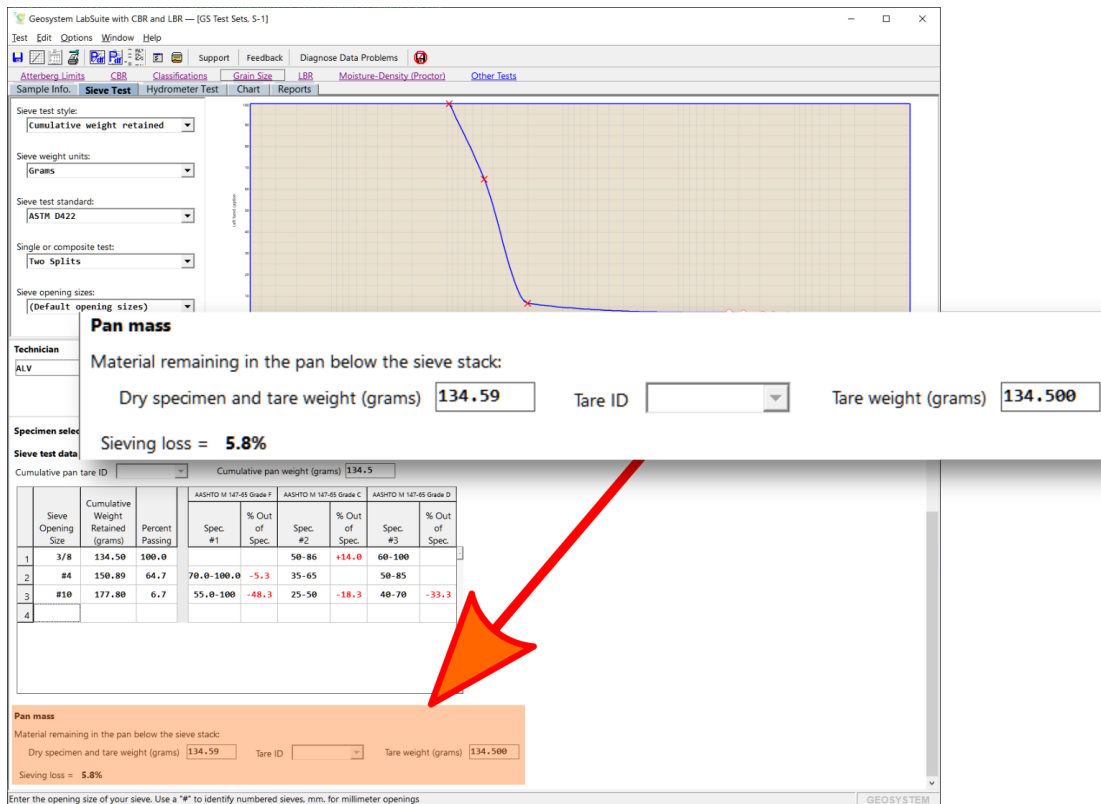


Figure 3.20: Pan Mass

After you've entered a sieve stack, you can optionally enter the mass passing the smallest sieve in the stack (as captured by a pan below the stack). If you enter this value, **LabSuite** can calculate:

- The percentage of material "lost" during sieving. This is calculated by taking the original sample weight and subtracting the pan weight plus the sum of the material retained on all of the sieves in the sieve stack.
 - The total percentage of the sample lost during the testing process. **If the sample was washed then dried before sieving** (D6913 tests only), **LabSuite** will add the missing sieving material to the material washed out to determine the total material loss.
- ⇒ For non-D6913 test specifications, post-split samples that have been washed post-split, but before testing: the total material loss number will include the material lost during washing; i.e., any material smaller than the wash sieve. This is a limitation of these specifications' data collection requirements.

3.2.11 Saving the Current Test as a Sieve Nest

After you've entered your *entire* sieve test you can save the list of sieves that you've entered as a *sieve nest*: Before entering another test that uses the same set of sieves, if you select your saved sieve

nest from the dropdown **Sieve nest** box you can avoid entering the test's sieve sizes because *LabSuite* will fill them in for you.

To save a test's list of sieves as a sieve nest:

1. Enter all of your sieve test data (if you've split your sample, enter the split test(s) as well).
 2. Click on the **Save Nest** button.
 3. Enter a name into the **Sieve nest name** field. There are no restrictions on what you can use as a name, but the program will display a warning message if you try to use a name that's already used by another sieve nest.
 4. After you've entered a name for the list of sieves, click the **Save** button.
- ⇒ If you find that there's already a name entered into the **Sieve nest name** field, it means that *LabSuite* has found a sieve nest that exactly matches the one that you're trying to save – since the exact same sieve nest is already entered into the program's list, you may not want to save it a second time.
- ⇒ You can delete and modify saved sieve nests through the program's **Setup dialog**: Select Options > Program Setup then click on **Sieve Nests** in the left-hand navigation panel.

Once you've added your sieve nest to the program's sieve nest database, when you begin data entry for a new sieve test, start by selecting your sieve nest from the drop-down **Sieve nest** list in the toolbar at the top of the screen: *LabSuite* will fill in the test's **Sieve Opening Size** column with your saved sieve sizes, meaning that you can skip entering the size of each sieve. As an example, Figure 3.21 shows the sieve test data entry screen after the built-in *ASTM D422 Uniform-Spacing Set* sieve nest was selected:

The screenshot shows the Sieve Test Data Entry Screen. On the left, there are input fields for Technician, Test remarks, Test date, and Pre-sieving masses (Total sample, Dry specimen and tare weight, Tare ID, Tare weight). At the bottom left is a dropdown for Sieve nest, currently set to 'ASTM D422 Recommended Sieve Set #1', with a 'Save Nest' button next to it. In the center is a table with 8 rows and 3 columns: Sieve Opening Size, Cumulative Weight Retained (grams), and Percent Passing. The first row is pre-filled with '3', '0', and '0' respectively. To the right of the table are fields for Cumulative pan tare ID, Cumulative pan weight (grams), Pan mass, Material remaining in the pan below the sieve stack, Dry specimen and tare weight (grams), Tare ID, Tare weight (grams), and Sieving loss.

	Sieve Opening Size	Cumulative Weight Retained (grams)	Percent Passing
1	3		
2	2		
3	1.5		
4	1		
5	.75		
6	.375		
7	#4		
8	#10		

Figure 3.21: Sieve Test Data Entry Screen After Sieve Nest Selection

If you were entering data for this test, you'd be asked to enter only the weight retained on the 3 inch sieve. The **Sieve Opening Size** column is automatically skipped because it has already been filled in for you. When you press Enter after entering the weight retained on the 3 inch sieve, you'll be asked for the weight retained on the 1.5 inch sieve — the 1.5 inch **Sieve Opening Size** column is skipped.

- ⇒ **If you need to enter data for a sieve not listed in the sieve nest that you selected:** When you reach the sieve test grid row for the first sieve *smaller* than the missing sieve, select Edit > Insert Data Row.
- ⇒ **If your selected sieve nest that has sieves you didn't use in your actual test, you can delete the extra as follows:** In the sieve test grid, click on the unneeded sieve entry, then select Edit > Delete Data Row.
You can also ignore the blank row, as **LabSuite** simply skips over them when doing calculations.

3.3 Hydrometer Test Data Entry

The hydrometer test data entry screen may be viewed by selecting Window > Hydrometer Test, or by clicking on the **Hydrometer Test** navigation tab.

3.3.1 Test Background Information

Before entering your hydrometer test readings, you'll need to enter a little background information on the tested sample and your test procedure:

Hydrometer test standard
ASTM D7928

Hydrometer sample
Separation sieve #10 Separation sieve % passing 92.1
Dry mass obtained via water content ☐ Dry sample+dispersant (grams) 125
Specific gravity 2.67 Assumed ☐
Dispersant mass (grams) 4.99 Foam inhibitor used ☒

Equipment IDs
Balance ID Ba-1
Thermometer ID T-12
Oven ID O-132
Wash sieve ID WS-120

Sedimentation cylinder
ID S-1
Area (cm²) 27.8 Volume (cm³) 1000

Hydrometer
ID H-1 151H 152H
Submerged volume of hydrometer bulb (cm³) 54
Top of scale to buoyancy center (cm) 18.6
Bottom of scale to buoyancy center (cm) 7

Corrections
Compensation reading temperature correction
Calibration relation temperature correction

Technician
HBR

Test remarks
No problems encountered during test.

Test date
08/21/2021

Hydrometer test readings

	Elapsed Time (min)	Temp. (deg. C)	Actual Reading	Corrected Reading	Eff. Depth	Diameter (mm)	Percent Finer
1	1.00	19.5	51.90	43.13	7.3	0.0366	32.9
2	2.00	19.5	46.80	38.03	8.2	0.0274	29.1
3	5.00	20.0	39.70	31.09	9.5	0.0186	23.8

Enter the elapsed time in minutes. Do not enter a "0" elapsed time.

Figure 3.22: General Hydrometer Test Parameters

Hydrometer test standard

LabSuite supports both the newer ASTM D7928 standard, as well as the retired D422 standard, and the related AASHTO T 88 standard. Since D7928 requires a very different data set than D422 and T 88, make sure you've made the correct selection before proceeding.

Separation sieve

The separation sieve is the sieve used to separate the material used in the sieve test from the material to be used in the hydrometer test. Typically (i.e., per ASTM D6913) the $\frac{3}{4}$, $\frac{3}{8}$, or #4 sieve is used.

Separation sieve % passing

The program usually imports the separation sieve percentage from your sieve test data; however, if you didn't enter a sieve test, use this field to enter the percent finer as a number between 0 and 100.

⇒ This field will be disabled if you've already entered a sieve test and your sieve test opening size range covers the size of sieve you selected as your hydrometer test separation sieve.

Dry mass obtained via water content

(D7928 only)

D7928 offers two options for determining the hydrometer sample dry mass: 1) using the moist sample mass and an accompanying moisture content test, divide the moist mass by 1 + the water content percentage, and 2) oven-drying the sample after testing, then subtracting the dispersant mass. If you used procedure 1), check the **Dry mass obtained via water content** box.

Dry sample + dispersant (grams)

*(D7928 only, not available if the **Dry mass obtained via water content** option is selected)*

If the hydrometer sample's dry mass is determined by using the wet sample mass along with a moisture content test, enter the wet hydrometer sample mass here.

Moist sample mass (grams)

*(D7928 only, only available if the **Dry mass obtained via water content** option is not selected)*

If the hydrometer sample's dry mass is determined by drying the sample post-test, enter the dried mass here.

Sample mass (grams)

(D422 and T 88 only)

This is the weight of the hydrometer sample, *not* the weight of the material passing the separation sieve.

Specific gravity

Enter the specific gravity of the sample. Note that the specific gravity value has a large effect on the calculated percentages, so if you're assuming a value, be careful to ensure that it's actually representative of the material you're testing.

Assumed

Check this box if you did not actually perform a specific gravity test on the material.

Dispersant mass (grams)

(D7928 only, only available if the **Dry mass obtained via water content** option is not selected)

If the hydrometer sample's dry mass is determined by drying the sample post-test, the program will need to know the mass of dispersant added to the dispersant cylinder. (The mass of the dispersant must be subtracted from the oven-dry sample mass to determine the true dry mass of the sample.)

Foam inhibitor used

(D7928 only)

This is an item listed in D7928's reporting requirements section. It does not affect any calculated data.

3.3.2 Hydrometer Equipment IDs

The **Balance ID**, **Thermometer ID**, **Oven ID**, and **Wash sieve ID** items are included due to D7928 reporting requirements. They're reported only on **data summary reports**, and may be left blank if you aren't required to collect and report this information.

⇒ **LabSuite** automatically adds your equipment IDs to popup selection lists. You can add your own IDs to these lists, or edit or delete entries, using the instructions [here](#)

After entering (or skipping) the equipment ID section, test entry differs between D7928 and D422/T 88. The following sections cover both test procedures in detail.

3.3.3 D7928 Hydrometer Test Data Entry

Sedimentation cylinder

LabSuite needs your sedimentation cylinder's cross-sectional area and volume for its calculations. The **ID** is optional (it's required by D7928 reporting requirements, but listed by **LabSuite** solely on the **data summary report**); if you do enter IDs, the program will remember the area and volume you entered for those IDs, and will autofill the **Area (cm²)** and **Volume (cm³)** fields with the corresponding values from the last test that used the same ID.

Hydrometer specifications

ID

As with the sedimentation cylinder ID, the hydrometer ID is only listed on the test's **data summary report**, but if you enter one, **LabSuite** will remember the hydrometer type, bulb volume, and top and bottom hydrometer scale values associated with that hydrometer.

151H**152H**

Check either **151H** or **152H**, depending upon the type of hydrometer used for your test.

Submerged volume of hydrometer bulb (cm³)

(Note that this includes everything from the bottom tip to the base of the stem.)

Top of scale to bouyancy center (cm)**Bottom of scale to bouyancy center (cm)**

These are the distances in centimeters from the top and bottom of the scale markings to the mark you've made on the hydrometer to indicate the center of bouyancy.

Hydrometer test temperature corrections

D7928 requires the correction of hydrometer readings to account changing temperatures (which alter the density of the test fluid), as well as for the height of the meniscus. The software supports both of the standard's correction options:

- ⇒ **Companion reading temperature correction** requires a second cylinder filled with the same test fluid, but without any sample material. Hydrometer readings are taken in this cylinder immediately after taking a reading in the cylinder with the sample material.
- ⇒ **Calibration relation temperature correction** is similar to the old D422's correction method, where a table is made of hydrometer readings and fluid temperatures is taken in a test fluid-filled cylinder, with the temperature of the fluid varying between readings. With this method you also have to take the fluid temperature of your sediment-filled cylinder at periods during the test.

If you pick the **Calibration relation temperature correction** option, you need to enter between two and six pairs of temperature and hydrometer readings. Again, these readings are taken in a cylinder without sediment, and should be at unique temperatures.

- ⇒ Hydrometer correction readings should be taken from the top of the meniscus.
- ⇒ *Unlike D422 correction readings, D7928 hydrometer correction values are entered as positive numbers.*
- ⇒ Corrections for 151H hydrometers should be entered as the number of thousands; e.g., **6.0** instead of **.006**.

Meniscus correction

This value is the height of the meniscus, as a positive value indicating the height of the meniscus in hydrometer gradations (e.g., for 152H, usually between +.5 and +1). For the 151H hydrometer, make sure to enter the correction as the number of thousands (e.g. **0.3** instead of **0.0003**).

The screenshot shows the LabSuite Hydrometer Test interface. A red arrow points to the 'Hydrometer reading' input field in the 'Sedimentation cylinder' section, which is part of the calibration relation table. The table is as follows:

Temp, C	18	20	22	24	26
Hydrometer reading	9	8.75	8.25	7.5	5.75

Below the table, there is a 'Meniscus correction' field with a value of -1. The interface also includes sections for 'Equipment IDs', 'Moisture content', 'Hydrometer', and 'Hydrometer test readings'.

Hydrometer test readings

	Elapsed Time (min.)	Temp. (deg. C)	Actual Reading	Corrected Reading	Eff. Depth	Diameter (mm.)	Percent Coarser
1	1.00	19.5	51.90	43.13	7.3	0.0366	65.1
2	2.00		46.80	38.03	8.2	0.0274	69.2
3	5.00	20.0	39.70	31.09	9.5	0.0186	74.8

Figure 3.23: D7928 Calibration Relation Table

Technician, test remarks, and test date

These items are part of D7928's mandatory reporting requirements. Note that, if you enter a **Technician**, *LabSuite* will automatically add the name to a popup **selection list** of technicians.

The hydrometer test readings grid

For each hydrometer reading, enter the elapsed time (in decimal minutes; e.g., 1 minute thirty seconds should be entered as **1.5**), the temperature (in °C) and the hydrometer reading. 151H readings should be entered as the number of thousands (e.g. if the reading is 1.0279, enter it as **27.9**).

- ⇒ Use the Enter key to change between cells on the grid; e.g., after you've typed in an elapsed time, press Enter to jump to the temperature column.
- ⇒ After entering the **Elapsed Time**, you'll be asked to enter the fluid temperature. If it's the same as the temperature on the row above the one on which you're typing, you can skip entering a temperature by simply pressing Enter to leave the **Temp** column blank.
- ⇒ The program also asks for fluid temperatures when you've chosen the **>Companion reading temperature correction** method. Please note that *these temperatures are*

not used for any calculations when using the companion reading correction method. Collection of fluid temperatures when using the companion reading method serves no purpose, other than to fulfill a D7928's data collection requirement.

- ⇒ If you're using the **Companion reading temperature correction** method, after the fluid temperature you'll be asked enter the hydrometer reading taken in the companion cylinder. If you did not take a companion reading for the current row's data, or if the companion reading was the same as the last-entered companion reading, leave the column blank by pressing Enter without entering anything.

3.3.4 D422/T 88 Hydrometer Test Data Entry

Hygroscopic moisture

If you performed a hygroscopic moisture test on your hydrometer sample, enter the test weights into the **Hygroscopic moisture** box.

- ⇒ The **Container ID** field is used if you've entered container weights and IDs into the program's **container list**: Rather than entering the weight of the container that you used for the hygroscopic moisture test, you can enter the ID of the container **LabSuite** will look up the corresponding weight. **Container ID** is not enabled unless you've selected **tare ID** at the **Container weights are entered as prompt** on the program's Setup dialog (**Options** > **Program Setup** then click on **Data Entry** in the left-hand navigation panel).
- ⇒ **LabSuite** will assume zero percent hygroscopic moisture uptake if you do not enter any hygroscopic moisture data.

Hydrometer specifications

151H

152H

Check either **151H** or **152H**, depending upon the type of hydrometer used for your test.

Effective depth equation

In almost all cases, the default values given for the equation should be accepted as-is. Before modifying these values, consult D422's *Diameter of Soil Particles* calculation section (currently Section 15), and the program's Technical Documentation chapter.

- ⇒ The default values for a 151H hydrometer are

$$L = 16.294964 - 0.2645 \cdot R_m$$
 The default values for a 152H hydrometer are

$$L = 16.294964 - 0.164 \cdot R_m$$

Hydrometer test temperature corrections

D7928 requires the correction of hydrometer readings to account changing temperatures (which alter the density of the test fluid), as well as for the height of the meniscus.

Single-point (automatic) temperature correction

Multi-point (linear regression) temperature correction

ASTM D422 specifies that hydrometer readings are to be corrected for differences due to temperature, meniscus, and dispersing agent specific gravity: A graph of correction vs. temperature is prepared and each hydrometer test reading is adjusted based on the correction value read off the graph at the test fluid temperature.

LabSuite also offers an alternative to ASTM's multi-point correction procedure: If you take a single correction measurement at a fluid temperature of 20° centigrade, **LabSuite** can use a standard formula for the change in fluid density as a function of temperature to determine appropriate correction values at other temperatures.

- To use the ASTM D422 correction procedure, select **Multi-point (linear regression) temperature correction**. You'll be asked to enter up to six hydrometer readings and the corresponding temperature (in °C) of the fluid at each reading.
 - To use **LabSuite's** single correction point procedure, select **Single-point (automatic) temperature correction**. You'll be asked to enter a correction measurement taken at a fluid temperature of 20° centigrade.
- ⇒ Hydrometer correction readings should be taken from the top of the meniscus using the liquid solution (without soil!) that will be utilized for the actual test.
- ⇒ **Hydrometer correction values are the negative of the readings that you take (e.g., if your reading was 6, enter -6).**
- ⇒ Corrections for 151H hydrometers should be entered as the number of thousands; e.g., **-6.0** instead of **-.006**.

Meniscus correction

This value is the height of the meniscus, and should be **0** if all hydrometer test readings were taken at the bottom of the meniscus; otherwise, it should be a positive number indicating the height of the meniscus in hydrometer gradations (e.g., for 152H, usually between +.5 and +1). For the 151H hydrometer, make sure to enter the correction as the number of thousands (e.g. **0.3** instead of **0.0003**).

Technician, test remarks, and test date

These items are optional. Note that, if you enter a **Technician**, **LabSuite** will automatically add the name to a popup **selection list** of technicians.

The hydrometer test readings grid

For each hydrometer reading, enter the elapsed time (in decimal minutes; e.g., 1 minute thirty seconds should be entered as **1 . 5**), the temperature (in °C) and the hydrometer reading. 151H readings should be entered as the number of thousands (e.g. if the reading is 1.0279, enter it as **27 . 9**).

- ⇒ Use the Enter key to change between cells on the grid; e.g., after you've typed in an elapsed time, press Enter to jump to the temperature column.
- ⇒ After you've typed in the elapsed time, you can skip entering the fluid temperature if it's the same as the temperature on the row above the one on which you're typing: press Enter twice to skip the temperature column.

4. Viewing and Modifying the Particle Size Curve

To display a chart of the particle size distribution curve, select Window > Chart, or click on the **Chart** navigation tab.

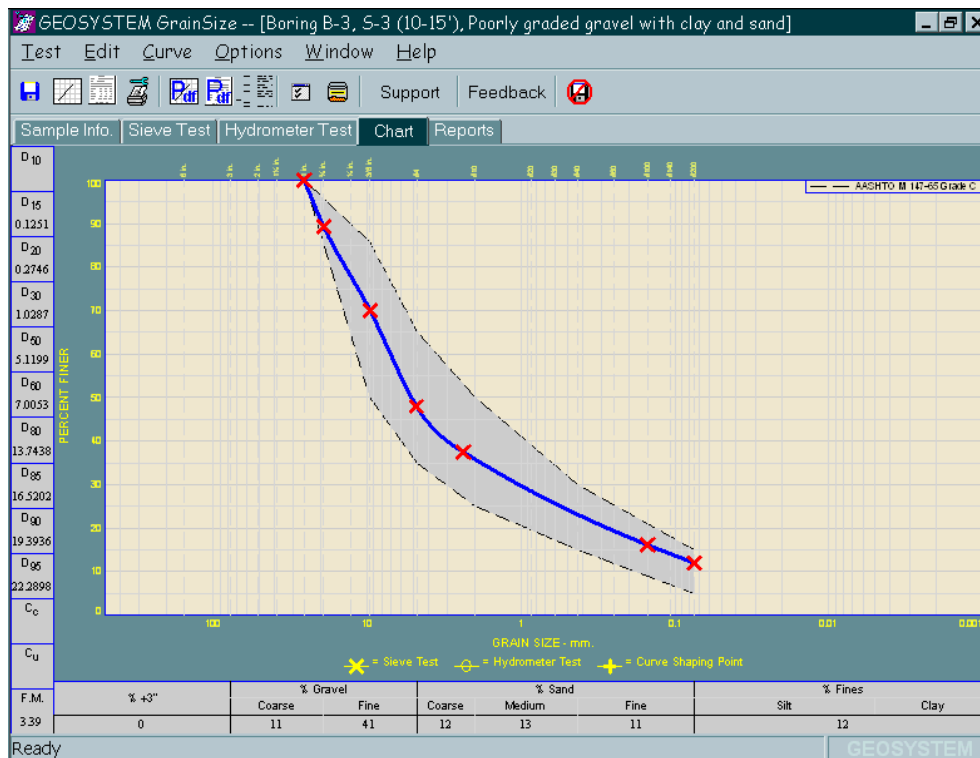


Figure 4.1: Particle Size Chart Review Window

⇒ (FYI: " C_u " stands for *Coefficient of uniformity*; " C_c " stands for *Coefficient of curvature* and "F.M." stands for *Fineness Modulus*.)

If you find that your test data has resulted in an irregularly shaped curve, you can reshape it from this screen:

To reposition the curve:

The shape of the curve may be adjusted by forcing it to pass through a new point. To do this, select Curve > Add Shaping Point. When the mouse cursor changes to a cross, move the cursor to the location desired for the curve to pass through, then click the left mouse button. The new point (called a *shaping point*) will be marked with a "+".

When shown on a **chart report**, the curve will pass through the new point, although no marker will be plotted to mark the point.

To delete a shaping point:

To remove a shaping point, select Curve > Delete Shaping Point, then move the mouse cursor close to the shaping point (remember, shaping points are drawn with markers that look like " + " signs) then click the left mouse button.

To remove all shaping points:

Select Curve > Delete All Shaping Points.

If the curve's shape cannot be adjusted satisfactorily, you can select Curve > Do Not Draw Curve: This stops the program from drawing the curve on the chart report. Markers showing the position of each test point will still be drawn.

4.1 Selecting the .45-Power Curve Maximum Density Line

When plotting a **diameter^{0.45} grain size chart**, the program can be configured to draw a maximum density line from the chart origin to 100 % finer at a selectable maximum particle size.

To select a maximum particle size:

Drop down the toolbar list box labeled **Max. dens. size** and choose a sieve size from the list.

To turn off the maximum density line:

Select < **omit** > in the **Max. dens. size** toolbar list box.

4.2 The Chart Calculator

When you're previewing the grain size chart chart, selecting Curve > Calculator opens a dialog where you can check the percent of material smaller than a given particle size, or determine the particle size that corresponds to a particular percentage.

- ⇒ To calculate the percent of material smaller than a particular particle size, enter the size into the dialog's **Particle size** box. If you're working with a project using US dimensions add **mm.** at the end of the particle size if you're entering a size in millimeters. Conversely, if you're working with an SI-dimensioned project, add **in.** to enter a size in inches. Numbered sieves need to have **#** at the front; e.g., **#200**.
- ⇒ To calculate the particle size corresponding to a particular percentage, enter the percentage into the **Percent smaller** or **Percent larger** box.

5. Entering Atterberg Limits Test Data

Data entry for an Atterberg limits test involves two steps:

- Sample background information, which covers basic information about the sample tested.
- Atterberg test data entry, which involves the actual liquid and plastic limit test data, along with, optionally, natural moisture data.

Begin by selecting Test > Enter LIMITS Data. The following sections discuss each subsequent data entry step in further detail.

5.1 Atterberg Limits Sample Information

The initial Atterberg limits data entry window covers basic information about the tested sample. This window is displayed by clicking on the **Sample Info.** navigation tab, or by selecting Window > Sample Info. The display is similar to the grain size test sample information window covered [here](#).

GEOSYSTEM LIMITS -- [Sample Source, A-1 (Grade)]

Test Edit Options Window Help

GrainSize LIMITS Classifications

Sample Info. Test Data Reports

Material Description [Click here to select from a list of material descriptions](#)

Silt and Sand with Clay, Trace Gravel

%<#40 %<#200

USCS AASHTO

Tested by Checked by

A. Layne ALU

Testing Remarks

Ready GEOSYSTEM

Figure 5.1: Atterberg Limits Sample Information Window

5.2 Atterberg Limits Test Entry

LabSuite's Atterberg test data entry window may be viewed by selecting Window > Test Data or by clicking on the **Test Data** navigation tab.

GEOSYSTEM LIMITS -- [Sample Source, S-1 (0-5')]

Test Edit Options Window Help

GrainSize LIMITS Classifications

Sample Info **Test Data** Reports

Liquid limit

"Standard" Liquid Limit Test Oven-Dried Organics Check

Run No.	1	2	3	4
Wt. w+t	33.62	40.46	36.6	35.49
Wt. d+t	26.22	30.97	27.88	26.51
Tare	2.34	2.34	2.34	2.34
Blows	34	27	22	17
Moisture	31.0%	33.1%	34.1%	37.2%

☐ HV ☐ Use ASTM D 4318 1-point calculation method

Plastic limit

Run No.	1	2	3	4
Wt. w+t	42.72	48.65		
Wt. d+t	39.81	45.18		
Tare	3.75	3.75		
Moisture	8.1%	8.4%		

☐ HIP

Natural moisture (optional, for liquidity index calculation)

Wt. w+t	Wt. d+t	Tare	Moisture
300	220	10	38.1

LL=34 PL=8 PI=26 LI=1.2

Click to use the ASTM D 4318 Method B liquid limit calculation

GEOSYSTEM

Figure 5.2: Atterberg Limits Test Data Entry Window

Data entry for the liquid limit, plastic limit and natural moisture tests is covered in the following sections.

5.2.1 Liquid Limit Test Data Entry

LabSuite supports *two* distinct liquid limit tests per sample: one on the as-received sample and a second (*optional*) test on an oven-dried portion of the sample. (The oven-dried test is used as an organics check by the ASTM D2487 (USCS) classification.) Before entering liquid limit data, click on the **"Standard" Liquid Limit Test** tab. Afterwards, if you need to enter an oven-dried liquid limit test, click on the **Oven-Dried Organics Check** tab then enter your oven-dried liquid limit data.

Tare ID

If the option to **enter container weights as tare IDs** has been selected, data entry begins by selecting an ID from the drop-down tare ID list. Once an ID is chosen, **Tare** box will be filled in with the weight corresponding to that container.

⇒ If you haven't yet entered the container and its weight into the program's container list, see § 2.8 for instructions on adding it. Alternatively, the tare ID field may be left blank and a tare weight may be manually entered.

Wt. w + t

Wt. d + t

Tare

These are, respectively: the weights (in grams) of the wet soil and container, dry soil and container and the container by itself.

Blows

Enter the number of blows required to close the grooved soil.

NV

Check this box if the liquid limit could not be determined.

Use ASTM D4318 1-point calculation method

If the liquid limit test is to be calculated by the ASTM one-point method, click on this check box.

Note that the one-point option may be selected for either the natural or oven-dried liquid limit or both – the check box lists the selection for the soil type (natural or oven-dried) currently selected. For example, to select the one-point method for the oven-dried sample, first click on the **Oven-Dried Organics Check** soil-type tab, then click on the **Use ASTM D4318 1-point calculation method** check box.

5.2.2 Plastic Limit Test Data Entry

LabSuite supports up to 4 plastic limit moisture content tests. Data entry is similar to the liquid limit procedure covered above.

NP

Check this box if the plastic limit could not be determined (the check box is only available if you haven't entered any plastic limit data).

5.2.3 Natural Moisture Test Data Entry

The software also accepts data for a natural moisture content test used to calculate the soil's liquidity index.

- ⇒ Natural moisture content entry is optional; it's not required in order to calculate the soil's liquid or plastic limit or the plasticity index.

6. Soil Classifications

After you've entered your grain size and Atterberg test information, you may want to check the soil classification values that the program has calculated for your data. Begin by selecting Test > Enter Classifications Data, then use the various menu selections underneath Window (e.g., Window > USCS or Window > AASHTO, etc.) to view the program's classification windows.

- ⇒ Although the program will normally extract the sieve percentages and Atterberg limits values needed to classify your soil directly from your grain size and Atterberg test data, you can also opt to skip entering testing data and directly enter your own sieve percentages and Atterberg values into the program's classification windows.

6.1 USCS Classification

Select Window > USCS to view the USCS classification window.

The screenshot shows the 'GEOSYSTEM Classifications - [Sample Source, S-1 (0-5')]' window. The 'USCS' tab is selected. The form is titled 'USCS (ASTM D 2487) Soil Classification' and contains the following sections:

- Sieve percentages:**
 - Larger than 3in. (75mm.): 3.1
 - Smaller than #4: 62.8
 - Smaller than #200: 8.1
- Atterberg limits:**
 - Liquid limit: 34
 - Plastic limit: 8
 - Oven dry liquid limit: 48
- Diameters at X percent:**
 - 60 percent (D60): 4.1078
 - 30 percent (D30): 0.7972
 - 10 percent (D10): 0.1317
- Group symbol and name:**
 - Group symbol: SW-SC
 - Name: well-graded sand with clay and gravel
 - Borderline soil type: ☐ Second symbol:
 - Add the group name to your soil description:
 - Insert Group Name at the Cursor:

A warning message is displayed: '+3" material in the sample may invalidate the classification. (Click on this note for help.)'

Figure 6.1: USCS Classification Data Entry Window

Sieve percentages

Enter these values as numbers between 0 and 100.

- ⇒ The first field requires the percentage *retained* on the sieve, while the other sieve percentages reflect the percent *passing* each sieve.

Atterberg limits

Enter the liquid and plastic Atterberg limits for the soil.

- ⇒ The oven-dry liquid limit is used only for classifying possibly organic fine-grained soils (i.e, when 50 percent or more of the sample is fines). The oven-dry liquid limit field may be left blank when classifying coarse-grained soils, or fine-grained soils where the organic content is known to be minimal.

Diameters at X percent

These values, which represent the grain-size in millimeters at which 60, 30, and 10 percent of the sample is finer.

- ⇒ Diameters are required only when classifying coarse-grained soils.
- ⇒ If, after entering your grain size test data, the D10 value is blank, and a coarse-grained soil is being classified, select Test > Enter GrainSize Data then select Window > Chart. Next, add a shaping point on the right-side of the curve that extends the curve below the 10 % scale line (this interpolates a D10 value), then return to your classification window (Test > Enter Classifications Data. (Again, since D10 is used only when classifying coarse-grained soils, this procedure is not required if 50 % or more of the sample consists of fines.)

Borderline soil type**Second symbol**

The software allows you to enter a second classification symbol if you think that the soil is on a borderline between two classifications (see ASTM D2487, Section 1.1). Doing so assigns the soil a dual classification such as "CL/CH" or "GM/SM": the first classification is the one selected by the program, and the classification after the slash is the one you choose.

If you want to assign a *dual classification* to the soil, click on the **Borderline soil type** check box, then enter the soil's second classification into the **Second symbol** box. (Note that the slash "/" is automatically added so you do not need to enter it as part of the second classification.)

- ⇒ The **Borderline soil type** check box will be disabled if the program classifies your soil using a dual symbol such as **GP-GM** or **CL-ML**.

Add the group name to your soil description**Insert Group Name at the Cursor**

The box underneath **Add the group name to your soil description** lists your current soil description: if you'd like to insert the classification group symbol into the description, click inside the box, move the editing cursor to the position where the group symbol is to be located, then click on the **Insert Group Name at the Cursor** button.

6.1.1 Classifying Soil with +3 Inch Material

When your sample contains material larger than 3 inches the program's classification system recalculates the **Smaller than #4** and **Smaller than #200** values to remove the influence of the plus 3 inch material (i.e., the #4 and #200 values are calculated based on a sample that has *no* material larger than 3 inches). This is done because the ASTM D2487 classification is based exclusively on material smaller than 3 inches.

⇒ The calculation is:

$$\text{biased \#4 material} = \frac{\text{actual \#4 material}}{100 - \text{plus 3 inch}}$$

While the program can remove the influence of the plus 3 inch material from the #4 and #200 sieve percentages, it cannot do the same for the **Diameters at X percent** values, so the D_{60} , D_{30} and D_{10} values will continue to reflect the numbers calculated for the whole sample (including plus 3 inch material); the #4 and #200 values will reflect a sample without any material larger than 3 inches. This may or may not cause the program's classification to be invalid (the D_x values are only used to distinguish between **GW** and **GP** and between **SW** and **SP**).

6.2 AASHTO Classification

Select Window > AASHTO to view the AASHTO M 145 classification window.

The screenshot shows the 'AASHTO M 145 (ASTM D 3282) Soil Classification' window. It contains the following data:

Sieve percentages			
Larger than 3in. (75mm.)	Smaller than #10	Smaller than #40	Smaller than #200
3.1	46.2	20.2	8.1

Atterberg limits	
Liquid limit	Plastic limit
34	8

☐ Highly organic soil

AASHTO classification

A-2-6(0)

Figure 6.2: AASHTO Classification Data Entry Window

Sieve percentages

Enter these values as numbers between 0 and 100.

⇒ The first field requires the percentage *retained* on the 3 inch/75 mm. sieve, while the other sieve percentages reflect the percent *passing* the various sieves.

Atterberg limits

Enter the liquid and plastic Atterberg limits for the soil.

Highly organic soil

Checking this box forces the soil's classification to be **A-8**.

6.3 Burmister Classification

Select Window > AASHTO to view the AASHTO M 145 classification window.

Figure 6.3: Burmister Classification Data Entry Window

Sieve percentages

Enter these values as numbers between 0 and 100.

- ⇒ The first field requires the percentage retained on the 3 inch/75 mm sieve, while the other sieve percentages reflect the percent passing the various sieves.
- ⇒ Note: All fields require data; if all material is smaller than a particular sieve enter 100 as the percent passing, if all material is larger, enter 0 as the percent passing.

Overall plasticity index

This is the plasticity index of the entire specimen.

Smallest thread diameter

This is the diameter (in inches) of the smallest thread that could be rolled at the ball moisture of the specimen.

Color

Used to briefly describe the soil color.

Grain shape

Use this field to enter a brief description of the grain shape (e.g., water worn, angular, etc.).

Other

Use this field to enter any additional information that you want to add to the end of the identification.

Principal component

Select either **Granular** or **Clay** as the component of primary influence on the behavior of the soil. This is based on engineering judgment.

Add the ID or symbol to your soil description**Insert at the Cursor**

The box underneath **Add the ID or symbol to your soil description** lists your current soil description: if you'd like to insert the either the Burmister identification or symbol into the description, click either **Insert ID** (to insert the identification) or **Insert symbol** (to insert the symbol), then click inside the description box, move the editing cursor to the position where the group symbol is to be located, then click on the **Insert at the Cursor** button.

6.4 USDA Classification

Select Window > USDA to view the USDA classification window.

Figure 6.4: USDA Classification Data Entry Window

Sieve percentages

Enter these values as numbers between 0 and 100.

- ⇒ Note: All fields require data: if all material is smaller than a particular sieve enter 100 as the percent passing, if all material is larger, enter 0 as the percent passing.

Checked by

LabSuite includes a USDA **chart report** showing the textural triangle and the classifications for a number of soil samples; below the border of the report you can list the name of a the person who has reviewed the classification data by entering that person's name into the **Checked by** field.

- ⇒ When printing a USDA chart report that includes multiple soil samples on a single page, **LabSuite** will use the "Checked by" name entered for the first sample placed on the report page.

6.5 AS 1726 Classification

Select Window > AS1726 to view the Australian Standard 1726 classification window.

Figure 6.5: AS 1726 Classification Data Entry Window

The AS 1726 data entry fields are identical to those described in the [USCS Classification section](#).

7. Entering Moisture-Density Test Data

Data entry for a moisture-density test involves two steps:

- Sample background information, which covers basic information about the sample tested.
- Test data entry, which involves entering the actual compaction test data.

Begin by selecting **Test** > **Enter Proctor Data**. The following sections discuss each subsequent data entry step in further detail.

7.1 Moisture-Density Sample Information

The initial moisture-density data entry window covers basic information about the tested sample. This window is displayed by clicking on the **Sample Info.** navigation tab, or by selecting **Window** > **Sample Info**. The display is similar to the grain size test sample information window covered [here](#).

7.2 Moisture-Density Test Entry

LabSuite's moisture-density test data entry window may be viewed by selecting **Window** > **Test Data** or by clicking on the **Test Data** navigation tab.

The screenshot shows the 'GEOSYSTEM Proctor -- (B-3, 6-9)' window. The 'Test Data' tab is selected. The window contains several input fields and a table for data entry.

Test specifics

- Curve number:
- Test specification:
- Soil specific gravity: ZAV curve specific gravity:

Sieve percentages

- Percent oversize (% larger than #4 sieve):
- Percent smaller than the #200 sieve:

Oversize correction

- Bulk specific gravity:
- Oversize moisture (%):

Test data

Point No.	1	2	3	4	5	6
Wt. mold-soil (gms.)						
Wt. mold (gms.)						
Mold volume (cu. ft.)						
Wet density (g/cm ³)						
Wt. wt+1 (gms.)						
Wt. wt+4 (gms.)						
Tare (gms.)						
Moisture (%)						
Dry Density (g/cm ³)						

Note: Dry density and moisture content results are reported with applied oversize correction.

Enter an identification for the soil (this is optional)

Figure 7.1: Moisture-Density Test Data Entry Window

The following subsections cover each section of the data entry window in detail.

7.2.1 Test Specifics

Figure 7.2: Moisture-Density Test Specifics Box

Curve number

This is an optional item. If entered, the curve number be used as follows:

- It will appear on the test's printed reports.
- **LabSuite** will use the number for identifying the soil during the one-point curve matching process.
- If licensed, the GEOSYSTEM **Quality Control - Density** (QC-Density) program uses this number as a reference for determining the maximum dry density associated with a particular field density test.

Test specification

Use this box to select the specification used to perform the test (e.g., ASTM D698 Method A). This selection is important: it determines the sieve used for denoting oversize material, the oversize correction method, the default test mold volume, etc.

⇒ If your test's specification isn't in the drop-down list, use the program's **test specification editor** to add it before continuing.

Soil specific gravity

This is an optional item that will be reported on hardcopy printouts if entered. The sample specific gravity is not utilized in any of the program's calculations.

⇒ This value will be automatically copied from the **Quick Test** window if you enter your specific gravity test there.

ZAV curve specific gravity

Several **chart report formats** offer the option to draw a single zero air voids (ZAV) curve that represents the upper moisture-density boundary for a saturated soil at a particular specific gravity. The **ZAV curve specific gravity** field allows you to select the specific gravity used in the ZAV curve drawing equation.

⇒ Other chart report formats, such as PRCOE, include three pre-defined ZAV curves representing specific gravities of 2.6, 2.7 and 2.8. **LabSuite** ignores the contents of the **ZAV curve specific gravity** when one of these formats are used.

- ⇒ **LabSuite** offers prompts for both the sample and ZAV curve specific gravity so that in situations where a specific gravity test has not been performed on a sample, the user may estimate the specific gravity for the purposes of drawing the ZAV curve.
- ⇒ Entering **0** for the ZAV curve specific gravity or leaving the field blank will cause the program to omit the ZAV curve from reports featuring a single, user selected ZAV curve.

7.2.2 Sieve Percentages

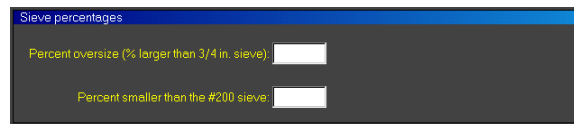


Figure 7.3: Moisture-Density Sieve Percentages Box

Percent oversize

For test specifications requiring an oversize material correction, the correction calculation requires the percent retained on a specific sieve representing the boundary between the oversize material and the material used for the compaction test. The **Percent oversize** field should be used to enter the percentage of material larger than whatever sieve is specified as being the oversize sieve by the test specification (see § 2.6.3 for details on setting up a new test specification).

Percent smaller than the #200 sieve

This is an optional item that will be reported on hardcopy printouts if entered. The value is not utilized in any of the program's calculations.

- ⇒ If grain size test data have been entered for the sample, the program will automatically obtain the oversize and #200 sieve percentages from the grain size distribution curve.

7.2.3 Oversize Correction

 


Figure 7.4: Moisture-Density Oversize Correction Box

Bulk specific gravity

This is the specific gravity (typically the SSD bulk specific gravity) of the oversize material. You do not need to enter this value if you are not correcting your test results for the presence of oversize material.

Oversize moisture

This is the moisture content of the oversize material; again, you do not need to enter this value if you are not correcting your test results for the presence of oversize material.

7.2.4 Proctor Test Data

Test data						
Point No.	1	2	3	4	5	6
Wt. mold+soil (lbs.)	17.46	18.1	18.34	18.73	18.75	18.55
Wt. mold (lbs.)	8.21	8.21	8.21	8.21	8.21	8.21
Mold volume (cu. ft.)	.075	.075	.075	.075	.075	.075
Wet density (pcf)	123.3	131.9	135.1	140.3	140.5	137.9
Wt. w+t (grms.)	652.2	776.6	900.8	635.8	827.4	842.9
Wt. d+t (grms.)	628.4	726.6	832.9	582.5	746.6	755.1
Tare (grms.)	90.3	80.5	87.3	102.2	110.3	105.8
Moisture (%)	4.4	7.7	9.1	11.1	12.7	13.5
Dry Density (pcf)	125.2	129.1	130.4	132.6	131.2	128.3

Figure 7.5: Moisture-Density Test Data Grid

LabSuite accepts data for up to six moisture-density test points, with one or two moisture-content evaluations per test point. (Checking the **Average two moisture content tests per point** option in the toolbar at the top of the window allows you to enter two moisture contents per test point: the program averages the results of the two moisture content tests to determine the test point's moisture content.) Except in the one-point test case, the program requires a minimum of three test points, with each point requiring the following data:

Wt. mold + soil

Wt. mold

These fields are used by the program to determine the soil density. Note that the weights may be entered in either grams or pounds: The **Units for mold weights** selection in the toolbar determines which units will be used.

- ⇒ Because the same mold is normally used for all of the test points, the **Wt. mold** entered for the first test point is automatically repeated for the other test points. If the mold weight does change, a new weight may be entered for any point.

Mold volume

LabSuite requires the volume of the compaction mold, in either cubic feet or liters, depending upon the dimension units assigned to the project file on which you're working: If you've configured the project to use SI units, enter the mold volumes in liters; for a US unit project, enter your mold volumes in cubic feet. (To change your project's dimension units, start your GEOSYSTEM program, open the project, then select Project > Dimension Units.)

- ⇒ **LabSuite** automatically selects a default mold volume based upon the **mold diameter and mold height** given for the test specification chosen in the **Test specifics** box. The default volume may be changed for any point.

Tare ID

If the option to **enter container weights as tare IDs** has been selected, data entry for the moisture content portion of the test begins by selecting an ID from the drop-down tare ID list. Once an ID is chosen, **Tare** field will be automatically filled in with the weight corresponding to that container.

- ⇒ If you haven't yet entered the container and its weight into the program's container list, see § 2.8 for instructions on adding it. Alternatively, the tare ID field may be left blank and a tare weight may be manually entered.

Wt. w + t**Wt. d + t****Tare**

These are, respectively: the weights (in grams) of the wet soil and container, dry soil and container and the container by itself.

- ⇒ If the **Average two moisture content tests per point** toolbar check box is selected and data are not available for a second moisture content test, leave the second moisture content test fields blank; **LabSuite** will utilize only the data entered for the first (and only) moisture content test.
- ⇒ To delete a given test point's data, click the mouse in one of the test point's data entry fields, then select Edit > Delete this Test Point.

7.2.5 California Test Method 216 Test Data

Test data						
Point No.	1	2	3	4	5	6
Tamper reading						
Wet wt. of soil (gms.)						
Water added (gms.)						
Wet density (g/cm ³)						

Figure 7.6: CT216 Test Data Grid

For California Test 216 tests, the following data are required:

Tamper reading

Enter the tamper shaft graduation reading here.

Wet wt. of soil

Enter the weight of the soil sample *minus the tare weight*. Note that the units used can be toggled between grams and pounds by changing the **Units for soil weights** box in the top toolbar.

Water added

Enter the amount of water added or subtracted to the tested sample. (For samples that have had moisture removed via aeration, enter the amount of water removed as a negative number.)

⇒ If you've selected a test specification that uses the **CT-216 with added moisture content tests test method**, the test data grid will also include prompts for entering each sample's moisture content. See [the discussion on entering moisture contents for a standard Proctor test](#) for more information.



8. Viewing and Modifying the Moisture-Density Curve

To preview a chart of the test's moisture-density curve, select **Window > Chart** or click on the **Chart** navigation tab. From this window you can:

- Reshape the moisture-density curve by moving or removing test points from the curve, or by adding additional points to the curve.
- Choose between two different styles of curves.
- Choose to plot the compaction curve with or without test points, or to omit the curve and just plot the test points.
- View moisture-density curves entered into the same project that are similar to the current test's curve.
- Synthesize a full compaction curve from a single moisture-density test point.

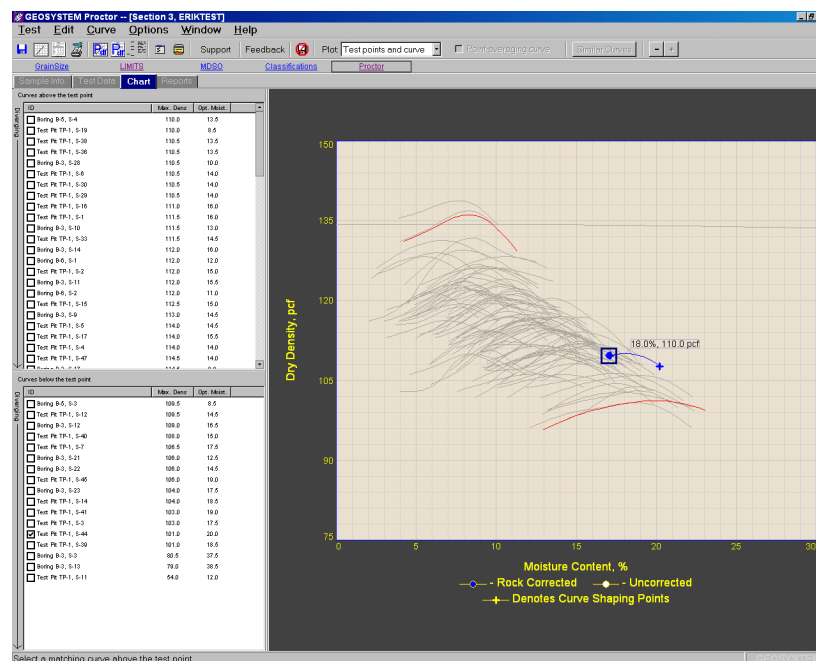


Figure 8.1: Moisture-Density Chart Review Window with One-Point Test Curve Selection Panes

- ⇒ The Chart Review window will display both an oversize-corrected and an uncorrected curve if A) The test data includes oversize information (e.g., % oversize, bulk specific gravity, etc.), B) The specification used by the test includes an oversize correction **applied to each test point** instead of applying the correction only to the maximum dry density and optimum moisture values, and C) The test's specification uses the **Report the uncorrected curve in addition to the corrected curve** option.

Otherwise, a single curve will be displayed.

8.1 Toolbar Controls



Figure 8.2: Moisture-Density Chart Review Window Toolbar

The toolbar at the top of the curve preview window contains the following controls:

Plot:

Determines whether the program plots the curve and test points, the curve only, or the test points only. See § 8.3 for further details.

Data-averaging curve

Selecting this option produces a smoother curve, but one that doesn't necessarily pass directly through every test point. Refer to § 8.3 for further details.

Similar Curves

Clicking this button causes the program to display moisture-density curves from the same project that have maximum dry density/optimum moisture contents close to the current test's maximum dry density and optimum moisture.

- ⇒ The button is disabled for one-point tests because the program *always* shows the similar curves for these tests.

" + " and "- " buttons

Clicking on the "- " button increases the moisture and density scale steps (i.e., the chart is zoomed out), while the "+ " button decreases the scale steps (i.e., the chart is zoomed in).

8.2 Reshaping the Curve

You can change the shape of the compaction curve by adding *shaping* points (additional curve points added merely to force the curve to pass through a particular moisture/density location), moving test points or by choosing to omit test points generated from bad data, as shown in the following examples:

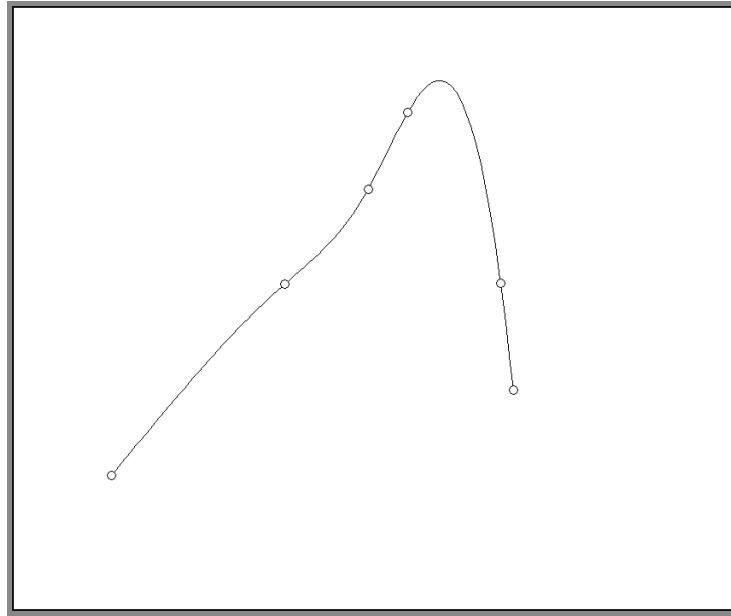


Figure 8.3: Original Moisture-Density Curve

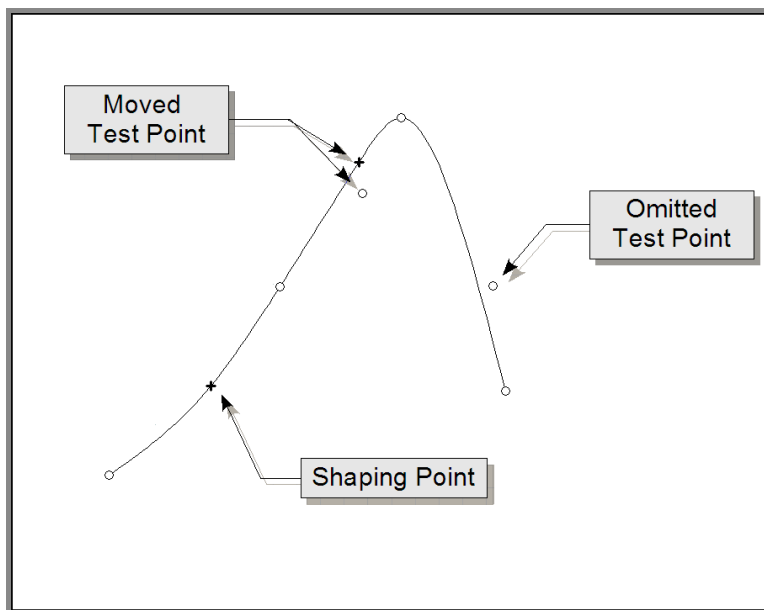


Figure 8.4: Same Test Data; Added Shaping Point and Moved and Omitted Data Points

To reshape the curve by adding a shaping point:

The shape of the curve may be adjusted by forcing it to pass through a new point. To do this, select Curve then either Shape Curve (if the window shows a single curve) or Shape Corrected Curve or Shape Uncorrected Curve. Next, move the mouse cursor to the location desired for the curve to pass through, then click the left mouse button. The new point will be marked with a "+", which will not be shown on charts included on hardcopy reports.

To remove a shaping point:

Move the mouse cursor over the shaping point, then click the right mouse button and select Delete this Point from the popup menu.

You can also remove all shaping points by selecting Curve > Delete All Shaping Points.

To move a shaping point:

Once you've placed a shaping point you can move it: Place the mouse cursor over the shaping point, click the right mouse button and select Move this Point. Move the mouse cursor to the desired position for the shaping point then click the left mouse button.

⇒ Shaping points cannot be added to **data-averaged** curves.

You can also reshape the curve by moving or hiding test points:

To move a test point:

Move the cursor over the test point then click the right mouse button and select Move this Point, then move the mouse cursor to the desired position for the test point then click the left mouse button.

⇒ Note that the test point itself will continue to be shown in its original position, although the compaction curve will no longer pass through it. If you do not want to have the test point shown on the chart, use the procedure covered below.

To omit a test point from the chart:

Sometimes it may be necessary to remove a test point from the compaction chart because the testing data for the point is obviously not correct. To remove the point from the chart, move the mouse cursor over the bad point, right-click and select Include this Point on Curve to uncheck the option. (The point will still show up on the chart review window and on **data summary reports**, but it will not appear on chart reports.)

If the test point's data appears to have been entered incorrectly, the data can be corrected by moving the mouse cursor over the test point, then right-clicking and selecting Edit this Point's Data.

8.3 Changing How the Curve is Displayed

LabSuite includes several options for changing how the compaction curve is plotted:

You can omit the curve from chart reports:

If your compaction curve cannot be modified into an acceptable shape you can choose to have **LabSuite** plot just the test points, omitting the curve. (You can then draw the curve by hand on the hardcopy report.) To omit the curve, select Curve > Plot Test Points Only. Note that this option also causes the calculated maximum dry density and optimum moisture values to be omitted from the report (you'll need to work out your own values based upon the curve you've hand-drawn).

You can omit the test points from chart reports:

Selecting Curve > Plot Curve Only omits the test points from the chart, leaving only the curve.

The compaction curve can be plotted using a data-averaging curve model:

If your test data doesn't form a smooth compaction curve, Curve > Data-Averaging Curve can be used to draw a compaction curve formed using a *least-squares linear regression* mathematical model. In simplified terms, these curves average the distance between the curve and each test point, making for a smoother curve, but one that may not actually pass directly through each test point. As an example, the following figure shows a compaction curve that's somewhat oddly-shaped because the points on the wet side of the curve do not make a smooth curve:

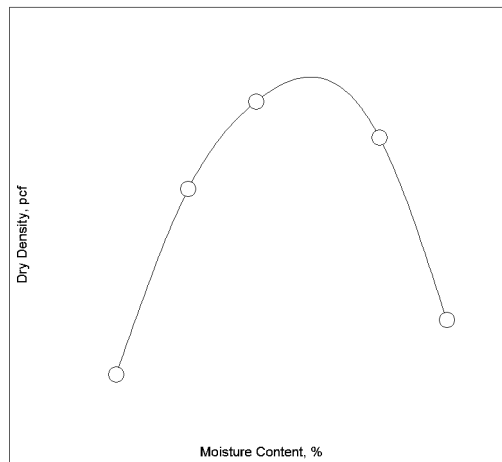


Figure 8.5: Moisture-Density Curve Drawn Using the Default Curve Plotting Method

Selecting the Data-Averaging Curve option produces a smoother curve shape:

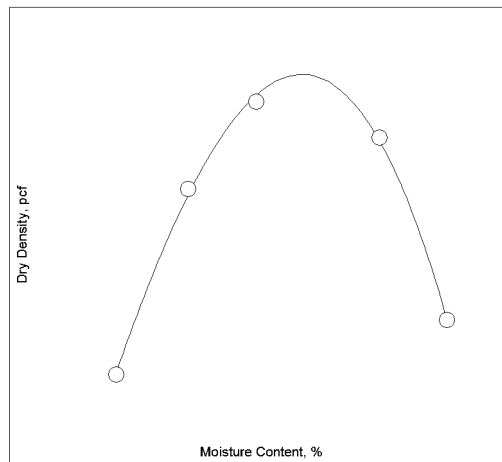


Figure 8.6: Moisture-Density Curve Drawn Using the Data Averaging Method

Note that the second curve does not exactly pass through each test point: For the top two points on the wet side of optimum moisture, the curve essentially "splits the difference" between the two points by passing on the right side of one and on the left side of the second. The resulting curve appears smoother.

⇒ The data-averaging curve model is not a panacea for cleaning up all misshapen curves. Some curves may benefit more by moving test points, removing **bad data points from the curve**, or by adding curve shaping points. Additionally, curves with five or six test points do not tend to plot very well using the data-averaging approach.

8.4 Creating Curves for One-Point Tests

LabSuite supports a simplified version of the AASHTO Family of Curves test method (T 272). The program may be used to match up the single test point of a one-point compaction test against the closest already-entered compaction curves above and below the point: a new curve passing through the single test point is synthesized from a combination of the two existing curves.

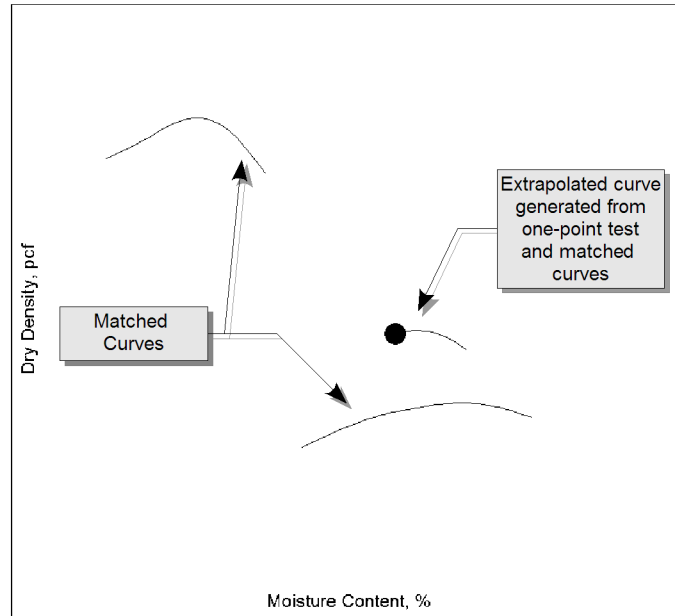


Figure 8.7: One-Point Test with Extrapolated and Matching Curves

LabSuite's one-point curve generation differs from the AASHTO standard in that the program only takes into account one curve above and one curve below the test point, while the standard requires that the behavior of an entire family of curves be accounted for when extrapolating the new curve.

To create a curve for a one-point test, begin by entering the data for the single test point, then select Window > Chart. When the Chart Review window is displayed, a pane will be added to the left-hand side listing compaction curves above and below the test point.

Curves above the test point

ID	Max. Dens	Opt. Moist.
☐ Boring B-5, S-4	110.0	13.5
☐ Test Pit TP-1, S-19	110.0	8.5
☐ Test Pit TP-1, S-38	110.5	13.5
☐ Test Pit TP-1, S-36	110.5	13.5
☐ Boring B-3, S-28	110.5	10.0
☐ Test Pit TP-1, S-6	110.5	14.0
☐ Test Pit TP-1, S-30	110.5	14.0
☐ Test Pit TP-1, S-29	110.5	14.0
☐ Test Pit TP-1, S-16	111.0	16.0
☐ Test Pit TP-1, S-1	111.5	16.0
☐ Boring B-3, S-10	111.5	13.0
☐ Test Pit TP-1, S-33	111.5	14.5
☐ Boring B-3, S-14	112.0	16.0
☐ Boring B-6, S-1	112.0	12.0
☐ Test Pit TP-1, S-2	112.0	15.0
☐ Boring B-3, S-11	112.0	15.5
☐ Boring B-6, S-2	112.0	11.0
☐ Test Pit TP-1, S-15	112.5	15.0
☐ Boring B-3, S-9	113.0	14.5
☐ Test Pit TP-1, S-5	114.0	14.5
☐ Test Pit TP-1, S-17	114.0	15.5
☐ Test Pit TP-1, S-4	114.0	14.0
☐ Test Pit TP-1, S-47	114.5	14.0

Curves below the test point

ID	Max. Dens	Opt. Moist.
☐ Boring B-5, S-3	109.5	8.5
☐ Test Pit TP-1, S-12	109.5	14.5
☐ Boring B-3, S-12	109.0	16.5
☐ Test Pit TP-1, S-40	108.0	15.0
☐ Test Pit TP-1, S-7	106.5	17.5
☐ Boring B-3, S-21	106.0	12.5
☐ Boring B-3, S-22	106.0	14.5
☐ Test Pit TP-1, S-45	106.0	19.0
☐ Boring B-3, S-23	104.0	17.5
☐ Test Pit TP-1, S-14	104.0	18.5
☐ Test Pit TP-1, S-41	103.0	19.0
☐ Test Pit TP-1, S-3	103.0	17.5
☒ Test Pit TP-1, S-44	101.0	20.0
☐ Test Pit TP-1, S-39	101.0	18.5
☐ Boring B-3, S-3	80.5	37.5
☐ Boring B-3, S-13	79.0	38.5
☐ Test Pit TP-1, S-11	54.0	12.0

Figure 8.8: One-Point Match Curves Pane

⇒ Curves are ordered in the list by how close they are to the single test point.

The pane includes two lists of curves: one list contains curves that fall *above* the one-point test and the other list contains curves that fall *below* the one-point test. Clicking on the checkbox for one curve from *each* list causes the program to synthesize a curve passing through the test point and roughly matching two match curves.

- ⇒ The synthesized curve can be erased by unchecking the curve selections in the **Curves above the test point** and **Curves below the test point** boxes.
- ⇒ If oversize moisture or density corrections are applied, the test specifications used by both the match curves and the one-point test curves should use identical settings for the **Correct correction application** test specification setting.

9. Quick Tests

LabSuite supports a few "quick" tests; that is, tests that have minimal test data and reporting requirements:

- Natural moisture
- Soil specific gravity
- Organic content via ignition
- Coarse aggregate specific gravity
- Fine aggregate specific gravity
- Oversize moisture

To enter these tests, select "Test" > "Enter Quick Tests Data".

Geosystem LabSuite with CBR and LBR — (GS Test Sets: 5-1)

Test Edit Options Window Help

Atterberg Limits CBR Classifications Grain Size LBR Moisture-Density (Proctor) Quick Tests

Sample Info: **Test Data** Reports

Quick Tests

Natural moisture	Soil specific gravity	Organic content by ignition
Tare ID:	Oven-dried soil+tare (grams):	Pre-ignition dish and soil wt. (grams):
Wt. wet+tare (grams):	Oven-dried tare (grams):	Post-ignition dish and soil wt. (grams):
Wt. dry+tare (grams):	Flask+water (grams):	Dish wt. (grams):
Wt. tare (grams):	Flask+water+soil (grams):	Organic content (percent) =
Moisture (%):	Water temperature (C):	
	Specific gravity=	

Coarse aggregate specific gravity	Fine aggregate specific gravity	Oversize moisture
Oven-dried material+tare (grams):	Oven-dried material+tare (grams):	Tare ID:
Oven-dried tare (grams):	Oven-dried tare (grams):	Wt. wet+tare (grams):
Soaked sample+flask+water (grams):	Flask+water (grams):	Wt. dry+tare (grams):
Flask+water (grams):	Flask+water+soil (grams):	Wt. tare (grams):
SSD material+tare (grams):	SSD material+tare (grams):	Moisture (%):
SSD tare (grams):	SSD tare (grams):	
Apparent specific gravity=	Apparent specific gravity=	
Bulk specific gravity=	Bulk specific gravity=	
SSD specific gravity=	SSD specific gravity=	
Absorption, percent=	Absorption, percent=	

Weight (in grams) of the wet soil plus the container weight

GEOSYSTEM

Figure 9.1: Quick Tests Data Entry Window

- ⇒ Once you've entered natural moisture data, your data and natural moisture results are copied to the **Atterberg limits** data entry window.
- ⇒ The calculated soil specific gravity value is copied to the **moisture-density** data entry window.

-
- ⇒ If you're entering a moisture-density test that requires **oversize correction**, the coarse bulk specific gravity and oversize moisture percentage will be copied to the appropriate fields on the moisture-density data entry window.

10. Reporting Your Data

LabSuite features three methods for reporting your data:

XML Files

XML files contain a listing of both your raw testing data (such as the weights retained on each sieve during a grain size sieve test), as well as various values calculated by the software such as D_{10} , C_u , etc. XML files are saved on-disk and may be viewed by a web browser or by Microsoft Excel. This is an ideal format for e-mailing testing data and results to your clients in a format that incorporates both a means of presentation (through a web browser) as well as a means of manipulating the raw data (through a spreadsheet).

Data Summary Reports

Summary reports list the raw data taken from your test. They may be sent to a printer or saved on disk.

Chart Reports

Chart reports are more formalized than summary reports: for example, a grain size chart report typically includes, in addition to a chart of particle size vs. percentage, a block listing your company name, along with tables listing various calculated percentages and other values. Unlike summary reports, chart reports do not list raw testing data such as the weight retained on each sieve.

- ⇒ Another difference between chart and summary reports is that **LabSuite** ships with several different chart reports from which you can **select**, while there's only one format for the summary report.
- ⇒ Chart and summary reports can be **saved to a file in .PDF, .EMF, .PNG or .DXF format**.
- ⇒ Through the Windows clipboard, you can also export chart reports to programs that can paste pictures into their documents (such as word processors or paint programs). To do this, select Edit > Copy Entire Test: once on the Windows clipboard, you can paste the chart into, for example, a word processing document by starting the word processor and selecting Edit > Paste.

10.1 Chart Reports

Chart reports may be reviewed and printed by selecting Window > Reports (Window > USDA Reports to view the USDA chart report), or by clicking on the **Reports** navigation tab. From this window you can:

- Combine tests from several samples onto a single report page.
- Change a report page's figure number.
- Select a different format for printing chart reports.
- Preview and print chart and summary reports.

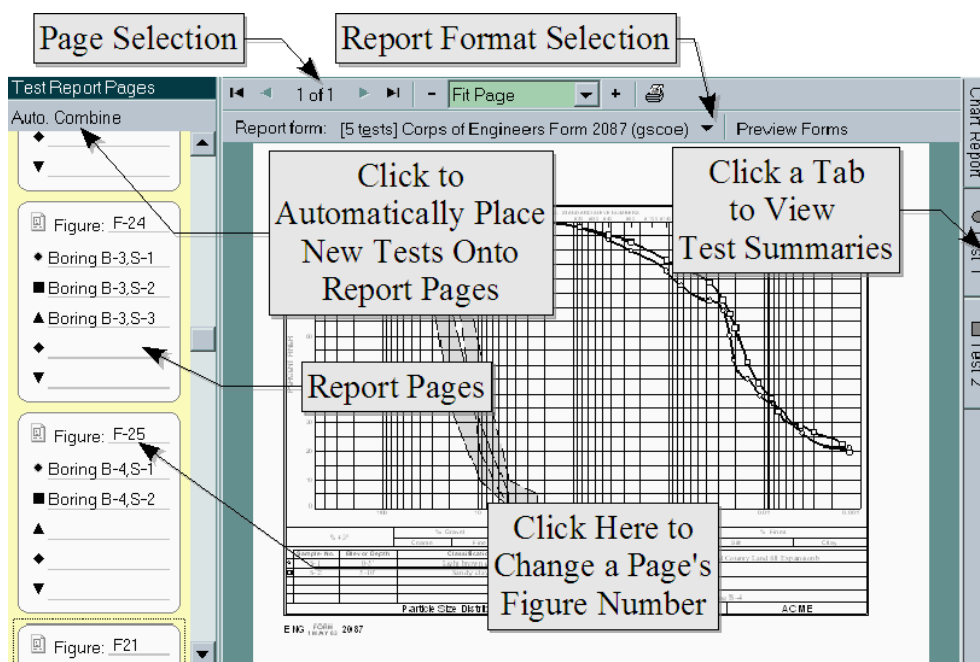


Figure 10.1: The Report Preview Window

On the left side of the screenshot is a box listing the chart report pages that have been set up for the current project: each sample tested will be shown on one of these pages. Some chart report formats can support printing more than one sample's test on a single page (for example, each page in the screenshot supports up to 5 tests – one page in the sample is currently set up to print three tests (Boring B-3, samples S-1, S-2, and S-3) and the other holds two tests from Boring B-4).

- ⇒ Tests shown in gray will not be printed on the report because the report form that you've selected does not have room for them. (This happens when you create a page with, e.g., 5 tests, and then change to a report format that has room for, say, a single test per page.) **You should drag these tests onto a different page or move them to their own report page; otherwise they will never print.** (If you click on the **Auto. Combine** button, the program will fix the problem for you.)

Following is a list of actions that you can take from this window:

You can move tests from one page to another

The program adds a new report page to the list for every test that you enter. So, after you've entered all of your project's tests, you'll have a list of report pages, with one test on each page. Since most report formats can show more than one test on a single page, you may want to combine several tests onto one report page. To do this, drag the test (such as, e.g., the **Boring B-4, S-1** test in the screenshot) from its own report page and drop it on another page.

You can have the program automatically combine tests onto report pages

Rearranging tests onto different report pages can be tedious...fortunately, computers excel at tedious tasks! If you click on the **Auto. Combine** button, will try to combine as many tests onto a single report page as possible, with one caveat: will only combine tests onto a single page if they were taken from the same material source.

You can assign a figure number to a report page

Each report page can list a figure number. To set a page's figure number, click in the underlined area next to the word **Figure** at the top of the report page in the left-hand list, then type in your figure number.

You can move a test onto its own report page

To do this, drag the test off of its current report page onto the yellow area at the left side of the screen (i.e., drop the test anywhere but on another report page).

You can move a test into a new position on the report page

Drag and drop the test to a higher or lower position on its current report page in the page list.

You can change the format of the report pages

The software ships with many different chart report formats that you can use for printing your test data. (You can view samples of all of the program's report formats by clicking on the **Preview Forms** button.) To select a new report format, click on the button shown in the following figure:

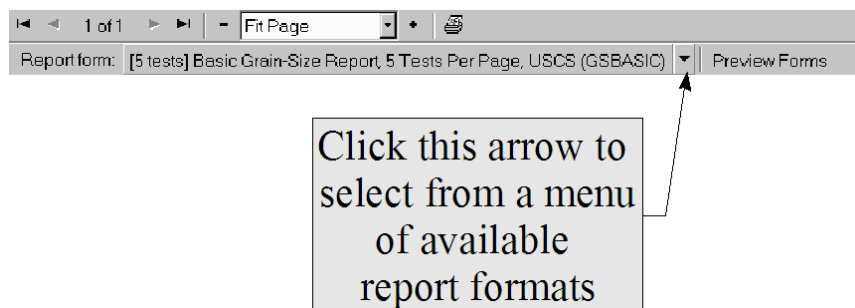


Figure 10.2: Selecting a Chart Report Form

10.1.1 Selecting a Scale for Moisture-Density Reports

You can alter the moisture and density scale used on a *specific* moisture-density chart report by previewing the report then selecting **Report > Chart Report Scale**. Doing so brings up the moisture-density chart scaling dialog shown below:

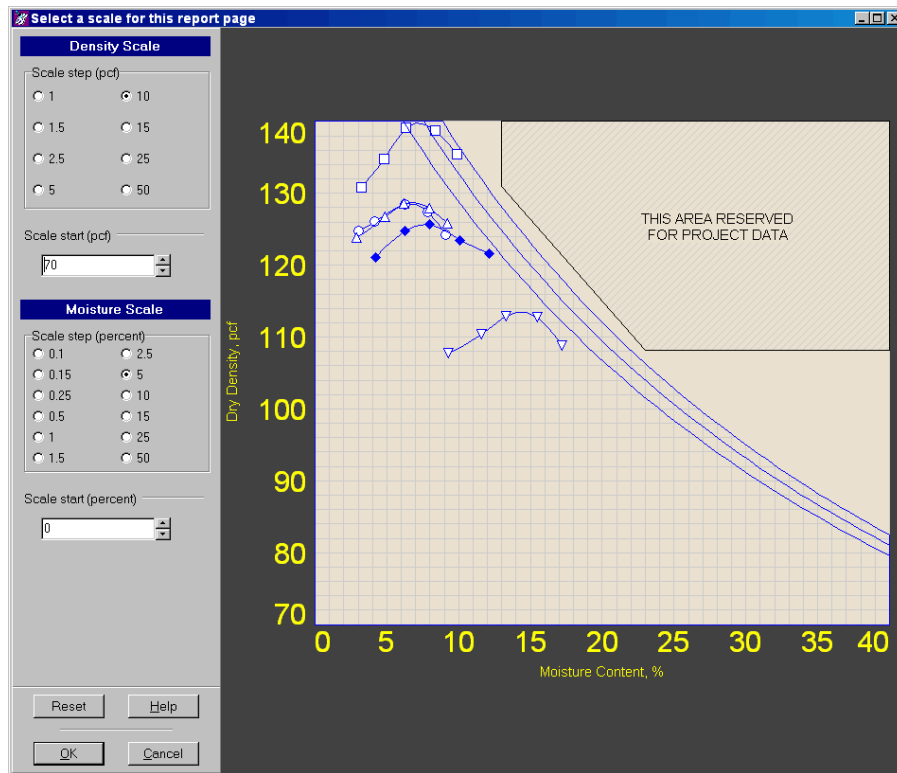


Figure 10.3: Moisture-Density Chart Scale Dialog

This dialog lets you change the start and increment for the scales used on the moisture-density graph included on the report that you're currently previewing. The choices you make on this dialog do not affect the **moisture-density curve preview window**, nor do they affect the small chart shown on the test's **data summary report**. Any changes made using this dialog affect only the test report page that you're previewing when **Report > Chart Report Scale** is selected.

Scale step

The moisture and density **Scale step** box lets you select the distance (in percentage and units of density) between scale labels on the chart.

Scale start

The **Scale start** box selects a value for the left side of the moisture content scale and the bottom of the density scale.

Reset

Clicking on this button resets both moisture and density scales to the program's default selection.

- ⇒ If the currently selected report format includes three zero air voids (ZAV) curves at specific gravities of 2.6, 2.7 and 2.8, the program will reserve some space immediately to the right of the 2.8 ZAV curve in order to display information on the project and test specification. (The preceding screen shot shows the reserved area, labeled "This area reserved for project data".) This reserved area places some constraints on the scale that you choose because some combinations of density and moisture scale starts and scale steps would not leave enough room for the program to display the right-hand project and test specification information.

If you adjust the chart scale so that the 2.8 ZAV curve runs through the hashed "This area reserved for project data" area, clicking the **OK** button causes the program to shift your scale so that the hashed area is no longer intersected by the ZAV curve; you will then need to click **OK** a second time to exit the dialog.

10.1.2 Printing Your Reports

After you've arranged your tests onto report pages you can preview or print each page: Locate and click on the page in the page list shown in the yellow box on the left side of the screen then select Test > Output Chart Report. You'll be presented with the printer settings dialog:

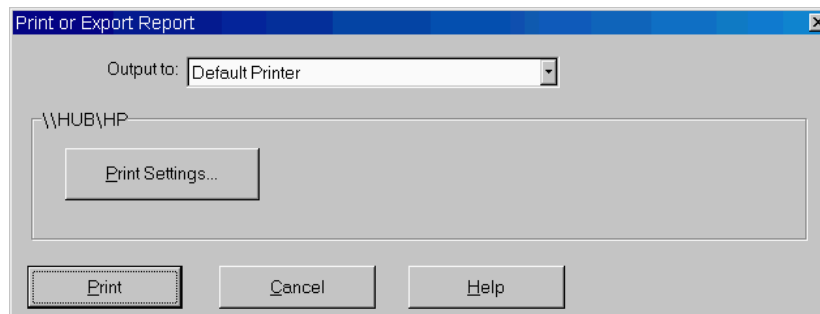


Figure 10.4: Printer Output Settings Dialog

Print Settings

Click this button to select a different printer or to change the printer's page size, resolution, etc.

Print

Click this button to print your report.

10.1.3 Selecting a Chart Report Format

You can view samples of the report forms shipped with the program by clicking on the **Preview Forms** button. Browse through the forms by clicking on the left and right arrow buttons in the toolbar; when you've settled on a new report format, click on the **Select this Format** button.

- ⇒ If you'd like printed samples of all of the report formats shipped with the program, click on the **Print Samples** button.

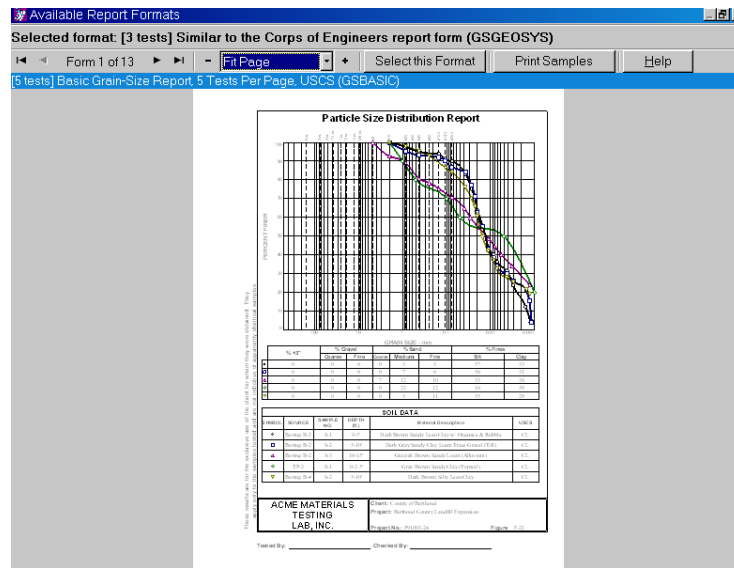


Figure 10.5: Selecting a Chart Report Form

10.2 Data Summary Reports

Data summary reports list the raw data taken from a single lab. test (e.g., specimen weights, test readings, etc.). You can print a summary report or export it to a file by selecting Test > Output Data Summary Report.

- ⇒ The Classifications screens (i.e., ASTM, AASHTO, USDA, etc.) do not generate data summary reports.

GRAIN SIZE DISTRIBUTION TEST DATA										
Client: County of Berthoud Project: Berthoud County Landfill Expansionb Project Number: P91003-24 Location: Boring 2										
Sieve Test Data										
Post #200 Wash Test Weights (grams): Dry Sample and Tare = 26577.10 Tare Wt. = 5189.00 Minus #200 from wash = 7.8%										
Dry Sample and Tare (grams)	Tare (grams)	Sieve Opening Size	Weight Retained (grams)	Sieve Weight (grams)	Percent Finer					
28394.60	5189.00	6	0.00	0.00	100.0					
		4	487.30	0.00	97.9					
		3	232.10	0.00	96.9					
		2	487.30	0.00	94.8					
		1.5	510.50	0.00	92.6					
		3/4	1763.60	0.00	85.0					
		3/8	2459.80	0.00	74.4					
		#4	2691.80	0.00	62.8					
3721.80	0.00	#8	927.61	0.00	49.1					
		#16	785.40	0.00	37.5					
		#30	853.12	0.00	24.9					
289.50	0.00	#50	142.18	0.00	16.5					
		#100	98.37	0.00	10.7					
		#200	44.10	0.00	8.1					
Fractional Components										
Cobbles	Gravel			Sand				Fines		
	Coarse	Fine	Total	Coarse	Medium	Fine	Total	Silt	Clay	Total
3.1	11.9	22.2	34.1	16.6	26.0	12.1	54.7			8.1
D ₁₀	D ₁₅	D ₂₀	D ₃₀	D ₅₀	D ₆₀	D ₈₀	D ₈₅	D ₉₀	D ₉₅	
0.1312	0.2564	0.4183	0.7973	2.4788	4.1078	13.5548	19.0498	28.9572	52.3790	
Fineness Modulus	C _u	C _c								
4.50	31.30	1.18								
ALV Engineers										

Figure 10.6: First Page of a Sample Summary Report

10.3 Exporting Reports To Files

You can save **LabSuite**'s testing data summary and chart reports for posting to a web server or for e-mailing to clients. The program supports several different export formats:

- **Adobe Acrobat .PDF:** Universal format for Internet document distribution.
- **AutoCAD .DXF:** Format for interchange among CAD programs.
- **Windows Metafile (.EMF):** These files can be inserted as a picture into a word processing document or manipulated with a vector-drawing program such as Adobe Illustrator.
- **Portable Network Graphics (.PNG) and JPEG File (.JPG):** These files are "bitmap" files that can be inserted into word processing documents or edited with a raster-drawing program such as Windows Paint or Photoshop.

To save a chart or summary report as a file, select either **Test > Output Data Summary Report** or **Test > Output Chart Report**, then, from the **Output to** box on the next dialog, select one of the file formats outlined above.

If you've chosen the **Adobe Acrobat .PDF File**, **Windows Metafile (.EMF)**, **Portable Network Graphics (.PNG)** or **JPEG File (.JPG)**: options you'll see the following dialog:

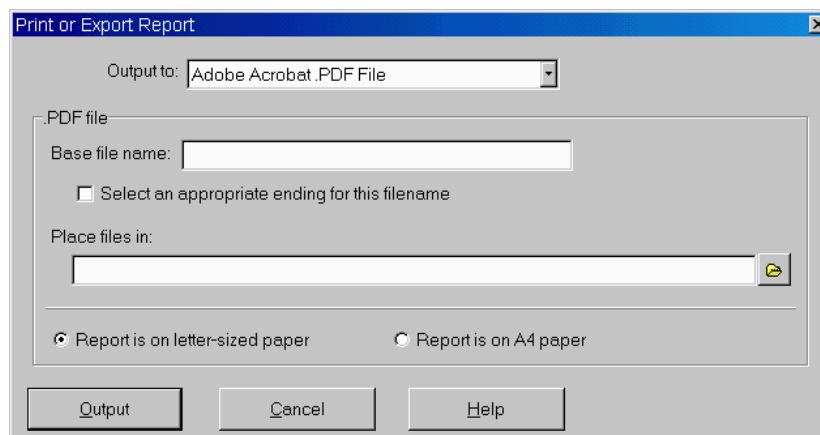


Figure 10.7: .PDF, .EMF, .PNG and JPG Output Settings Dialog

.DXF files are somewhat more complicated: if you select the **AutoCAD .DXF File** you'll see this dialog:

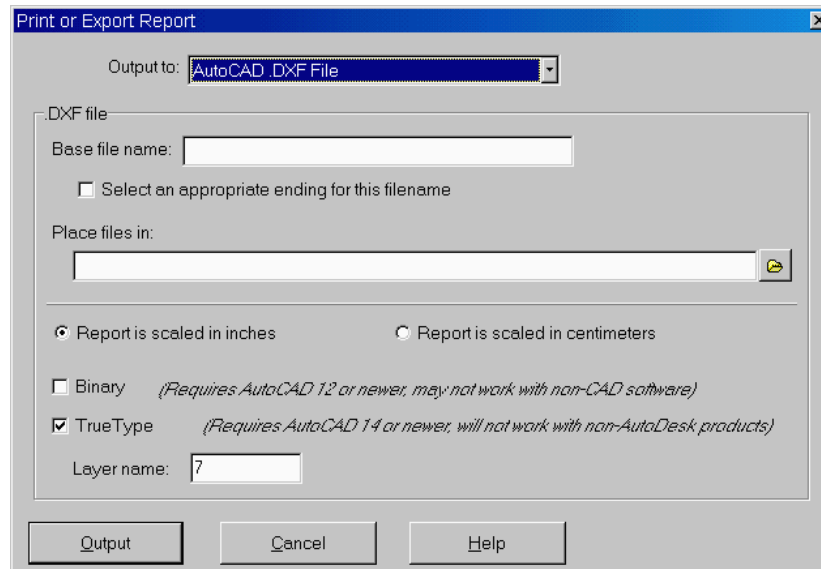


Figure 10.8: .DXF Output Settings Dialog

There are a number of options available for selecting where and how the reports are generated:

Base file name

When the program creates a file from one page your report (for .DXF, .EMF, .PNG and .JPEG files), or from your *entire* report (for .PDF files), the file's name will start with whatever is entered into this field.

Select an appropriate ending for this filename

Without this option, the names of the files created will be whatever you have selected as the **Base file name**. Checking the **Select an appropriate ending for this filename** box alters how the program names the report files: the sample number and/or sampling location is added to the **Base file name**, followed by the test type ("GS" or "LM" etc.) and either "ChartReport" or "TestData". For example, with the **Select an appropriate ending for this filename** box checked, the program may create .PDF files with names like:

P92321 Sample S-4 Boring B-3 GS TestData.PDF

P92321 Sample S-1 Test Pit TP-2 GS ChartReport.PDF

etc.

⇒ With **Base file name** and **Select an appropriate ending for this filename** you can come up with some useful file naming variations. For example, you could leave **Select an appropriate ending for this filename** unchecked and enter the sample number/location as part of the **Base file name** - of course, this means that when you export the next report, you'd have to change the **Base file name** to reflect the new sample number.

As another example, if you have created a hard disk subdirectory just to hold .PDF files from a certain project, you may not need to include the project

number as part of each .PDF file name: instead of being called, for example, **P92321 Sample S-4 Boring B-3**. (P92321 being the project number), by leaving the **Base file name** field blank you can get export files with names like **Sample S-4_Boring B-3.PDF**

Place files in

Sets the directory where your exported files will be placed.

Report is on letter-sized paper *(.PDF, .EMF and .PNG files only)***Report is on A4 paper** *(.PDF, .EMF and .PNG files only)*

Selects the paper size to be used for the exported report image.

Report is scaled in inches *(.DXF files only)***Report is scaled in centimeters** *(.DXF files only)*

Reports exported as CAD files either measure either 10 units vertically (when scaled in inches) or 25.4 units vertically (when scaled in centimeters). This selection does not affect the report's appearance; rather, it just affects the coordinates given to each line and piece of text on the report. (As such, the selection is only important when the exported report is to be edited by an illustration or CAD program.)

Binary *(.DXF files only)*

Binary .DXF files will be smaller (by 25 to 50 percent) and open faster in AutoCAD. The reports will appear the same when viewed in a CAD program no matter if this option is selected or not. Note that very few illustration programs will read binary .DXF report files.

TrueType *(.DXF files only)*

If this option is unselected, .DXF report files use a monospaced font (**similar to this**) for everything on the form, meaning that .DXF reports are less attractive than their printed counterparts. The TrueType option allows you to generate .DXF files that look exactly like the printed versions – however, TrueType .DXF files are only supported on AutoCAD versions 14 and newer; additionally, many other drawing and CAD programs do not support TrueType files.

Layer name *(.DXF files only)*

Specifies the name of the CAD drawing layer on which your report will be drawn. Layer names may be any combination of alphabetic and numeric characters – however, many CAD programs cannot handle layer names that include spaces. (**MYLAYER** is OK, **MY LAYER** is not.) Since your chosen layer name will be repeated throughout the .DXF report files, the shorter you make the name the smaller in size your .DXF files will become.

10.4 Exporting XML Files

The XML file format provides a means of exporting your testing data and calculated test results into a format readable by a web browser and by newer Excel spreadsheet programs (XP or later). This

makes XML files a natural method for posting testing results to a Web or FTP site or for e-mailing directly to clients.

To export an XML file, select **Test** > **Export XML File**

Calculated Results					
4798.6	1408.5	#10	912.4	808.6	72.7884
		#20	1119.8	745.1	64.4892
		#40	987.6	700.6	58.1324
1000	100	#100	0	0	58.1324
		#200	1093.4	703.7	32.9611

Calculated Diameters					
D ₅₀	D ₆₀	D ₈₀	D ₈₅	D ₉₀	D ₉₅
0.1126	0.5858	18.2039	35.9899	69.3605	89.3138

Component Fractions				
Cobbles	Gravel	Sand	Fines	Colloids
0.6	1.6	12.1	22.8	

Figure 10.9: Portion of an XML Report Viewed in Internet Explorer

10.5 Listing the Results From Multiple Tests

The Data Summary and Export tool discussed in Chapter 4 of the GDM manual and Appendix C of the LOGDRAFT User's Guide may be used to summarize the results of multiple lab. tests. Several stock configuration files can be used by selecting **Tools** > **Data Summary and Export** from the GDM or LOGDRAFT menu, then selecting **File** > **Recall Existing Configuration** and selecting one of the listed configuration files:

- To list grain size distribution test results, select **GSFRACS.LFG** or **GSFRACS2.LFG**
 - To list Atterberg limits test results, select **LIMSUM1.LFG**
- ⇒ If you've purchased LOGDRAFT, you can use the configuration files to view an on-screen list of the tests performed for a project: From the LOGDRAFT screen, select **Project** > **Browse** and choose one of the listed configuration files.

10.5.1 Grain Size Test Results Calculated by the Program

As an alternative to using the stock **GSFRACS.LFG** and **GSFRACS2.LFG** summary and export files, you can also create your own summaries with data values calculated by the program.

These values (or "variables") can also be referenced in boring logs created with the GEOSYSTEM LOGDRAFT program.

The following table lists the names of all of the calculated grain size variables provided by *LabSuite* and gives a short description of each variable.

Table 10.1: Grain Size Test Results for Summaries and Boring Logs

Item Name	Description
GS_CC	Provides the coefficient of curvature
GS_CC	Provides the coefficient of curvature
GS_CU	Provides the coefficient of uniformity
FINENESSMOD	Fineness modulus
D95, D90, D85, D80, D60, D50, D30, D20, D15 and D10	Provides the material diameter at which 95, 90, 85, 80, 60, 50, 30, 20, 15 and 10 percent of the material is smaller.
DIDMECH	"Y" if a mechanical test was performed on the sample. This is useful for counting the number of mechanical tests performed.
DIDHYD	"Y" if a hydrometer test was performed on the sample.
PER6IN	Percent of material smaller than 6 inches.
PER5IN	Percent of material smaller than 5 inches.
PER4IN	Percent of material smaller than 4 inches.
PER3IN	Percent of material smaller than 3 inches.
PERTWO5	Percent of material smaller than 2.5 inches.
PER2IN	Percent of material smaller than 2 inches.
PERONE5	Percent of material smaller than 1.5 inches.
PERONEANDQUARTER	Percent of material smaller than 1.25 inches.
PER1IN	Percent of material smaller than 1 inch.
PERTHREEQ	Percent of material smaller than 3/4 inches.
PERFIVEEIGHT	Percent of material smaller than 5/8 inches.
PERHALFIN	Percent of material smaller than 1/2 inch.
PER375	Percent of material smaller than 3/8 inches.
PERFIVESIXTEEN	Percent of material smaller than 5/16 inches.
PERONEQ	Percent of material smaller than 1/4 inch.
PER4, PER5, PER6, PER7, PER8, PER10, PER12, PER14, PER16, PER18, PER20, PER25, PER30, PER35, PER40, PER45, PER50, PER60, PER70, PER80, PER100, PER120, PER140, PER170, PER200, PER230, PER270, PER300, PER325, PER400	Provides the calculated percentage passing various standard sieve sizes: for example PER4 provides the percent passing the #4 sieve.

Continued on the next page

Item Name	Description
PER074MM	Percent of material smaller than .074 mm.
PER005MM	Percent of material smaller than .005 mm.
PER001MM	Percent of material smaller than .001 mm.
GS_SPECENV	Gives the name of the specification envelope selected for the test.
GS_SPECENV2	Gives the name of the 2nd specification envelope selected for the test.
GS_SPECENV3	Gives the name of the 3rd specification envelope selected for the test.

SI sieve tests export the following results:

PER200MM	Percent of material smaller than 200 mm.
PER75MM	Percent of material smaller than 75 mm.
PER53MM	Percent of material smaller than 53 mm.
PER37.5MM	Percent of material smaller than 37.5 mm.
PER26.5MM	Percent of material smaller than 26.5 mm.
PER19MM	Percent of material smaller than 19 mm.
PER13.2MM	Percent of material smaller than 13.2 mm.
PER9.5MM	Percent of material smaller than 9.5 mm.
PER6.7MM	Percent of material smaller than 6.7 mm.
PER4.75MM	Percent of material smaller than 4.75 mm.
PER2.36MM	Percent of material smaller than 2.36 mm.
PER1.18MM	Percent of material smaller than 1.18 mm.
PER.6MM	Percent of material smaller than .600 mm.
PER.425MM	Percent of material smaller than .425 mm.
PER.3MM	Percent of material smaller than .3 mm.
PER.15MM	Percent of material smaller than .15 mm.
PER.075MM	Percent of material smaller than .075 mm.

Each **classification system selection** such ASTM D2487, Burmister and Wentworth also makes additional values available, such as the percentage of sand, silt and clay. Which values are calculated depends upon the classification system you've chosen: For example, the Wentworth classification defines a **Very Coarse Sand** particle size, while the USCS classification does not, so, if you select the USCS classification system when entering a grain size test you will not be able to summarize the percentage of **Very Coarse Sand**. The table below lists definitions for *all* of the possible particle size ranges, while the table after lists which size ranges are defined for each of the supported classification systems.

Table 10.2: Particle Size Ranges

Item Name	Description
BOULDER	Boulders
COBBLES	Cobbles
PEBBLE	Percentage of pebbles (Wentworth classification only)

Continued on the next page

Item Name	Description
GRANULE	Percentage granules (Wentworth classification only)
COARSE_GRAVEL	Coarse gravel
MEDIUM_GRAVEL	Medium gravel
FINE_GRAVEL	Fine gravel
GRAVEL	Total gravel percentage. For USDA, GRAVEL = COARSE_GRAVEL plus MEDIUM_GRAVEL plus FINE_GRAVEL; for USCS, GRAVEL is COARSE_GRAVEL plus FINE_GRAVEL (because USCS does not define a "medium gravel" size range)
VCOARSE_SAND	Very coarse sand
COARSE_SAND	Coarse sand
MEDIUM_SAND	Medium sand
FINE_SAND	Fine sand
VFINE_SAND	Very fine sand
SAND	Total sand percentage
COARSE_SILT	Coarse silt
MEDIUM_SILT	Medium silt
FINE_SILT	Fine silt
SILT	Total silt percentage
CLAY	Percentage of material smaller than silt
FINES	Percentage of material smaller than sand
COLLOIDS	Percentage of fine clay

Table 10.3: Size Ranges Supported by Classification System

Classification System	Supported Range Values
USCS	COBBLES, COARSE_GRAVEL, FINE_GRAVEL, GRAVEL, COARSE_SAND, MEDIUM_SAND, FINE_SAND, SAND, SILT, CLAY, FINES, COLLOIDS
USCS with .002mm. instead of .005 silt/clay division	same as USCS
USCS without coarse/medium/fine divisions	COBBLES, GRAVEL, SAND, SILT, CLAY, FINES, COLLOIDS
USCS, lists fines instead of silts/clay	COBBLES, COARSE_GRAVEL, FINE_GRAVEL, GRAVEL, COARSE_SAND, MEDIUM_SAND, FINE_SAND, SAND, FINES, COLLOIDS
AASHTO	COBBLES, GRAVEL, COARSE_SAND, FINE_SAND, SAND, SILT, CLAY, FINES, COLLOIDS
Wentworth	BOULDER, COBBLES, PEBBLE, GRANULE, VCOARSE_SAND, COARSE_SAND, MEDIUM_SAND, FINE_SAND, VFINE_SAND, SAND, COARSE_SILT, MEDIUM_SILT, FINE_SILT, VFINE_SILT, SILT, CLAY

Continued on the next page

Classification System	Supported Range Values
Burmister	COBBLES, COARSE_GRAVEL, MEDIUM_GRAVEL, FINE_GRAVEL, GRAVEL, COARSE_SAND, MEDIUM_SAND, FINE_SAND, SAND, FINES
USDA	BOULDER, COBBLES, COARSE_GRAVEL, MEDIUM_GRAVEL, FINE_GRAVEL, GRAVEL, VCOARSE_SAND, COARSE_SAND, MEDIUM_SAND, FINE_SAND, VFINE_SAND, SAND, COARSE_SILT, FINE_SILT, SILT, CLAY
USDA, #270 sand/silt division instead of .05mm.	same as USDA
Australian Sandard AS 1726	BOULDER, COBBLES, COARSE_GRAVEL, MEDIUM_GRAVEL, FINE_GRAVEL, GRAVEL, COARSE_SAND, MEDIUM_SAND, FINE_SAND, SAND, COARSE_SILT, MEDIUM_SILT, FINE_SILT, SILT, CLAY
Canadian Soil Information System 1982	BOULDER, COBBLES, COARSE_GRAVEL, MEDIUM_GRAVEL, FINE_GRAVEL, GRAVEL, VCOARSE_SAND, COARSE_SAND, MEDIUM_SAND, FINE_SAND, VFINE_SAND, SAND, SILT, CLAY, COLLOIDS
ISSS	COBBLES, GRAVEL, COARSE_SAND, FINE_SAND, SAND, SILT, CLAY
British Sandard 5930	BOULDER, COBBLES, COARSE_GRAVEL, MEDIUM_GRAVEL, FINE_GRAVEL, GRAVEL, COARSE_SAND, MEDIUM_SAND, FINE_SAND, SAND, COARSE_SILT, MEDIUM_SILT, FINE_SILT, SILT, CLAY

10.5.2 Atterberg Limits Test Results Calculated by the Program

The following table lists the names of all of the calculated Atterberg limits variables provided by *LabSuite*.

Table 10.4: Atterberg Test Results for Summaries and Boring Logs

Item Name	Description
LL	Liquid limit
PL	Plastic limit
PI	Plasticity index
LL_OVEN	Oven-dried liquid limit
NM	Natural moisture
LI	Liquidity index

10.5.3 Soil Classification Results Calculated by the Program

The following table lists the names of all of the calculated soil classification variables provided by *LabSuite*.

Table 10.5: Calculated Soil Classification Values

Item Name	Description
USCS	ASTM D2487 (USCS) soil classification
STRATA_DESC	D2487 group name
AASHTO	AASHTO M 145 soil classification
AS1726	Australian standard 1726 soil classification
USDA	USDA soil classification
USDA_SANDFRAC	USDA calculated sand fraction
USDA_SILTFRAC	USDA calculated silt fraction
USDA_CLAYFRAC	USDA calculated clay fraction
BURMISTER	Burmister soil identification
BURMSYM	Burmister soil symbol
PCPriComp	Burmister primary component
PIBURM	Burmister overall plasticity index
THREADBURM	Burmister thread diameter
COLORBURM	Burmister soil color
SHAPEBURM	Burmister grain shape
OTHERBURM	Burmister misc. material characteristics

10.5.4 Moisture-Density Results Calculated by the Program

The following table lists the names of all of the calculated moisture-density variables provided by *LabSuite*:

Table 10.6: Calculated Moisture-Density Values

Item Name	Description
PRCURVENO	Curve number
MAXDENS	Maximum dry density (uncorrected for oversize material)
OPTMOIST	Optimum moisture content (uncorrected for oversize material)
CORRMAXDENS	Maximum dry density (corrected for oversize material)
CORROPTMOIST	Optimum moisture content (corrected for oversize material)
PRTEST_SPEC	Test specification name
PROVSPER	Percentage of material larger than the oversize sieve
OVSPG	Bulk specific gravity
OVSMOIST	Oversize material moisture content
SPECGR	Sample specific gravity

10.6 Technical Documentation

In the past each GEOSYSTEM program manual concluded with a chapter covering (in great detail) the methods used by the program to calculate each test result. This had the effect of making the manual thicker and thus more threatening looking to the casual user. To combat this perception (and to save paper), we've moved the documentation chapters to our web site.

- Grain size calculations are documented here:
<http://geosystemsoftware.com/products/gs4/downloads/gs4calculations.pdf>
- Atterberg limits calculations are documented here:
<http://geosystemsoftware.com/products/clsuite4/downloads/limits4calculations.pdf>
- Moisture-density calculations are documented here:
<http://geosystemsoftware.com/products/pr4/downloads/pr4calculations.pdf>

Index

- (Default opening sizes), 19, 51
- + 3", 16
- + 75mm, 16
- .DXF, 101, 108–110
- .EMF, 101, 108–110
- .PDF, 2, 7, 9, 101, 108–110
 - margins, 5
- .PNG, 101, 108–110
- #200, 2, 17, 85, 112
- #200 wash, 51–52
- « omit », 70
- "Standard" Liquid Limit Test, 72
- 10 percent (D10), 76
- 151H/152H, 66
- 30 percent (D30), 76
- 60 percent (D60), 76

- A4, 9
- AASHTO M 145, *see* ASTM D3282
- AASHTO material specifications, 21, 46
- AASHTO T 11, 1
- AASHTO T 180, 1–2
- AASHTO T 224, 1–2
- AASHTO T 27, 1, 15, 17, 51
- AASHTO T 272, *see* one-point compaction test
- AASHTO T 89, 1, 27
- AASHTO T 99, 1–2
- Add the group name to your soil description, 77
- Add the ID or symbol to your soil description, 80
- Additional D-Values, 17
- Adobe Acrobat, *see* .PDF
- aggregate, 15
- AS 1141.11 and 1141.12, 1
- AS 1289.3.x.1, 1, 27
- AS 1726, 1–2, 7, 24, 82, 116
- ASTM C117, 1
- ASTM C136, 1, 15, 17
- ASTM D1140, 1
- ASTM D1557, 1–2, 36
- ASTM D2487, 1–2, 7, 24, 44–45, 72, 75–77
- ASTM D3282, 1, 7, 24, 78, 116
- ASTM D422, 1, 23, 51, 66, 67
- ASTM D4318, 1, 27, 72–74
- ASTM D4718, 1–2
- ASTM D558, 1–2
- ASTM D653, 45
- ASTM D6913, 1, 23, 51, 62
- ASTM D698, 1–2, 31, 36, 84
- ASTM D7928, 1
- ASTM material specifications, 21, 46
- Atterberg, 45
- Atterberg limits, 1, 72–78
 - entering test data, 71
- Auto. Combine, 102

- AutoCAD, 101, *see* .DXF
- automatic correction, 67
- Automatically export USDA chart reports as .PDF files, 29
- Average two moisture content tests per point, 87, 88

- Balance ID, 63
- Base file name, 109
- Binary, 110
- Bindery, 9
- blows, 73
- Blows per layer, 38
- Blows scale maximum value, 25
- blows vs. moisture chart, 25, 26
- Borderline soil type, 76
- boring log, 2, 44, 112
- bottom margin, 5
- bulk specific gravity, *see* specific gravity: bulk
- Burmister, 1, 7, 45, 79–80, 115–116

- calculated diameter sizes, 2, 16, 112
- calculated values, 16
- Calculator, 70
- Calibri, *see* Substitute Calibri font for Ariel on reports
- California Test Method 216, *see* CT-216
- Cc, 2, 69–70, 112
- chart
 - particle size scale captions, 11
 - particle size scales, 11
 - previewing the compaction chart, 91–98
 - previewing the particle size chart, 69–70
 - specification envelope on, 13–14
 - type of particle size chart, 13
 - width of curves on, 13, 31
- chart report
 - 'checked by' on, 7, 44
 - 'tested by' and 'checked by' signatures on, 7
 - 'tested by' on, 7, 44
 - copying to the clipboard, 101
 - defined, 101
 - disclaimer on, 7
 - exporting to a word processor, 101
 - figure number on, 102, 103
 - fineness modulus on, 15
 - fonts on, 7
 - format of, 103, 106
 - how to print, 101, 105
 - in .PDF format, 7, 9, 108–110
 - in color, 6
 - margins on, 5
 - print settings, 108–110
 - selecting a chart scale, 104–105
 - tests on, 103
 - title of, 14–15, 26, 29–30
 - type of chart particle size chart on, 13

- Chart Report Scale, 104–105
- Chart style, 13
- Chart to include on the report, 26
- checked by, *see* chart report: 'checked by' on, 81
- Clay, 80
- clay, 45
- clipboard, 101
- coarse, 45
- cobbles, 16
- coefficient of concavity, *see* Cc
- coefficient of curvature, *see* Cc
- coefficient of uniformity, *see* Cu
- Color, 80
- color, 4, 6
- compaction curve, *see* moisture-density curve
- compaction test, *see* moisture-density
- composite correction, 67
- configuration, *see* settings
- Connect test points with lines instead of curves, 13
- container, *see* tare weight
- Container ID, 4, 41, 66
- Container weights are entered as, 4, 41, 66
- Control Panel, 5
- Copy Entire Test, 101
- Create .PDF pages in A4 page size, 9
- CT-216, 1–2, 36, 89
- Cu, 2, 69–70, 112
- Cumulative Pan Tare Weight, 55
- cumulative pan weight, 55
- cumulative weight retained, 2, 49, 55, 58
- curve
 - calculating values from, 70
 - for two point tests, 13
 - in color, 6
 - shaping, 2
 - shaping the moisture-density curve, 93–94
 - shaping the particle size curve, 69–70
 - with straight lines, 13
- Curve number, 84, 117
- Curve width, 13, 31

- D-value, 17
- D10, D20, D30, etc., *see* calculated diameter sizes
- data summary report, *see* summary report
- Data-averaging curve, 95–96
- Delete Data Row, 60
- Delete the Selection List, 48
- Delete this Test Point, 88
- Denote point of max. dens./opt. moist. on charts, 31
- density
 - entering test data for, 87
 - oversize correction, 36
 - units, 33
- Density units, 33
- diameter^{0.45}, 13, 70
- Dispersant mass (grams), 63
- Do not plot curves for tests with two points, 13
- Draw extrapolated one-point curves on chart reports, 31
- Draw one-point test match curves on chart reports, 31
- Drop 'Checked by' from reports, 7
- Drop 'Tested by' from reports, 7
- Dry mass obtained via water content, 62
- Dry sample + dispersant (grams), 62
- DXF, *see* .DXF

- Effective depth equation, 66
- EMF, *see* .EMF
- envelope, *see* specification envelope
- export, 101, 111
- Export XML File, 111
- exporting files, 9

- f.m., *see* fineness modulus
- field density, *see* Quality Control - Density
- figure number, *see* chart report: figure number on
- filter media, 39–40
- fineness modulus, 2, 15, 69–70, 112
- finer, 45
- Foam inhibitor used, 63
- Folk & Ward, 2, 17
- font, *see* Substitute Calibri font for Ariel on reports

- Grain shape, 80
- Granular, 80
- gravel, 45

- Hammer drop, 38
- Hammer wt., 38
- help, *see* technical support
- Highly organic soil, 78
- hydrometer
 - entering test data, 43, 61–63
 - readings, 65, 67, 68
 - reported percentages, 17
 - type of, 66
- Hydrometer reading at 20 C., 67
- Hydrometer test standard, 62
- hygroscopic moisture, 41, 66

- If you washed the sample over a #200 sieve..., 51–52
- Include a disclaimer, 7
- Insert at the Cursor, 80
- Insert Data Row, 60
- Insert Group Name at the Cursor, 77
- Insert ID, 80
- Insert symbol, 80
- International Slurry Surfacing Association, 21, 46
- ISSA, *see* International Slurry Surfacing Association

- kurtosis, *see* Folk & Ward

- Label sample description, 15
- Larger than 3in., 76, 78, 79
- Layer name, 110
- left margin, 5
- linear, 13
- liquid limit, 2, 24, 26–27, 72–73, 76, 78, 116

- liquidity index, [2](#), [27](#), [74](#), [116](#)
- log(size) vs. probability, [11](#), [13](#)
- LOGDRAFT, *see* boring log
- Make a selection list, [46–48](#)
- margins, [5](#)
- material description, [15](#), [44](#)
- Material larger than gravel is, [16](#)
- Max. dens. size, [70](#)
- maximum density, [117](#)
 - rounding, [33](#), [36](#)
 - units, [33](#)
- maximum density line, [70](#)
- Maximum diameter, [11](#)
- maximum dry density, [2](#)
- mean, *see* Folk & Ward
- median, *see* Folk & Ward
- medium, [45](#)
- meniscus correction, [64](#), [67](#)
- metafile, [101](#), *see* .EMF
- Minimum diameter, [11](#)
- Minimum number of specification points to plot, [13](#), [21](#)
- Minimum reported diameter size, [16](#)
- Moist sample mass (grams), [62](#)
- moisture content
 - and CT-216 tests, [36](#), [89](#)
 - averaging two per Proctor point, [87](#)
 - container weights for, [4](#), [41](#)
 - oversize, [86](#)
 - oversize correction, [36](#)
- moisture-density
 - deleting test data, [88](#)
 - entering test data, [83–89](#)
- moisture-density curve
 - one-point test curves, [31](#)
 - previewing and modifying, [91–98](#)
 - test points on, [95](#)
 - width of, [31](#)
- Mold diameter, [37](#)
- Mold height, [37](#), [87](#)
- Mold volume, [37](#), [87](#)
- Mold weight units, *see* units: for compaction test mold weights
- More... button, [45](#)
- Multi-point temperature correction, [67](#)
- natural moisture, [74](#), [116](#)
- Navigation tab placement, [4](#)
- NP, [74](#)
- Number layers, [38](#)
- NV, [73](#)
- one-point compaction test, [31](#), [84](#)
 - creating a moisture-density curve from, [97–98](#)
- opening size
 - automatically entering, [23](#), [59–61](#)
 - entering, [57](#)
 - list for sieve test, [51](#)
 - measurement of, [19](#)
- optimum moisture content, [2](#), [117](#)
 - rounding, [33](#), [36](#)
- Other, [80](#)
- Output Chart Report, [108–110](#)
- Output Data Summary Report, [108–110](#)
- Oven dry liquid limit, [76](#)
- Oven ID, [63](#)
- oven-dried, [2](#), [76](#)
- Oven-Dried Organics Check, [72](#)
- Overall plasticity index, [80](#)
- oversize correction, [1–2](#), [34](#), [36–37](#), [92](#), [117](#)
- Oversize moisture, *see* moisture content: oversize
- oversize percentage, [36](#), [85](#), [117](#)
- pan mass, [59](#)
- Particle gradation system, [45](#)
- particle size scale, *see* chart: particle size scales
- Particle statistics on summary reports, [17](#)
- Path to exported files, [9](#)
- PDF, *see* .PDF
- per-sieve weight retained, [2](#), [49](#), [58](#)
- Percent oversize, *see* oversize percentage
- Percent retained scale, [11](#)
- Percent smaller than the #200 sieve, [85](#)
- percentages
 - decimal places, [17](#)
- Percentages: Report to, [17](#)
- Place files in, [110](#)
- plastic limit, [2](#), [27](#), [74](#), [76](#), [78](#), [116](#)
- plasticity chart, [24](#)
- plasticity index, [2](#), [24](#), [26–27](#), [116](#)
- Plot Curve Only, [95](#)
- Plot specifications as, [13–14](#)
- Plot Test Points Only, [95](#)
- PNG, *see* .PNG
- Pre-sieving masses, [55](#)
- precalculated, [49](#)
- Preferred classification system, [7](#)
- Preview Forms, [103](#)
- Principal component, [80](#)
- Print fineness modulus with testing remarks, [15](#)
- Printed reports use color curves, [6](#)
- printing, [105](#)
- probability, *see* log(size) vs. probability
- Proctor, *see* moisture-density
- Prompt text color, [4](#)
- Quality Control - Density, [84](#)
- Report #200 and smaller to 1 decimal if less than 10 %, [17](#)
- Report is on..., [110](#)
- Report is scaled in..., [110](#)
- Report the uncorrected curve in addition to the corrected curve, [37](#), [92](#)
- Report the uncorrected results in addition to the corrected results, [37](#)
- report title, [14–15](#), [26](#), [29–30](#)
- Reset, [104](#)

- Reset Path to Default, 9
- retained, *see* Percent retained scale
- right margin, 5
- riprap, 39–40
- rock correction, *see* oversize correction
- Round Atterberg limits to, 27
- Round max. density to, *see* maximum density: rounding
- Round opt. moisture to, *see* optimum moisture content: rounding
- Sample Info., 43–44, 57, 71, 83
- Sample mass (grams), 62
- sand, 45
- scale captions, *see* chart: particle size scale captions
- Scale maximum, 25
- Scale minimum, 25
- Scale start, 104
- Scale step, 104
- Second symbol, 76
- Select an appropriate ending..., 109
- Select the moisture scale minimum and maximum values, 25
- selection list, 46–48
- semi-log, 13
- Separation sieve, 62
- Separation sieve % passing, 62
- settings
 - saving, 39–40
- shaping point, 69–70, 93–94
- shareable config files directory, 21, 35
- sieve, *see* opening size
- sieve nest, 23, 59–61
- Sieve Nest Lists, 60
- Sieve Opening Sizes, 19
- Sieve opening sizes, 51
- sieve test
 - entering data for, 49–51
 - entering test data, 43
 - how weighed, 49
 - split sample, 51
 - standard selection, 51
- Sieve test style, 49
- Sieve weight units, 50
- signature, *see* chart report: 'tested by' and 'checked by' signatures on
- silt, 45
- Single or composite test, 51
- Single-point temperature correction, 67
- skewness, *see* Folk & Ward
- Smaller than 0.02mm., 79
- Smaller than 1in., 79
- Smaller than 2 microns, 81
- Smaller than 3/8in., 79
- Smaller than #10, 78, 79, 81
- Smaller than #200, 76, 78, 79
- Smaller than #270, 81
- Smaller than #30, 79
- Smaller than #4, 76
- Smaller than #40, 78
- Smaller than #60, 79
- Smallest thread diameter, 80
- Soil specific gravity, 84
- sorting, *see* Folk & Ward
- spec., *see* specification envelope
- specific gravity
 - bulk, 36, 85, 117
 - compaction test sample, 84, 117
 - for hydrometer test, 62
 - ZAV curve, 84
- specification envelope
 - how to enter, 21
 - on charts, 13
 - selecting, 46
- Specification name, 35
- split sample, *see* sieve test: split sample
 - and hydrometer separation sieve, 62
- Standard/modified/other, 35
- Substitute Calibri font for Arial on reports, 7
- summary report
 - defined, 101
 - fonts on, 7
 - how to print, 101, 107
 - in .PDF format, 9
 - margins on, 5
 - particle size D-values on, 17
 - print settings, 108–110
- Superpave, 21, 46
- support, *see* technical support
- Tamper reading, 89
- Tare, 73, 88
- Tare ID, 4, 41, 73, 88
- technical support, 2
- temperature correction, 2, 67
- Test method, 36
- test specification, 2
 - editing, 34–38
 - exported variable name, 117
 - selecting for a compaction test, 84
- tested by, *see* chart report: 'tested by' on
- Thermometer ID, 63
- This specification requires a unique rounding selection, 36
- title, 14–15, 26, 29–30
- top margin, 5
- TrueType, 110
- Unified Soil Classification System, *see* ASTM D2487
- units
 - density, 33
 - for compaction test mold volumes, 87
 - for compaction test mold weights, 87
 - for CT-216 soil weights, 89
 - for sieve opening sizes, 21, 57
- Units for mold weights, *see* units: for compaction test mold weights
- Units for soil weights, *see* units: for CT-216 soil weights
- USDA, 1, 29, 81, 116

Use ASTM D4318 1-point calculation method, [73](#)

wash, *see* #200 wash

Wash sieve ID, [63](#)

Water added, [89](#)

webserver, [9](#)

Wentworth, [13](#), [45](#), [114](#)

Wet wt. of soil, [89](#)

When Tested by/Checked by is entered, [7](#)

Windows metafile, *see* .EMF

word processor, [101](#)

Wt. d + t, [73](#), [88](#)

Wt. mold, [87](#)

Wt. mold + soil, [87](#)

Wt. w + t, [73](#), [88](#)

xml files

 automatically creating, [9](#)

 creating, [111](#)

 defined, [101](#)

ZAV, *see* zero air voids

zero air voids, [84](#), [105](#)